

► Benutzerhandbuch/ User's Manual



KISS-Stor 1

User's Manual

Version 1.00

Kontron Embedded Computers GmbH

0-0096-3980

Contents

Introduction	4
Symbols used in this Manual	5
Important Instructions	6
Note on the Warranty.....	6
Exclusion of Accident Liability Obligation.....	6
Liability Limitation / Exemption from the Warranty Obligation	6
Safety Instructions	7
Electrostatic Discharge (ESD)	8
Grounding Methods.....	8
FCC Statement.....	9
Electromagnetic Compatibility.....	9
Scope of Delivery	10
Computer System Requirements.....	10
What Else You Need	11
Type Labels and Product Identification	11
Introduction to RAID Level	12
RAID 1	12
Product Description	14
Features	16
Hard Drive Hot Swapping for RAID 1 Configuration.....	16
Automatic Drive Rebuilding for RAID 1 Array.....	16
RAID Failure audible Alarm.....	16
Front View	17
Disk Activity LED-Indicators	18
Hard Disk Status / Rebuild Indicators.....	19
Rebuilding Activity / Error Message Indicators	20
Drive Carrier Lock	21
Rear View	22
SATA Interface Connector	22
Power Connectors.....	22
Cooling Fan.....	23
Serial RS232 Connector.....	23
Jumper Pins	24

Components of the KISS-Stor 1	25
Drives Cage	25
Holes for Mounting Screws	25
Rail Channel	26
Guide Ribs for Drive Carriers.....	26
Docking Connectors for the Drive Carriers	26
SATA Removable Drive Carrier	27
Serial ATA and Power Connector	28
Frame for Drive Mounting.....	28
Elongated Holes for HDD Mounting.....	28
Docking Connector of the Drive Carrier	28
Installing the KISS-Stor 1	29
KISS-Stor 1 Physical Installation Procedure	29
SATA Drive Physical Installation Procedure	31
Drives Cage Physical Assembling Procedure.....	32
KISS-Stor 1 Connection Procedure.....	33
Serial ATA Cable Connection	33
Power Source Connection	34
Serial 3-Pin Cable Connection for RAID Monitoring	34
Removing / Replacing a Drive.....	35
Swapping Drives	35
What if a Disk fails?.....	35
What when a RAID fails?	35
Starting Up.....	36
Prerequisite	36
Create a RAID 1 Array.....	36
KView Management Software.....	38
Supported Operating Systems:.....	38
Hardware Requirements	39
Prerequisite	39
Software Installation	40
Install KView	40
Configure KView	41
Menu Options	43
Examples of Error Screens displayed by KView.....	46
Installing Web Server Software (IIS)	48
Fixing your IP Address.....	51

Remote Monitor your RAID	54
Technical Data	55
Environmental Specifications.....	55
CE Directives and Standards.....	56
Technical Support	57
Returning Defective Merchandise.....	58

Introduction

Kontron Embedded Computers would like to point out that the information contained in this manual may be subject to technical alteration, particularly as a result of the constant upgrading of Kontron Embedded Computers products. The attached documentation does not entail any guarantee on the part of Kontron Embedded Computers with respect to the technical processes described in the manual or any product characteristics set out. Kontron Embedded Computers does not accept any liability for any printing errors or other inaccuracies in the manual unless it can be proven that Kontron Embedded Computers is aware of such errors or inaccuracies or that Kontron Embedded Computers is unaware of these as a result of gross negligence and Kontron Embedded Computers has failed to eliminate these errors or inaccuracies for this reason. Kontron Embedded Computers expressly informs the user that this manual only contains a general description of technical processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron Embedded Computers.

This manual is protected by copyright. All rights are reserved by Kontron Embedded Computers. Copies of all or part of this manual or translations into a different language may only be made with the prior written consent of Kontron Embedded Computers. Kontron Embedded Computers points out that the information contained in this manual is constantly being updated in line with the technical alterations and improvements made by Kontron Embedded Computers to the products and thus this manual only reflects the technical status of the products by Kontron Embedded Computers at the time of printing.




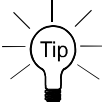
© 2006 by Kontron Embedded Computers

Printing and duplication, even of sections, is only permissible with the express approval of

Kontron Embedded Computers GmbH
Oskar-von-Miller-Str. 1

85385 Eching
Germany

Symbols used in this Manual

Symbol	Meaning
	This symbol indicates the danger of injury to the user or the risk of damage to the product if the corresponding warning notices are not observed.
	This symbol indicates that the product or parts thereof may be damaged if the corresponding warning notices are not observed.
	This symbol indicates general information about the product and the user's manual.
	This symbol precedes helpful hints and tips for daily use.

Important Instructions

This chapter contains instructions which must be observed when using the KISS-Stor 1 RAID subsystem.

The manufacturer's instructions provide useful information on your KISS-Stor 1.

Note on the Warranty

Due to their limited service life, parts which by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the guarantee beyond that provided by law. This applies to batteries, for example.

Exclusion of Accident Liability Obligation

Kontron Embedded Computers shall be exempted from the statutory accident liability obligation if the user fails to observe the safety instructions.

Liability Limitation / Exemption from the Warranty Obligation

In the event of damage to the device caused by failure to observe the hints in this manual and on the device (especially the safety instructions), Kontron Embedded Computers shall not be required to honor the warranty even during the warranty period and shall be exempted from the statutory accident liability obligation.



Safety Instructions

Please read this section carefully and observe the instructions for your own safety and correct use of the device.

This chapter also contains information on approval and interference suppression of your KISS-Stor 1.

Please observe the warnings and instructions on the device and in the manual.

The device has been built and tested by Kontron Embedded Computers in accordance with EN 60950/VDE 0805 and left the company in a perfectly safe condition.

In order to maintain this condition and ensure safe operation, the user must observe the instructions and warnings contained in this manual.

- The KISS-Stor 1 is designed to be built into a system. The integration into the system has to be done such, that the system complies with the IEC/EN 60950 safety rules.
- The device must be used in accordance with the instructions for use.
- The electrical installations in the room must correspond to the requirements of the respective regulations.
- Only devices and components which fulfill the requirements of a SELV circuit (Safety Extra Low Voltage) in accordance with EN 60950 may be connected to the interfaces of the system.
- The device is designed to be used in horizontal position.
- Repairs may only be carried out by a person authorized by Kontron Embedded Computers.
- Maintenance or repair on the open device may only be carried out by qualified personnel authorized by Kontron Embedded Computers which is aware of with the associated dangers.
- The device may only be opened for installation and removal of SATA hard disks in accordance with the instructions in this manual.
- The computer system must be switched off and disconnected from the power source before installing a SATA hard disk.
- It must be assumed that safe operation is no longer possible
 - if the device has visible damage or
 - if the device no longer functions.In these cases the device must be shut down and secured against unintentional operation.



Electrostatic Discharge (ESD)

A sudden discharge of electrostatic electricity can destroy static-sensitive devices or micro-circuitry. Therefore proper packaging and grounding techniques are necessary precautions to prevent damage. Always take the following precautions:

1. Transport boards in ESD-safe containers such as boxes or bags.
2. Keep electrostatic sensitive parts in their containers until they arrive at the ESD-safe workplace.
3. Always be properly grounded when touching a sensitive board, component, or assembly.
4. Store electrostatic-sensitive boards in protective packaging or on antistatic mats.

Grounding Methods

Guard against electrostatic damage at the device by following these steps:

1. Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace as well as properly grounded tools and equipment.
2. Use antistatic mats, heel straps, or air ionizers for more protection.
3. As for handling electrostatic sensitive components just handle it by the edge or by their casing.
4. Avoid contact with pins, leads, or circuitry.
5. Turn off power and input signals before inserting and removing connectors or connecting test equipment.
6. Keep work area free of non-conductive materials such as ordinary plastic assembly aids and styrofoam.
7. Use field service tools such as cutters, screwdrivers, and vacuum cleaners that are conductive.
8. Always place drives and boards PCB-assembly-side down on the foam.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Electromagnetic Compatibility

This product has been designed for industrial, commercial and office use, including small business use. The most recent version of the EMC guidelines (EMC Rules 89/336/EWG) and/or the German EMC laws apply. If the user modifies and/or adds to the equipment (e.g. installation of add-on cards), the prerequisites for the CE conformity declaration (safety requirements) may no longer apply.

Scope of Delivery

- KISS-Stor 1 (RAID 1)
- Disk drive mounting screws
- Two keys for drive carriers (identical)
- One serial 3-pin cable connector (RS232) with a 9-pin D-SUB connector attached to a slot mounting bracket
- CD-ROM with KISS-Stor 1 User's Manual and KSView Management Software
- 1x SATA cable (50 cm)

Computer System Requirements

In order to install the KISS-Stor 1 subsystem into a working system is required a computer system with following hardware requirements:

- with free on-board (motherboard or SBC, depending on the computer configuration) SATA port or a serial host bus adapter card
- with one free connector (4-pin) of the power supply at least
- case with two half-height 5 ¼" drive bays with frontal access

System Requirements Option for use of the KSView Management Software

The KSView Management Software is applicable for a computer system configuration:

- with a free expansion slot to implement the RS232 serial interface (the included bracket with 9-pin D-SUB serial connector of the serial 3-pin cable connector) and a free external accessible serial port configured as RS232. The KSView Management Software uses the serial port (COM) for RAID monitoring.

or

- with on-board SATA controller (the installed motherboard or SBC should be equipped with an Intel® ICH5, ICH6, ICH7 SouthBridge). The KSView Management Software uses the SATA port for RAID monitoring.

Operating System Requirements

Windows 2000, Windows 2003 or Windows XP

What Else You Need

- Two Serial ATA I or II hard disk drives

Type Labels and Product Identification

The type label with the corresponding product part number is located on the top side of the device.

Product Designation	Product Identification
KISS-Stor 1	0-0079-2o32

Introduction to RAID Level

The KISS-Stor 1 can support the RAID levels 1.

RAID 1

RAID 1 is commonly referred to as Disk Mirroring, Disk Shadowing or Disk Duplexing as all data is duplicated across both disks. RAID 1 can only be performed with two hard drives. As data is identical on both disks, storage capacity is that of the smaller disk. RAID 1 has poor performance for write operations but very high performance for read intensive operations.

The storage capacity is determined by the smaller drive in the array. That capacity is then applied to format all other drives in the array. If using a 40 GB and 60 GB drive in a RAID 1 array, your system will see one drive of 40 GB [(1 disks x 40 GB) = 40 GB].

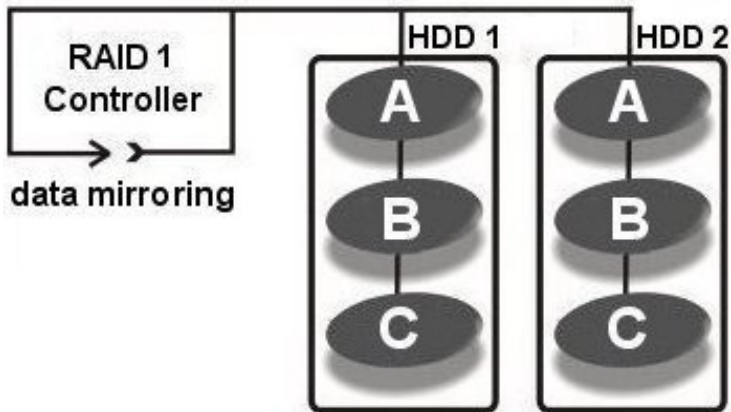


Fig. 1: Example for RAID 1 array with two hard disks

RAID 1: Mirrored disk array	
Characteristics:	Recommended use:
<ul style="list-style-type: none"><input type="checkbox"/> Better Read transaction rate than single disks, same Write transaction rate as single disks.<input type="checkbox"/> 100% redundancy of data means no rebuild of data is necessary in case of disk failure, just a copy to the replacement disk.<input type="checkbox"/> All the disks have the same data.<input type="checkbox"/> Raid level 1 requires two drives.<input type="checkbox"/> Storage capacity = Capacity of smaller disk	<ul style="list-style-type: none"><input type="checkbox"/> Accounting<input type="checkbox"/> Payroll<input type="checkbox"/> Financial<input type="checkbox"/> Any application requiring high availability

Product Description

The KISS-Stor 1 RAID (Redundant Array of Independent/Inexpensive Disks) subsystem mirrors data to the other disk drive simultaneously, and delivers optimized performance. If one drive fails, data is secured by the other drive and alarm sounds to alert you. RAID 1 configuration is ideal for data redundancy.

Featuring intelligent recovery, KISS-Stor 1 let you hot swap a failed drive and it automatically rebuilds the data to the new drive without any system down time. KISS-Stor 1 features a user-friendly design that lets you easily that lets you easily install two drives and replace a drive that fails. Each hard drive carrier supports a one-inch high 3.5 inch for factor disk drive. Additional data security is provided by a key-locking system, that prevents unauthorized access to each disk drive during operation.



Fig. : KISS-Stor 1

The KISS-Stor 1 comes with two drive carriers accessed from the front. The front of the two drive carriers are equipped with disk activity LED indicators (green, yellow and red) and a drive carrier lock.

Each side of the RAID subsystem features a rail channel and holes for the mounting screws. These allow you to secure the RAID 1 subsystem inside of a computer case.

The jumpers (***no jumper setting is needed***) and connectors are located on the rear side of the unit.

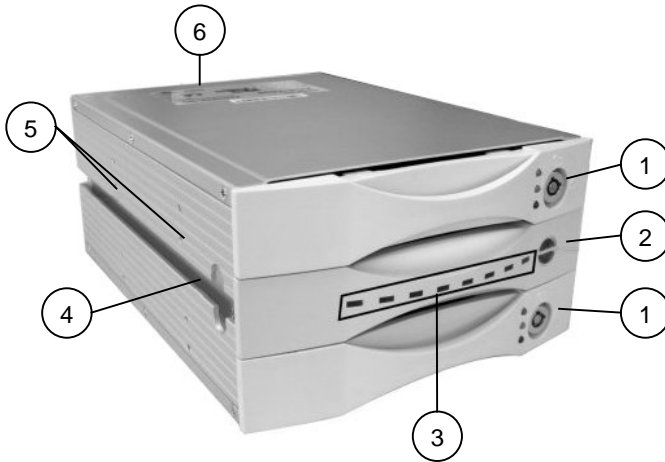


Fig. 3: KISS-Stor 1

- | | | | |
|---|--|---|---------------------------|
| 1 | Top / Bottom drive carriers | 4 | Rail channel |
| 2 | 2x Disk status / 2x Rebuilding activity indicators (it is not a drive carrier) | 5 | Holes for mounting screws |
| 3 | Rebuilding activity / Error message indicators | 6 | Rear side |

The KISS-Stor 1 is delivered with installed firmware and the ordered RAID 1 level configuration (**no jumper setting is needed!**).

Features

The KISS-Stor 1 supports the following features:

- Support two SATA I or II disk channels (but run in SATA I)
- Support one SATA I host channel
- Support RAID level 1
- No driver needed
- Drives are hot swappable (RAID 1)
- Fan cooler (Ball bearing type)
- Key locking to prevent unauthorized access to the disk drives
- Audible alarm on drive failure
- Automatic drive failure detection
- Battery backup for disk rebuild status

Hard Drive Hot Swapping for RAID 1 Configuration

Hot Swapping allows the removal and installation of hard disk drives without powering down the system.

Automatic Drive Rebuilding for RAID 1 Array

If a member drive in a RAID 1 array is replaced, the KISS-Stor 1 will automatically start to rebuild data to the new drive.

RAID Failure audible Alarm

In the event that a drive fails, the corresponding red indicators (disk activity LED and hard disk status) turn on and an alarm sounds. You can turn off the alarm by unlocking the drive carrier.

Front View

Each drive carrier can hold a one-inch high 3.5-inch form factor SATA disk drive. This makes it easy to hot swap a drive in the event of a failure, without affecting the status of the remaining drives.

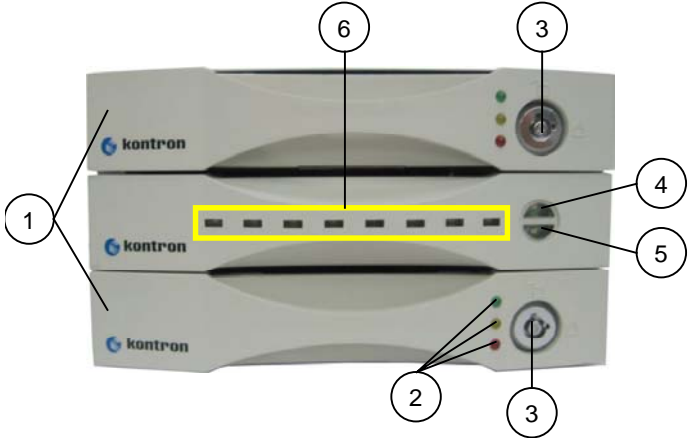


Fig. 4: KISS-Stor 1 – Front view

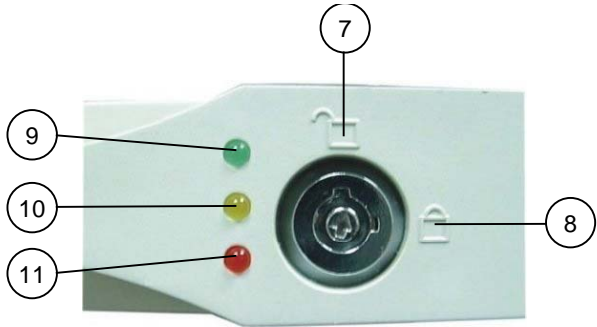


Fig. 4a: Detail: disk activity LED indicators



Fig. 4b: Detail: Rebuilding Activity / Error message-indicators (shown as "Disk Fail" message)

Legend for Fig. 4 and 4a:

- 1 2x drive carrier
- 2 Disk activity LED indicators
- 3 Drive carrier lock
- 4 Hard Disk Status / Rebuild Indicators of the top installed HD drive
- 5 Hard Disk Status / Rebuild Indicators of the bottom installed HD drive
- 6 Error messages LED Indicators
- 7 Drive carrier lock - Unlocked orientation
- 8 Drive carrier lock – Locked orientation
- 9 Green disk activity LED indicator
- 10 Amber disk activity LED indicator
- 11 Red disk activity LED indicator

Disk Activity LED-Indicators

The disk activity LED indicators show the status of each individual disk drive (refer to *fig. 4a*).

LED Indicator	Disk Activity
Green	Disk drive is properly installed and locked
Amber	Disk drive is being accessed
Red	Disk drive is not present, is not properly installed, is unlocked, or disk has failed
Red Flashing	Disk drive is rebuilding data




In the event that a drive fails, the red indicator turns on and an alarm sounds. You can turn off the alarm by unlocking the drive carrier.

Hard Disk Status / Rebuild Indicators

The upper indicator represents the top drive carrier, the lower indicator represents the bottom drive carrier (refer to *fig. 4, pos. 4* and *pos. 5* and *fig. 5*). If a drive fails, the appropriate LED indicator turns on, red and an audible alarm sounds. You can turn off the audible alarm by unlocking the drive carrier.

The red indicator of the target drive carrier will light up and blink while rebuilding (refer to “Disk Activity LED-Indicators” chapter).

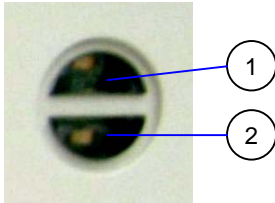

- 1 Hard Disk Status / Rebuild Indicators of the top installed HD drive
- 2 Hard Disk Status / Rebuild Indicators of the bottom installed HD drive

Fig. 5: Detail – Hard Disk Status / Rebuild Indicators

LED Indicator	Hard Disk Status / Rebuilding Indicators
Red	Disk drive is not present, is not properly installed, is unlocked, or disk has failed
Red Flashing	Disk drive is rebuilding data

Rebuilding Activity / Error Message Indicators

Rebuilding Activity

This row of eight indicators shows disks rebuilding activity. In normal operation, a green light scans across the bank of indicators. If you are using the recovery feature to rebuild a drive, all the indicators will turn on at the same time. The left-side indicator blinks and then turns off when 12.5% of the data has been mirrored. Then the next indicator blinks and turns off when 25% of the data has been mirrored, and so on.

Error Messages


The chart offers the all-possible error messages, and can help you to identify certain problems.

LED Error Status Display

Disk fail (replace the failed disk with another disk)



Target disk size is smaller than the source disk (replace the failed target disk with a disk that its size is greater or equal to the source disk.)

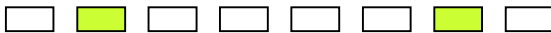

Disk has bad sector (replace the failed disk with another disk)



Fan Fail (Contact Kontron Support Department)



No battery (Contact Kontron Support Department)



Drive Carrier Lock

The drive carrier lock acts as an On/Off switch for the drives and provides security by preventing non-key holders from accessing the drives.

To lock each carrier, insert the key and turn it in a clockwise direction. To unlock a carrier, turn the key in a counterclockwise direction.



The drive carriers must be locked by the supplied key during the operation.

The keys should be kept somewhere to be not accessible to unauthorized person.

Fig. 6: Detail - Drive carrier lock



In the event that a drive fails, the red LED indicators turn on and an alarm sounds. You can turn off the alarm by unlocking the drive carrier.

Rear View

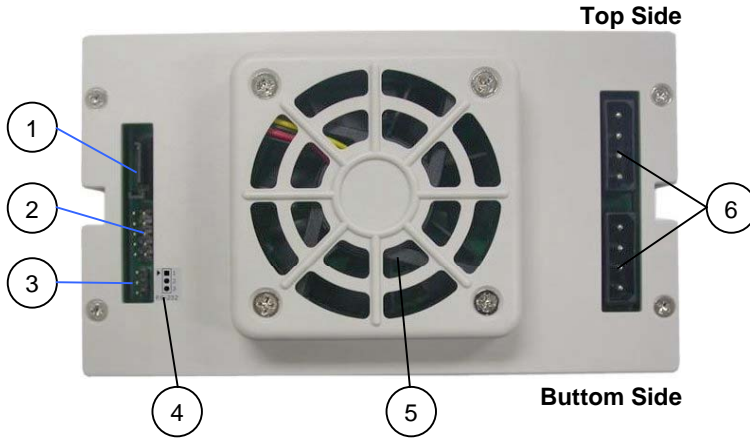


Fig. 7: KISS-Stor 1 – Rear side

- | | |
|--|--|
| 1 SATA interface connector | 4 Label with marking of the serial 3-pin connector (on PCB) (in order to connect properly the serial connecting cable) |
| 2 Jumper pins (For RAID 1 level no jumper setting is necessary!) | 5 Cooling fan openings |
| 3 Serial RS232 connector (3-pin) (terminal port) | 6 2x 4-pin power connectors |

SATA Interface Connector

This connector allows you to connect the RAID subsystem to the SATA interface of the computer via the supplied SATA cable. The SATA cable is the route used for reading and writing to the array.

Power Connectors

The power connectors allows you to connect the RAID subsystem to the power supply of the computer. In order to provide stable power, we recommend to connect both power connectors of the RAID subsystem to the power supply.

Cooling Fan

KISS-Stor 1 is equipped inside with a cooling fan. This provides air circulation for the disk drives.



To avoid overheating, KISS-Stor 1 should be installed in a well-ventilated area and in such a way that sufficient airflow is maintained across the controller chips (rear side of the unit).

Serial RS232 Connector

This connector allows you to connect the RAID subsystem via the supplied serial cable to the computer. This connection is used for remote monitoring of KISS-Stor 1 if the KView management software is installed.

The RS232 port is configured with DTE and PC compatible pin assignments.

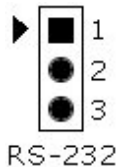


Fig. 8: Label for the proper connection of the 3-pin serial adapter cable



There is a triangular symbol “▲•” on both serial 3-pin on PCB connector and the RS232 cable connector. Please make sure you connect in the right direction (both triangle symbols match each other). Refer to the RS-232 label located on the rear side of the KISS-Stor 1. To ensure a proper remote monitoring of the KISS-Stor 1 please use only the supplied serial 3-pin RS232 cable connector.

Connecting in wrong direction will not damage RAID controller, however the terminal or KView will not work.



Please observe that the serial 9-pin D-SUB connector attached to the slot mounting bracket (of the supplied 3-pin serial RS232 cable) are not a complete serial port. Available signals: only Rx-, Tx- and GND (three wire).

Jumper Pins

Kontron delivers the KISS-Stor 1 in configured RAID 1 level



Please do not set any jumper! The setting of any jumpers could result in data loss.

Kontron assumes no responsibility for damage or loss of data by using of the KISS-Stor 1.

To prevent the loss of data stored on a RAID array, Kontron recommends to create a copy of your data either on the internal HDD if available, or on an external removable drive (CD/DVD/HDD/HDD stick).

Components of the KISS-Stor 1

Drives Cage

The KISS-Stor 1 drives cage is designed to accommodate two 3.5 inch hard disk drives (each SATA-HDD is mounted into a corresponding drive carrier).

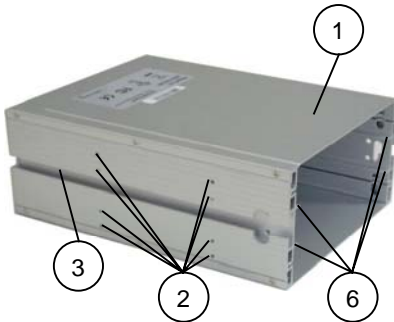


Fig. 9: KISS-Stor 1 – Drives cage without drive carriers (left side view)

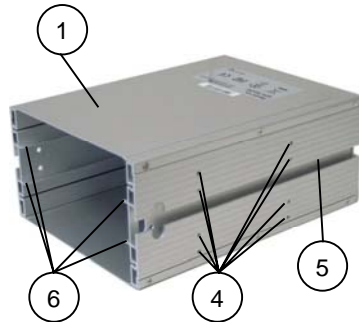


Fig. 9a: KISS-Stor 1 – Drives cage without drive carriers (right side view)

Legend for Fig. 8 and 8a:

- | | |
|--|---|
| 1 Drives cage of the KISS-Stor 1 | 4 Holes for mounting screws on the right side |
| 2 Holes for mounting screws on the left side | 5 Rail channel on the right side |
| 3 Rail channel on the left side | 6 Guide ribs for drive carriers |

Holes for Mounting Screws

The holes for mounting screws allows you to mount the KISS-Stor 1 drives cage into the drive cage of the computer system by the supplied M3 metric screws.



Use only the supplied M3 metric screws (M3x5). Four screws on each side are sufficient for mounting the KISS-Stor 1 drives cage into the drive cage of the computer system.

Rail Channel

The rail channel (one on each side) allows you to attach the KISS-Stor 1 to a main rail system.

Guide Ribs for Drive Carriers

The guide ribs separate the cavity of the KISS-Stor 1 drives cage in three bays in order to accommodate the LED Indicators module (fix-mounted) and two hard disk drive carriers (top and bottom).

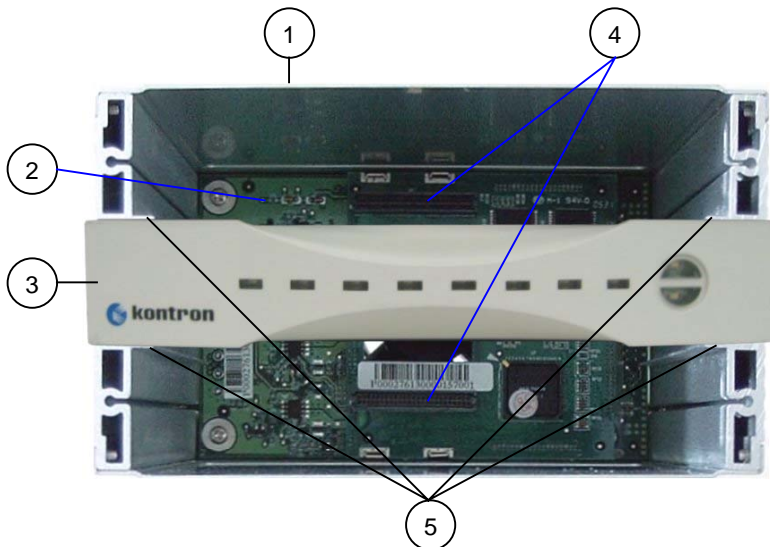


Fig. 10: Detail: Inside of the KISS-Stor 1 (without drive carriers)

- | | |
|---|--|
| 1 Drive cage of the KISS-Stor 1 | 4 2x docking connectors for the drive carriers |
| 2 PCB with the RAID1 controller | |
| 3 LED indicators module (not removable) | 5 Guide ribs for drive carriers (bay) |

Docking Connectors for the Drive Carriers

Each of these two connectors allows you to dock one drive carrier to the drives cage of the KISS-Stor 1.

SATA Removable Drive Carrier

The SATA removable drive carrier is used for internally mounting of a low-profile, 3.5-inch form factor hard disk drive into an undersized half-height, 5.25-inch peripheral bay of the KISS-Stor 1.

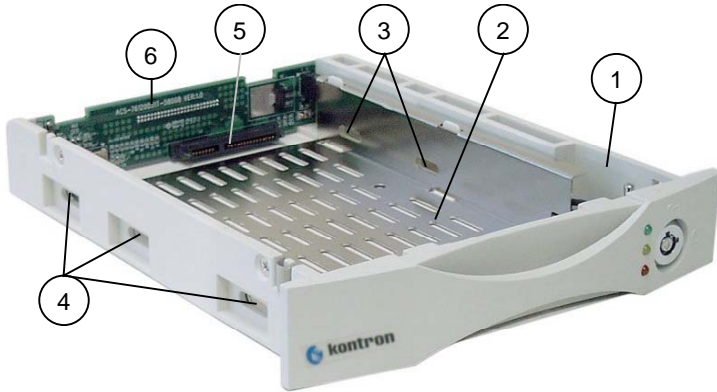


Fig. 11: SATA removable drive carrier

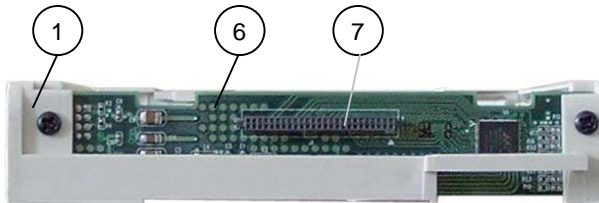


Fig. 11a: Rear side of the SATA removable drive carrier

Legend for Fig. 11 and 11a:

- | | |
|---|---|
| 1 SATA removable drive carrier | 5 Serial ATA and power connector |
| 2 Receiving frame for drive mounting | 6 PCB on the rear side of the drive carrier |
| 3 2x elongated holes on the right side for HDD mounting | 7 Docking connector of the drive carrier |
| 4 3x elongated holes on the left side for HDD mounting | |

Serial ATA and Power Connector

This connector is the SATA device connection via a SATA 7-pin signal connector with a separate SATA 15-pin power connector.

Frame for Drive Mounting

The frame provides mechanical support for the SATA HDD drive. The drive will be mounted in the frame and will be held in place with four screws.

Elongated Holes for HDD Mounting

The elongated holes allow you to secure the SATA hard disk properly into the frame of the removable drive carrier by use of the supplied inch screws. The mounting holes are laterally accessible, and correspond to the laterally provided mounting holes of the SATA HDD.



Use only the inch screws supplied. Two screws on each side are sufficient to secure the SATA hard disk into the frame of the drive carrier.

Docking Connector of the Drive Carrier

This connector allows you to dock the drive carrier to the drives cage of the KISS-Stor 1.

Installing the KISS-Stor 1

The KISS-Stor 1 is delivered with installed firmware and installed RAID1 level.

The KISS-Stor 1 can be installed inside a computer case. The hardware requirements are described in the “Computer System Requirements” chapter.



Only trained and qualified personnel should be allowed to install or replace this equipment.



Before attempting to install KISS-Stor 1, the computer must be powered-down and the power cord has to be disconnected from the power source.



Please observe, that only the supplied M3x5 screws may be used for the mounting of the KISS-Stor 1 to the drive cage of the computer.

KISS-Stor 1 Physical Installation Procedure

Please follow these steps to install the KISS-Stor 1 into the case of a computer system:

1. Turn off your system and disconnect the power cord from power source.
2. Loosen and remove the cover and faceplates from the computer case (depends on the type of computer case). Retain the screws for later use.
3. Loosen and remove the drive cage of the computer case (depends on the type of computer case). Retain the screws for later use.
4. Remove the metal expansion slot inserts, if you intend to install the supplied serial 3-pin cable connector (RS232) with a 9-pin D-SUB connector attached to a slot mounting bracket for using the KSView management software.
5. Make sure that the SATA interface cable will reach the device in its intended location.
6. Ensure that a the power cable from the power supply will reach the RAID subsystem in its intended location.
7. Unlock and remove the drive carriers from the KISS-Stor 1.

8. Slide the drives cage of the KISS-Stor 1 into the removed drive cage of the computer. Align the front of the drives cage of the RAID subsystem with the front of the drive cage of the computer.



Make sure that you don't mount the drives cage of the KISS-Stor 1 upside-down in its intended location (refer to the *fig. 7*). The KISS-Stor 1 is designed to be used in horizontal position.

9. When the drives cage of the RAID subsystem is lined-up correctly, secure it to the drive cage of the computer using four of the M3 metric supplied screws. Check the alignment before you tighten the screws.
10. Remount the drive cage into the computer case using the retained screws (refer to step 3). Check the alignment before you tighten the screws.
11. Replace the system case cover by use of the retained screws, if the internal connection procedure is performed (refer to "KISS-Stor 1 Connection Procedure").



Before replacing the case cover to your system, you should first become familiar with the unit and check that everything is connected properly. Following a proper cabling procedure will prevent a false power-on condition, which could result in unit operational failure. The KISS-Stor 1 RAID subsystem is not equipped with a power switch.

SATA Drive Physical Installation Procedure



Fig. 12: SATA HDD installation – Step 1



Fig. 12a: SATA HDD installation – Step 2



Fig. 12b: SATA HDD installation – Step 2



Fig. 12c: SATA HDD securing – Step 3

Please follow these steps to install the SATA HDD into the drive carrier:

1. Insert each of the Serial ATA (SATA) HDD into a drive carrier (refer to step 1). Make sure that you don't mount the drive upside-down or backwards.
2. Gently push the SATA-HDD into the drive carrier until the drive connects to the connector on the rear of the drive carrier (refer to step 2 and step 2a).
3. Secure the SATA HDD in place by using the screws that came with it. Do not over-tighten screws when installing the hard disk.



Please observe, that only the supplied inch screws may be used for the securing of the SATA drive to the drive carrier. Using long screws can penetrate deep inside the mechanism of the SATA drive and damage it.



Two screws on each side are sufficient to secure the SATA HDD into the drive carrier of the KISS-Stor 1.

Drives Cage Physical Assembling Procedure



Please observe that the drive carrier must be unlocked, in order to insert (completely) the drive carrier into the drives cage of the KISS-Stor 1. The key-lock is unlocked if the key is in a vertical orientation. (refer to *fig. 13*)

1. Turn the key-lock to the unlocked position.
2. Insert successively and slide each of the drive carrier into a corresponding bay of the drives cage (refer to *fig. 10, pos.5*).
3. Gently push the drive carrier until it connects to corresponding receptacles on the rear of the drives cage of the KISS-Stor 1 (refer to *fig. 10, pos. 4*).
4. Insert successively the key into each of the drive carrier lock, turn the key one quarter turn to the RIGHT, and make sure that the mechanical lock is ensured.



Fig. 13: Drives cage assembling

KISS-Stor 1 Connection Procedure



Before attempting to connect the KISS-Stor 1, the computer must be powered-down and the power cord has to be disconnected from the power source.

Serial ATA Cable Connection

Follow these steps to connect the SATA cable and the optional 3-pin serial cable connector:

1. Turn off the and disconnect the power cord from power source.
2. Insert the SATA cable (not included) to the SATA port of the motherboard/Single Board Computer (SBC) of the computer (depending on the computer configuration).
3. Connect the other end of the SATA cable to the SATA port of the KISS-Stor 1 RAID subsystem (refer to *fig. 14, pos. 2*).

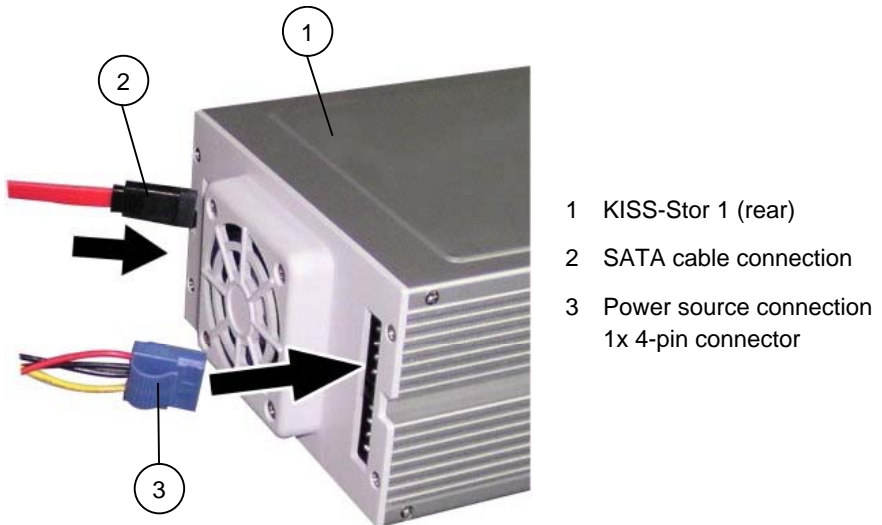


Fig. 14: KISS-Stor 1 – Connections between KISS-Stor 1 and computer system



The KISS-Stor 1 RAID monitoring can be performed via the SATA port, if the RAID subsystem is installed into a computer with on-board Intel® SATA controller (ICH5-ICH7).

Power Source Connection

Follow these steps to connect the power source:

1. Connect the power source connector/s to the corresponding connector/s located on the rear side of the RAID subsystem (refer to *fig. 14, pos. 3*).



In order to provide stable power, we recommend to connect both power connectors to the KISS-Stor 1 RAID subsystem.

Serial 3-Pin Cable Connection for RAID Monitoring

Kontron delivers a serial 3-pin cable connector, in order to use the tools of the KView management software for RAID monitoring (refer to the chapter “System Requirements Option for use of the KView Management Software”). The tools and features of this software allow you to access RAID monitoring data in an easy, intuitive manner.

Follow these steps to connect the serial 3-pin cable connector:

1. Mount the bracket with the 9-pin D-SUB connector to the free slot of the computer (refer to the step 4 described in the “KISS-Stor 1 Physical Installation Procedure” chapter).
2. Connect the 3-pin connector of this cable to the 3-pin serial port of the KISS-Stor 1 (please observe the hints described in the “Rear View”, “Serial RS232 Connector” chapter).
3. Connect the serial port of RAID subsystem (refer to step 1) with the external serial port (RS232) of the computer via the supplied serial adapter cable (9-pin D-SUB, female on both ends).

Removing / Replacing a Drive

Swapping Drives

The hot swap function is available on the RAID 1 array and can be operated during run time. RAID 1 rebuilding will be processed automatically in the background and the KISS-Stor 1 RAID subsystem will record its progress. If the system is shut down or powered off abnormally, the KISS-Stor 1 RAID subsystem will continue the disk rebuilding process after power is turned on again.



A hard disk should not be replaced when the system is turned off. Doing so may leads to loss of data.

What if a Disk fails?

If a disk drive fails, or a key switch is turned off, the red Disk Activity LED Indicator of corresponding disk carrier and the corresponding Disk Status / Rebuild Indicator will light up (red) and the an alarm will sound (sound when only disk fails). When this happens, you can replace the failed SATA disk with a new one, then turn the key switch on.



When replacing a disk drive, the new disk drive must have the same capacity or larger, than the disk drive which is being replaced.

What when a RAID fails?


A RAID failure occurs if two disk drives fails in a RAID 1 array.

If two disk drives fails in a RAID 1 array, all data on the array is lost and cannot be recovered. RAID failure results in all data on the array being lost. Please create a new RAID, or call your technical support.

Starting Up

The KISS-Stor 1 is delivered with installed firmware and installed RAID level 1. The KISS-Stor 1 is designed to be installed into a computer system.

The mirroring starts automatically once the computer with installed KISS-Stor 1, is powered-up. The system will detect the presence of KISS-Stor 1 RAID subsystem. The first step performed by the KISS-Stor 1 is to check the status of the installed SATA hard drives.

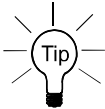

When you lock the drives, the first drive to get locked is designated as the source drive and the other drive becomes the target drive.

Please observe the next subsections.

Prerequisite

The KISS-Stor 1 Raid subsystem must be installed in a workable computer as described in the “Installing the KISS-Stor 1” chapter.

Two SATA hard disks (not included) must be installed into the KISS-Stor 1 corresponding to the description in the “SATA Drive Physical Installation Procedure” and “Drives Cage Physical Assembling Procedure” chapter.

Create a RAID 1 Array

Follow these steps in order create a RAID 1 array (depending on the installed hard disks into your KISS-Stor 1) on your system:

Create the Array with two new Disk Drives (Identical or non-Identical)

1. ***Lock both drive carriers before attaching the system to a power source.***
2. Attach the computer to a corresponding power source.
3. Power-up the system.



If the installed drives have different capacity, the controller will identify the smaller disk as source automatically.


4. The system is ready for use.

Create the Array with one Drive with Data (as Source) and one new Drive (Target)



The new disk drive (target) must have the same capacity or larger, than the drive with data (source).

1. Lock the drive with data (source) and leave the new drive (target) unlocked. This identifies the drive with data as the source drive.

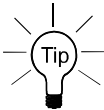

When you lock the drives, the first drive to get locked is designated as the source drive and the other drive becomes the target drive.

2. Attach the computer to a corresponding power source.
3. Power-up the system.
4. Lock the new drive (target). This identifies the new drive as the target drive.
5. The system will immediately begin mirroring the data from the source drive to the target drive (will duplicate the data onto the new drive). ***Any old data on the target drive will be lost, and is overwritten with the mirror image of the source drive.***



If system power is turned off midway through the mirroring process, the process will continue from the point of interruption when power returns.

KSView Management Software

KSView management software is designed to be used in conjunction with KISS-Stor 1 or KISS-Stor 0/5. KSView can be used to monitor a single host with up to four connected RAID subsystems. This software supports in-band (SATA) and out-band (RS-232) connection.

The graphical user interface (GUI) allows easy monitoring of the RAID subsystem status in an intuitive graphical format.

KSView can be accessed from any web-enabled terminal (remote monitoring).

E-mail and popup window event notification keeps the administrator informed of the status of the RAID controller (event notification).

Supported Operating Systems:

- Windows 98
- Windows 2000
- Windows XP
- Windows 2003

Hardware Requirements

- Computer with installed KISS-Stor 1 or 0/5 RAID subsystem
- 3-pin RS232 cable for out-band connection to host computer (optional)
- Monitor with display resolution of 800 x 600 (recommended)

Prerequisite

Before installing the KSView management software for KISS-Stor 1 RAID subsystem, you must:

- install the KISS-Stor 1 to a computer (refer to “Installing the KISS-Stor 1” chapter),
- create the array (refer to “Create a RAID 1 Array” chapter),
- have an installed operating system on your computer,
- to install Java Runtime Environment (JRE Version 1.5.0_03, jre-1_5_0_03-windows-i586-p.exe or later). This Java application is free.



The computer with integrated KISS-Stor 1 or 0/5 RAID subsystem can be installed as a standalone system or in a network environment.

The tools „E-mail alert“ and „Remote Monitoring“ of the KSView management software can be used only if the computer with the installed KISS-Stor 1 or 0/5 (target) is installed in a network connection with an other computer (host).


The Java Runtime Environment (JRE Version 1.5.0_03, jre-1_5_0_03-windows-i586-p.exe or later) has to be installed on both computers (target and host).

Software Installation

Install KSVIEW

Follow the steps below to install the KSVIEW Server:


1. Insert the KSVIEW User Kit CD into your computer's CD-ROM. The software install utility will auto appear.
2. Click the button to install KSVIEW Single Host version. The **Welcome** screen will appear.
3. Click **Next** to continue with the setup.
4. Read the license agreement carefully. Select Agree if you accept the terms of the agreement to continue the setup.
5. The setup program will install KSVIEW to the default location as C:\Program Files\Kontron\KS Utility\KSVIEW\HTML. To install to a different location, either type in the new path or click Change and select a new location.
6. Once you have confirmed the setup location, click Next to continue.
7. The setup utility will add shortcut icons to the default folder as "KS Utility\KSVIEW RAID Single-Host". If you do not want to use the default folder, you can either type a new name, or select an existing folder from the list.
8. Once you have confirmed the shortcut icon location, click Next to continue. Installation will commence.
9. Click Finish to complete the setup.

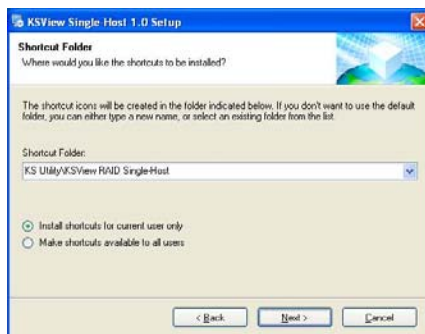

10. Two shortcut icons will be created on desktop after software installation.

“KSView Server” is to launch KSView software program.


“KSView Monitor” is to open KSView monitor window.

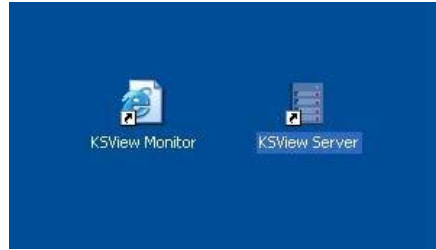

Configure KSView

Follow the steps below to install the KSView Server:

1. To launch KSView Server, go to Start > Programs > KS Utility > KSView RAID Single-Host > KSView Server.
2. The Detect Option dialog box will appear prompting you to scan the KISS-Stor 1 or 0/5 RAID subsystem. KSView supports in-band (SATA) and out-band (COM) connection.

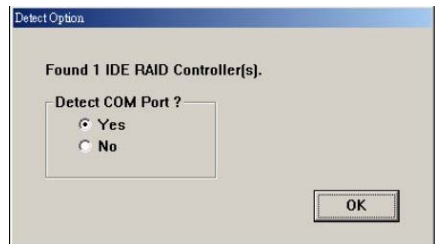


Select “No” for **not detect** COM port device if you want to use in-band (SATA) connection.



KSView Server can obtain RAID subsystem (KISS-Stor 1 or KISS-Stor 0/5) information through the SATA disk connection or through the RS232 (COM port) connection. The system always checks first for the SATA connection, then the RS232 connection. If both connections are present, SATA is used.

3. RAID detection will commence to obtain information from the RAID subsystem via SATA or RS232. The pop-up Detect Process window shows the progress of the system’s detection of the RAID subsystem.

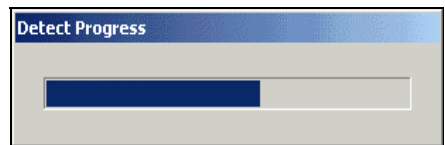

- Once the scan is finished, a RAID Information dialog box appears.

This identifies the properties of the RAID subsystem detected and its current status.

RAID subsystem information includes:

Serial Number: the serial number of the installed RAID subsystem.


Product ID: the product ID of the installed RAID subsystem.

Type: the port that KSVIEW software uses to communicate with the RAID subsystem, e.g. SATA, COM.


Port ID: specifying the port detected, e.g. COM1 or COM2.

Baud Rate: the number of times per second a signal in a communications channel changes, or makes a transition between states (for COM port only).

After confirming the information, click **OK** to exit.

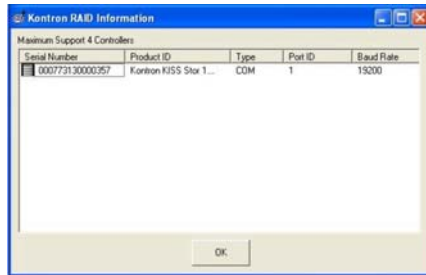

- The KSVIEW icon appears on the Task Bar at the bottom right of the desktop. You can double click left bottom for main window or single click right bottom for option menu.

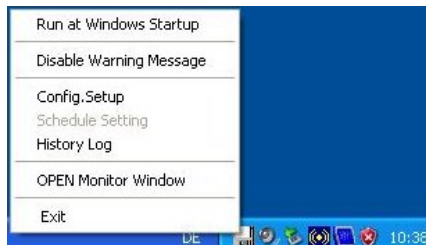

Menu Options

Run at Windows Startup

Allows KSVIEW to execute automatically when Windows startup. (Default is unexecuted).

Disable Warning Message

Allows KSVIEW Server to pop up warning message window when event occur (Default is Enabled).

Config Setup

Configure mail alert setting. The mail alert settings should be configured so that, in the event of a RAID failure, the RAID administrator will be notified at once. The mail alert settings allow this to be done via email, so the administrator can passively monitor RAID status from anywhere, without having to keep monitoring KSVIEW.

To configure the mail alert settings:

1. Click Config Setup. The System Configuration Setup dialog box will open.

2. Enter the following values:

- Mail Server:** Enter the IP address of the mail server in your network or its FQDN (e.g. kontron.com). If no Mail Server information is added, the mail alert function will be disabled.
- IP Address:** Enter the IP address of the mail server in your network or its FQDN (Entries in the top two fields should be identical)

**Administrator's
Emails:**

Enter email addresses for two administrators.

Delay Time (Minute): If a RAID failure occurs, an alert email will be sent immediately to each of the email addresses entered in the above field. Alert emails will continue to be sent until the problem is resolved. The Email will notify events which are fan fail, disk status (off line, fails, rebuilding) and RAID fails.

Enter here the desired time lapse between successive emails (minimum = 1 minute)


3. Click Save to save the new configuration.

History Log

View the history log. All malfunctions and events triggering an alert email are recorded in the history log. Select the **History Log** menu can view the log of error message.

Open Monitor Window

Monitor your KISS-Stor 1 RAID subsystem with KSVIEW. Click this option to open the monitor window on local computer. The KSVIEW browser window displays the following information:

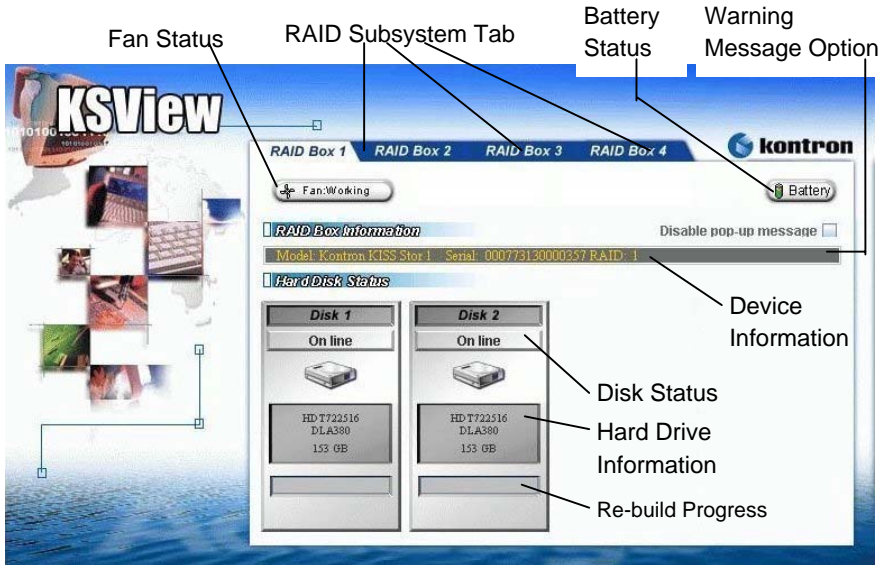


Fan Status:	Provides alert in case of fan malfunction.
Raid Subsystem Tab:	Allow you to select which RAID Subsystem to monitor.
Battery Status:	Provides alert in case of battery malfunction.
Warning Message Option:	Enable / Disable pop-up message. KSVIEW browser will pop-up message window when event occurs, if this option is enabled. (Default is enabled.)
Device Information:	Lists model name, serial number and RAID level of the monitored RAID subsystem.
Disk Status:	Allows you to monitor the status of each of the disk drives.
Hard Drive Information:	Lists model name and capacity of each of the disk drives.
Re-build Progress	Tracks the rebuilding process.
Message Window	Provides disk number, date, time, error message when the event is occurred.


Examples of Error Screens displayed by KSVIEW



The error screen "Can't connect to KSVIEW server" appears whenever the KSVIEW server is closed or an error of the KSVIEW server program is occurred. Please restart the KSVIEW server, from the "KSVIEW" icon on the desktop.

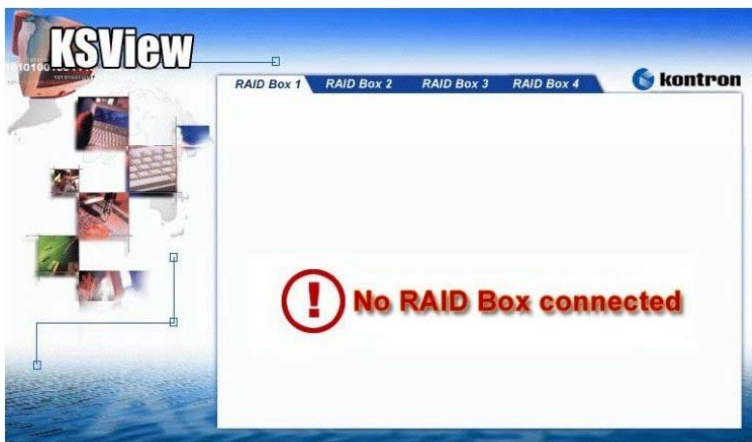

The error screen "No RAID Box connected" appears if the corresponding RAID subsystem (the KSVIEW software supports up to four RAID subsystems) are not installed (connected) into the computer.

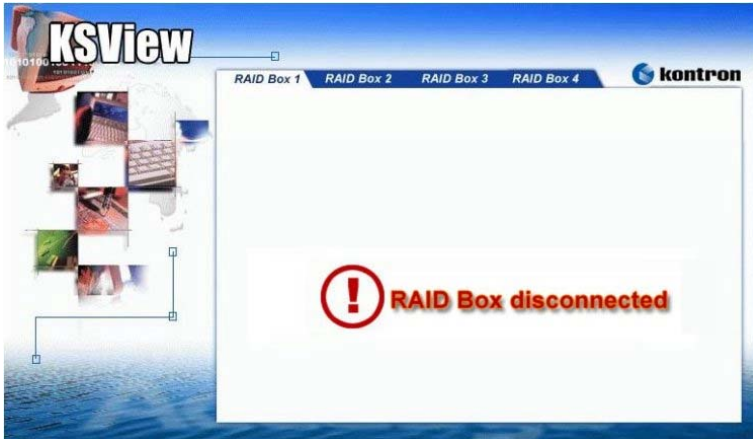

The error screen “RAID Box disconnected” appears (at unpredictable times) if the COM connection is interrupted.

Other Messages

If the warning message option is enabled following messages can be displayed in a pop-message window:


Event Message	Description	Action for solve
Fan is abnormal!	FAN Abnormal	Contact: support@kontron.com
Battery is abnormal	Battery Abnormal	Contact: support@kontron.com
Disk <No> failed!	Disk Fail	Replace the failed disk.
Disk <No> is rebuilding!	Disk Rebuild Start	Just notice that the disk is start to rebuilding.
Disk <No> rebuild OK!	Disk Rebuild Completed	Just notice that the disk is rebuild done.



Installing Web Server Software (IIS)

The example installation instructions given below are for Microsoft's Internet Information Service software on Windows 2000.

1. Insert your Windows 2000 CD in its drive.
2. Open the **Start** Menu.
3. Select **Control Panel**.

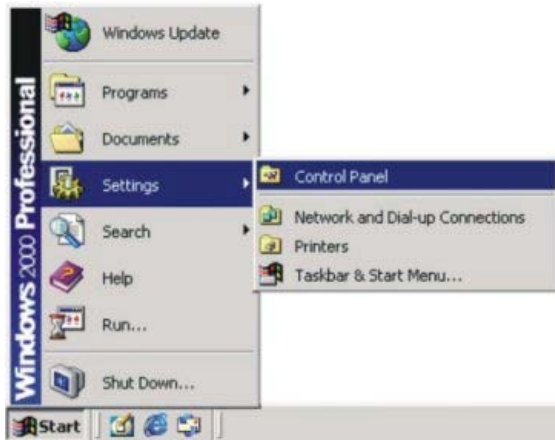

4. Select **Add/Remove Programs**.
5. Select **Add/Remove Windows Component**.




6. Select the **Internet Information Services (IIS)** component.

7. Click **Next**.


The component configuration process will start.



8. When prompted by the **Files Needed** dialog box, enter the location **x:/I386** (where **x** is the letter of your CD-ROM drive).

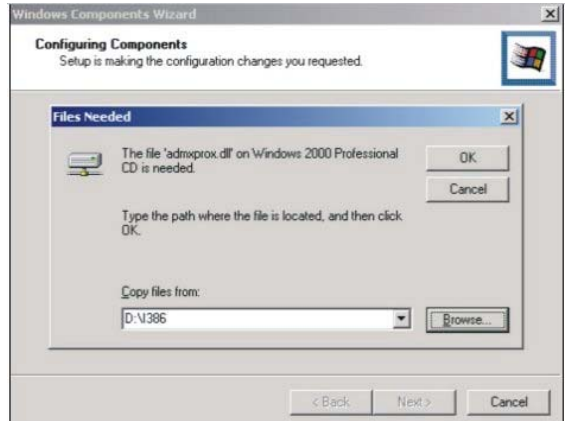

9. The required files will be copied from the CD-ROM.

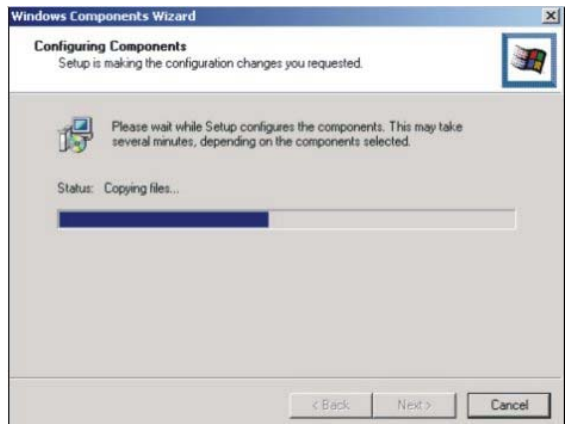

10. Click Finish to complete the installation.





Fixing your IP Address

Once you have installed **Internet Information Services**, you should obtain and fix an IP address to your TCP/IP Properties.



To open the Internet Protocol (TCP/IP) Properties dialog box:

1. Right click on the **My Network Places** icon on the desktop and select **Properties**.
2. The **Local Area Connection** dialog box will appear (The **Local Area Connection** dialog box may also be opened by entering Control Panel, then **Network and Dial-up Connections**, right-clicking on the **Local Area Connection** icon and selecting **Properties**).
3. Highlight **Internet Protocol (TCP/IP)** and click **Properties**.
4. The Internet Protocol (TCP/IP) Properties dialog box will appear. Enter the IP address for this terminal and click OK.
5. To determine this terminal's IP address, open the Start menu, Accessories and then open Command Prompt. Type ip -config. The IP address, subnet mask and default gateway values will be listed.

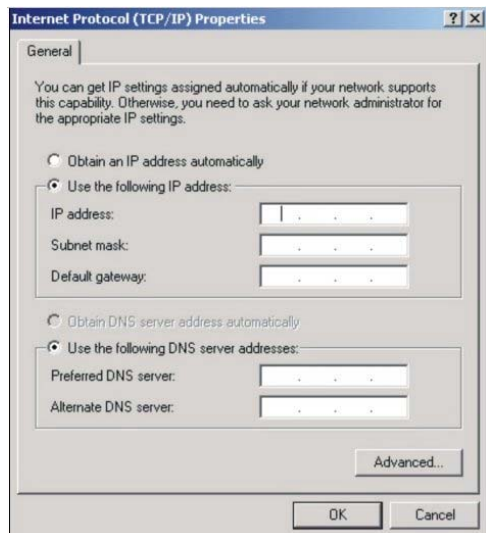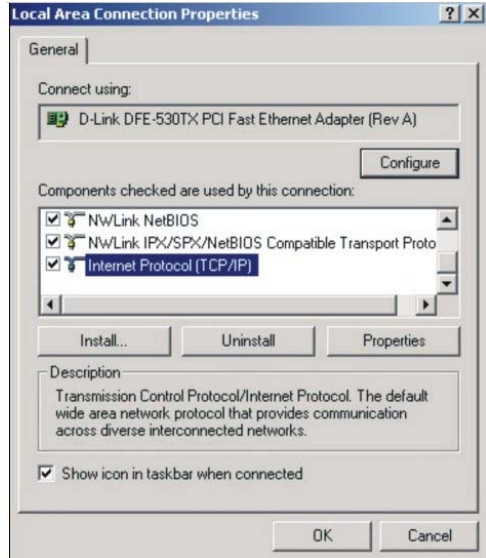


The example instructions given below are for Microsoft's Internet Information Service software on Windows 2000. For other web server software, refer to the technical support information provided by your supplier.


1. Click the **Start** button, and then select **Settings**, and **Control Panel**.
2. In the Control Panel, double click on **Administrative Tools**, and then open **Internet Services Manager**.
3. Click on **Internet Information Service** in the left-hand window to open up the tree. The name of the computer you are using will appear. Double click on the name.
4. Select **Default Web Site**, right click on it and select **Properties**. The **Default Web Site Properties** dialog box will appear.
5. Select the **Home Directory** tab.
6. Enter **C:\Program KontronKS Utility\KSVIEW\html** in the **Local Path** field (if you installed KSVIEW at a different location in Installing KSVIEW above, enter that location).

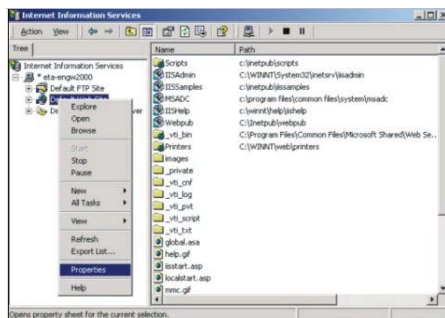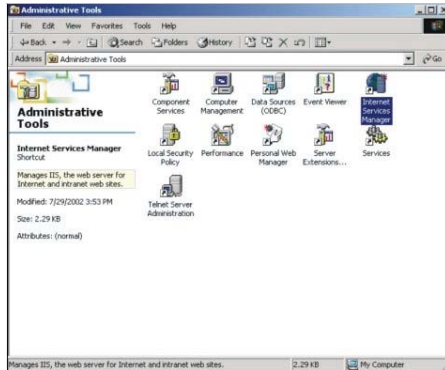

7. Select the **Document** tab.
8. Click **Add...** and in the **Default Document Name** field, type `index.htm`.

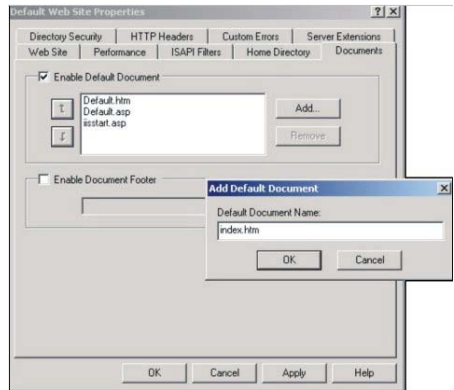

9. If there are other default documents in the list on the **Documents** tab, highlight **index.htm** and use the arrows to move it to the top of the list. Alternatively, remove all other entries.
10. Click **OK** to complete the setting of KSSView as the default website

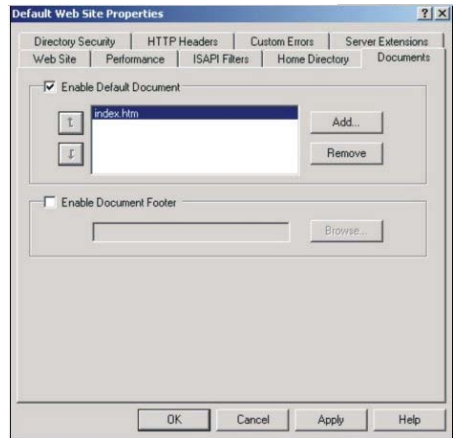

Remote Monitor your RAID

The KView browser allows you to remotely monitor the status of your KISS-Stor 1 or 0/5 RAID subsystem in real time.



The tools „E-mail alert“ and „Remote Monitoring“ of the KView management software can be used only if the computer with the installed KISS-Stor 1 or 0/5 (target) is installed in a network connection with an other computer (host).

The Java Runtime Environment (JRE Version 1.5.0_03, jre-1_5_0_03-windows-i586-p.exe or later) has to be installed on both computers (target and host).

Technical Data

KISS-Stor 1	Specifications
Host Interface	one SATA-I
Disk Interface	SATA-I (Support SATA-II but run in SATA-I)
RAID Levels Supported	RAID level 1
Removable Drive Carrier	2x SATA removable drive carrier
LED Indicators	2x disk activity LED indicators (red, yellow, green) 2x hard disk status / rebuilding indicators (red) rebuilding indicators / error message indicators (row of eight indicators)
Operating Element	Key to switch on/off the hard disks
Beeper Alarm	Yes, built-in buzzer on board
FAN	Rated speed: 4700RPM+/- 400RPM Noise level: 35dB(A)
Hot Swap	Yes (Rebuilding for RAID 1 is transparent & automatic)
Dimensions	W5.75 x D8.84 x H3.35 (inch) W146 x D224.536 x H 85 (mm)
Weight	Approx. 1.8 kg (3.96 lbs.)

Environmental Specifications

Ventilation	cooling fan
Operating Temperature / relative Humidity	0 ... +50°C / 5 - 95 %, non-condensing (32 ... 122 °F / 5 - 95%, non-condensing)
Operating Altitude	3,048 m (10,000 ft)

CE Directives and Standards

CE Directives	
Low Voltage Directive (Electrical Safety)	73/23/ECC
EMC Directive	89/336/ECC
CE Marking	93/68/ECC

Electrical Safety	Standards
EUROPE	meet to EN 60950-1: 2001
U.S.A.	UL Marking

EMC	Standards
EUROPE	EN 55022 : 1998/ A1:2000/ A2: 2003 (Class B) EN 61000-3-2 : 2000 EN 61000-3-3 : 1995/A1:2001 EN 55024:1998/A1:2001/A2:2003 IEC 61000-4-2 : 1995/A1:1998/ A2:2000 IEC 61000-4-3 : 2002/A1:2002 IEC 61000-4-4 : 2004 IEC 61000-4-5 : 1995/A1:2000 IEC 61000-4-6 : 2003/A1:2004 IEC 61000-4-8 : 1993/A1:2000 IEC 61000-4-11 : 2004
U.S.A.	FCC 47 CFR Part 15, Class B

Technical Support

For technical support, please contact our Technical Support department.

German headquarter Hotline:

Tel: +49 (0)9461 950-104

Fax: +49 (0)9461 950-200

E-mail: support@kontron.com

Make sure you have the following information on hand when you call:

- the unit part id number (P/No #),
- and the serial number (S/No #) of the unit (provide the serial number found on the type label, placed on the right side of the system).

Be ready to explain the nature of your problem to the service technician.

If you have questions about Kontron Embedded Computers or our products and services, you may reach us at the aforementioned numbers, or at :

www.kontron.com or by writing to:

Kontron Embedded Computers GmbH

Oskar-von-Miller-Str. 1

85386 Eching near Munich

Germany

Returning Defective Merchandise

Before returning any merchandise, please:

1. Contact our Service and request an RMA number (Return Material Authorization) by :
Fax: (+49) 8165-77 412
E-mail: service@kontron.com
2. Make sure that you receive an RMA number from Kontron Embedded Computers-Service before returning any merchandise. Clearly write or mark this number on the outside of the package you are returning.
3. Describe the device failure behavior.
4. When returning goods, include the name and telephone number of a person whom we can contact for further explanations if necessary. Where applicable, always include all duty papers and invoice(s) associated with the item(s) in question.
5. When returning a unit.
 - Ensure that the unit is properly packed in the original box.
 - Include a copy of the RMA form.