

» EZ3-VX304x-00-L «




Quick Start

SD.DT.G12-0e - November 2012

>> Ordering Information

System type EZ3-VX304x-00-L

- ► EZ3-VX3042-00-L 3U VPX Intel® Core™ i7 Dual Core Computer. Linux software version.
- ► EZ3-VX3044-00-L 3U VPX Intel® Core™ i7 Quad Core Computer. Linux software version.

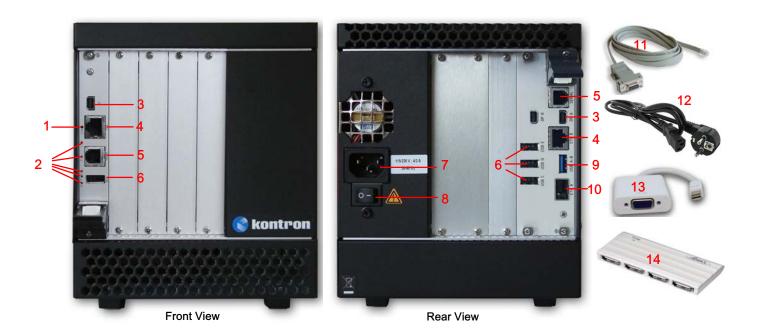

- 1. Reset Button
- 2. Status LEDs L1, L2, L3, L4, L5
- 3. Mini DisplayPort
- 4. Gigabit Ethernet ETH
- 5. Serial Connector COM1

EZ3-VX304x-00-L is ready to use: its factory settings can get you to a shell prompt under Linux OS or VxWorks in a few seconds.

See the EZ3-VX304x Getting Started Documentation (SD.DT.G09) for a detailled system description.

Embedded Software Information - Operating System

 Linux Fedora 16 64-bit (Kernel-2.6.35.6)

>> Plug

To connect the EZ3-VX304x-00-L 3U VPX Intel or x86 Computer, you need to connect the following cables:

- the power supply cable (12) in the power supply connector (7)
- the serial cable KIT-RJ12DB9 (11) in the serial connector (5)
- Mini DisplayPort: a display can be attached to the port (3) for graphics console interface
- USB: for mouse and keyboard use this port (6). A USB hub is provided (14).

>> Play - Start the system

The ON/OFF button (8) is located on the rear panel of the EZ3-VX304x-00-L system.

 Power on the main power supply module, AC Switch on the rear side of the system.

- 6. USB 2.0
- 7. Power Supply Connector
- 8. AC Switch
- 9. USB 3.0
- 10. 10 Gigabit Ethernet Connector

>> Play – Evaluate the system

Pre-Installed Benchmark:

Lmbench is a suite of benchmark interesting especially for memory bandwith and latency. To launch the benchmark, the path is /usr/share/vx304x benchmark

PBIT(Power on Built In Test):

Tests a computer platform prior to launch the main software. Can be launched from the BIOS and quickly evaluated using its interactive mode. PBIT is optional for each SBC and is always part of Easy Evaluation Systems.

Linux System Parameters

 Root account 	login: root password: kontron
 Guest account 	login: guest password: guest

Networking

EZ3-VX304x-00-L has several Ethernet ports configured, named $em1,\ p16p2$ and <code>vxeth0.</code>

All of them are configured with a private static IP which depends on the board geoid.

em1 (4) (gigabit Ethernet / hardware name: ETH on front panel) is configured on the 192.168.0 network.

vxeth0 (VxFabric TCP/IP on PCIe) is configured on the 192.168.10 network. As the board is alone on the backplane, this port is useless (EZ3-VX3044-A0-L use case only).

- 11. KIT_RJ12DB9
- 12. Power Supply Cable
- 13. DP-VGA Adapter
- 14. USB Hub

System Storage

System is installed on the soldered 32 GB SATA flash. Storage is organised with a small /boot partition and large /and/home partitions spanning the rest of the disk.

▶ Serial Line / Console Output

EZ3-VX304x-00-L front panel serial line is managed by Linux and a login prompt is offered on it .

Characteristics of the serial line: Baudrate: 115200 - Parity:None -Data Bits: 8 - Stop Bit: 1 Flow Control: None

>> Display

Graphical display is provided through the DiplayPort connector. However boot loading is only displayed through ttys0 console.

>> Play - Stop the system

- Shutdown the Operating System.
- Power off the main power supply module (AC Switch on the rear side of the system) (8).