

mITX-BDW-U – User Guide

Rev. 1.2

Doc. ID: 1060-4825 / KTD-N0XXX-A

 MITX-BDW-U – USER GUIDE

Disclaimer

Kontron would like to point out that the information contained in this manual may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the manual or any product characteristics set out in the manual. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this manual only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This manual is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this manual is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this manual only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

© 2016 by Kontron AG

Lise-Meitner-Str. 3-5

86156 Augsburg

Germany

www.kontron.com

REVISION HISTORY

Revision	Brief Description of Changes	Date of Issue
0.0	Preliminary version	2015-Feb-20
0.1	Remove fan assemble drawing	2015-04-21
1.1	Removed mSATA Updated to user guide to the new corporate identity Replaced Kontron Technology with Kontron	2016-06-15
1.2	Updated memory modules	2016-06-17

Customer Service

Visit our website at www.kontron.com.

Customer Comments

If you have any difficulties using this guide, discover an error, or just want to provide some feedback, please send a message to Kontron. Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website. Thank you

LIFE SUPPORT POLICY

KONTRON PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT EXPRESS WRITTEN APPROVAL OF THE GENERAL MANAGER OF KONTRON.

As used herein:

Life support devices or systems are devices or systems that (a) are intended for surgical implant into body or (b) support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labelling can be reasonably expected to result in significant injury to the user.

A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.

WARRANTY

Kontron warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period Kontron will, at its sole option, repair or replace the product with a similar product.

Replacement Product or parts may include remanufactured or refurbished parts or components.

The warranty does not cover:

1. Damage, deterioration or malfunction resulting from:

- ▶ Accident, misuse, neglect, fire, water, lightning or other acts of nature, unauthorized product modification or failure to follow instructions supplied with the product.
- ▶ Repair or attempted repair by anyone not authorized by Kontron.
- ▶ Causes external to the product, such as electric power fluctuations or failure.
- ▶ Normal wear and tear.
- ▶ Any other causes that does not relate to a product defect.

2. Removal, installation and set-up service charges.

EXCLUSION OF DAMAGES:

KONTRON'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. KONTRON SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Kontron Technical Support and Services

Answers to questions about installing or using your Kontron product can be found in this user guide.

To obtain support, please contact your local distributor or Field Application Engineer (FAE).

Before Contacting Support: Please be prepared to provide as much information as possible:

- ▶ CPU board
 - ▶ Type
 - ▶ Part number (Find PN on label).
 - ▶ Serial number (If available, find SN on label).
- ▶ Configuration
 - ▶ DRAM type and size.
 - ▶ BIOS revision (Find the version information in the BIOS setup).
 - ▶ BIOS settings (If different to *Default Settings* refer to the BIOS Setup section).
- ▶ System
 - ▶ O/S make and version.
 - ▶ Driver version numbers (graphics, network, and audio).
 - ▶ Attached hardware: harddisks, CD-Rom, LCD panels etc.

If the Kontron product seems to be defect and you want to return it for repair, please follow the guide lines mentioned at the following link:

<http://www.kontron.com/support-and-services/support/rma-information>

Symbols

The following symbols may be used in this manual.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

NOTICE indicates a property damage message.



Electric Shock!

This symbol and title warn of hazards due to electrical shocks (> 60 V) when touching products or parts of them. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material. Please refer also to the "High-Voltage Safety Instructions" portion below in this section.



ESD Sensitive Device!

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



HOT Surface!

Do NOT touch! Allow to cool before servicing.



This symbol indicates general information about the product and the user manual.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

Table of contents

Table of contents	7
1/ Introduction.....	8
2/ Installation Procedure	9
2.1. Installing the Board	9
2.2. Chassis Safety standards	10
2.3. Lithium battery precautions	11
3/ System specifications	12
3.1. Component main data	12
3.2. mITX-BDW-U Block Diagram.....	15
3.3. Processor Support Table	16
3.4. System Memory Support.....	16
3.5. mITX-BDW-U Graphics Subsystem.....	17
3.6. Power Consumption	19
4/ Connector Locations.....	22
4.1. mITX-BDW-U - frontside.....	22
5/ Connector Definition.....	23
6/ IO-Area Connectors	24
6.1. DP Connectors DP1 & DP2 (J8 & J9)	24
6.2. Ethernet Connectors (J4 & J5).....	24
6.3. USB Connectors (IO Area)	26
6.4. Audio Jack Connectors (J1 & J2)	28
7/ Internal Connectors.....	29
7.1. DC Power - ATX Connector (Int12V - J10)	29
7.2. DC Power - Jack Connector (Ext19 V - J3).....	29
7.3. Fan Connectors (J34 and J29).....	29
7.4. PS/2 Keyboard and Mouse connector (KBDMSE) (J15).....	31
7.5. SATA (Serial ATA) Disk interface.....	32
7.6. USB Connectors (internal).....	33
7.7. Speaker connector (J13).....	33
7.8. SPDIF-Out (J14).....	33
7.9. Front Panel Connector (FRONTPNL) (J23).....	34
7.10. Serial COM1 – COM2 Ports (J21, J25)	35
7.11. LVDS Flat Panel Connector (J33)	36
7.12. Feature Connector (J28)	37
7.13. "Load Default BIOS Settings" Jumper (JP1)	39
7.14. Always On jumper setting (JP1).....	39
7.15. SPI Connector (J30).....	39
7.16. LPC Connector (J31)	40
8/ Slot Connectors (miniPCIe).....	41
9/ On-board and mating connector types.....	42
10/ BIOS	43
10.1. Main	43
10.2. Advanced.....	49
10.3. Security	91
10.4. Boot.....	95
10.5. Misc.....	96
10.6. Exit.....	97

1/ Introduction

This manual describes the mITX-BDW-U board made by Kontron. This board will also be denoted mITX-BDW-U within this user guide.

The mITX-BDW-U board is based on the BDW-U chipset, supports the 5th generation Intel® Broadwell i7 -, i5 -, i3 2Core mobile processors. See "Processor Support Table" for specific details.

Use of this user guide implies a basic knowledge of PC-AT hard- and software. This manual focuses on describing the mITX-BDW-U board's special features and is not intended to be a standard PC-AT textbook.

New users are recommended to study the short installation procedure within this user guide before switching-on the power.

Configuration and setup of the CPU board is either done automatically or manually by the user via the BIOS setup menus.

Latest revision of the user guide, datasheet, thermal simulations, BIOS, drivers, BSP's (Board Support Packages), Mechanical drawings (2D and 3D) can be downloaded from the following link:

<http://www.kontron.com/products/boards-and-mezzanines/embedded-motherboards/mini-itx-motherboards/>

2/ Installation Procedure

2.1. Installing the Board

Follow these steps to get the board up and running. If the board already has components like RAM and CPU cooler mounted, leave out the relevant steps below.

1. Turn off the PSU (Power Supply Unit)

NOTICE

Turn off PSU (Power Supply Unit) completely (no mains power connected to the PSU) or leave the Power Connectors unconnected while configuring the board. Failure to do so might damage components (RAM, LAN cards etc.). Only use a standard ATX PSU. Running the board with a non-compliant ATX PSU may damage the board within minutes.

2. Insert the DDR3L SO-DIMM 204pin SO-DIMM module(s)

Be careful to push it in the slot(s) before locking the tabs. For a list of approved DDR3L SO-DIMMs contact your Distributor or FAE. For more information refer to chapter "System Memory Support".

3. Cooler Installation

The mITX-BDW-U comes with a passive heatsink pre-installed and a separate fan, that can be mounted onto the heatsink, should the system require additional airflow. Connect Cooler Fan electrically to the FANCPU connector.

4. Connecting Interfaces

Insert all external cables for hard disk, keyboard etc. A monitor must be connected in order to change BIOS settings.

5. Connect and turn on PSU

Connect PSU to the board by the ATX+12 V- 4p connector or alternatively connect a 19 V power adapter to the Rear I/O power jack.

6. Power Button

If the board does not start by itself when switching on the ATX PSU AC mains, then follow these instructions to start the board. Install the Always On Jumper in the Always On position or toggle the PWRBTN_IN# signal (available in the FRONTPNL connector), by momentary shorting pins 16 (PWRBTN_IN#) and pin 18 (GND). A "normally open" switch is recommended.

7. BIOS Setup

- ▶ Enter the BIOS setup by pressing the <F2> key during boot up.
- ▶ Enter "Exit Menu" and Load Setup Defaults.
- ▶ Refer to the "BIOS Configuration / Setup" section of this manual for details on BIOS setup.



To clear all BIOS settings, including Password protection, activate "Load Default BIOS Settings" Jumper for approximately 10 sec (without power connected).

8. Mounting the board in chassis

NOTICE

When mounting the board to the chassis etc. take note that the board contains components on both sides of the PCB that can easily be damaged if board is handled without reasonable care. A damaged component can result in malfunction or no function.

When fixing the Motherboard on a chassis it is recommended to use screws with integrated washer and a diameter of approximately 7 mm. Do not use washers with teeth, as they can damage the PCB and cause short circuits.

2.2. Chassis Safety standards

When designing the chassis interface connectors, take care that the connectors fulfil the IEC60950 standard.

Users of miTX-BDW-U (T4006) must evaluate the end-product to ensure that the requirements of the 60950-1 safety standard are met:

- ▶ The motherboard must be installed in a suitable mechanical, electrical and fire enclosure.
- ▶ The system in its enclosure must be evaluated for temperature and air flow considerations.
- ▶ The motherboard must be powered by a CSA or UL approved power supply that limits the maximum input current to 10A via external barrel-type 19Vdc connector, and to 16A via internal square 12Vdc ATX connector.
- ▶ For interfaces having a power pin such as external power or fan, ensure that the connectors and wires are suitably rated. All connections from/to the product shall be with SELV circuits only.
- ▶ Wires have suitable rating to withstand the maximum available power.
- ▶ The enclosure of the peripheral device fulfils the fire protecting requirements of IEC60950.


2.3. Lithium battery precautions

<p>CAUTION!</p> <p>Danger of explosion if battery is incorrectly re- placed. Replace only with same or equivalent type recommended by manufacturer. Dispose of used batteries according to the manufacturer's instructions.</p>	<p>VORSICHT!</p> <p>Explosionsgefahr bei unsachgemäßem Austausch der Batterie. Ersatz nur durch den selben oder einen vom Hersteller empfohlenen gleichwertigen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.</p>
<p>ATTENTION!</p> <p>Risque d'explosion avec l'échange inadéquat de la batterie. Remplacement seulement par le même ou un type équivalent recommandé par le producteur. L'évacuation des batteries usagées conformément à des indications du fabricant.</p>	<p>PRECAUCION!</p> <p>Peligro de explosi3n si la batería se sustituye incorrectamente. Sustituya solamente por el mismo o tipo equivalente recomendado por el fabricante. Disponga las baterías usadas según las instrucciones del fabricante.</p>
<p>ADVARSEL!</p> <p>Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.</p>	<p>ADVARSEL!</p> <p>Eksplosjonsfare ved feilaktig skifte av batteri. Benytt samme batteritype eller en tilsvarende type anbefalt av apparatfabrikanten. Brukte batterier kasseres i henhold til fabrikantens instruksjoner.</p>
<p>WARNING!</p> <p>Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.</p>	<p>VAROITUS!</p> <p>Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan lalteil- mistajan suositteluun tyypin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.</p>

3/ System Specifications

3.1. Component main data

The table below summarizes the features of the mITX-BDW-U embedded motherboard.

Form Factor	mITX-BDW-U: miniITX (170.18 mm by 170.18 mm), Height approx. 23 mm from top of PCB board.
Processor	On board CPU variants Support 5th Generation Intel® Core™ (Broadwell-U Mobile) processors on a BGA 1168 in a Multi-chip package with the PCH (max. 15 W TDP) Intel® Core™ i7 Intel® Core™ i5 Intel® Core™ i3
Memory	DDR3L SO-DIMM 204pin socket (2 sockets) Support single and dual ranks DDR3L 1333/1600MT/s (PC3-10600/PC3-12800) Support system memory from 1x 1GB up to 2x 8G  Less than 4 GByte displayed in System Properties using 32 bit OS (Shared Video Memory/PCI resources is subtracted). ECC not supported
Chipset	Intel Series 9 PCH-LP (Platform Controller Hub) Intel® VT-d (Virtualisation Technology for Directed I/O) Intel® TXT (Trusted Execution Technology) Intel® HD Audio Technology Intel® RST (Rapid Storage Technology) SATA (Serial ATA) 6Gb/s USB revision 2.0 USB revision 3.0 PCI Express revision 2.0 ACPI 4.0a compliant Triple Display support (Triple Graphic Pipes) Blue-ray HD video playback Enhanced DMA controller, interrupt controller and timer functions
Audio	Audio, 5.1 Channel High Definition Audio Codec using the Realtek ALC662 codec Line-in and Line-out Microphone: MIC1 and MIC2 SPDIF-Out (electrical Interface only) On-board speaker (Electromagnetic Sound Generator like Hycom HY-05LF)
Video	Intel® i3, i5 & i7 5th Generation Mobile processors support 3x digital display ports via the Intel® Broadwell-U CPU: 2x DP (DisplayPorts), comply with DisplayPort 1.2a specification. HDMI panel support via DP to HDMI Adapter Converter. LVDS panel support up to 2 pixel/clock 24 bit colors (VESA and JEIDA) Triple independent pipes for Mirror or Triple independent display support Triple independent pipes for triple independent or cloned displays are supported from OS. Any 3 displays via DP1, DP2 and LVDS can be used.
I/O Control	Via ITE IT8528E Embedded Controller via LPC Bus interface
Peripheral interfaces	Four USB 3.0 / USB 2.0 on I/O area Four USB 2.0 ports on internal pinrows Two Serial ports (RS232) on internal pinrows Two Serial ATA-600 (one further SATA port implemented in M.2 connector) RAID 0/1 support

LAN Support	1x 10/100/1000Mbps/s LAN (ETHER1) using Intel® Clarksville WGI218LM Gigabit PHY connected to BDW-U 1x 10/100/1000Mbps/s LAN (ETHER2) using Intel® Pearsonville I211AT PCI Express controller PXE Netboot supported. Wake On LAN (WOL) supported
Expansion Capabilities	PCI-Express slots: 1x mPCIe connector with USB 2.0 port support for 3G modem (SIM socket) 1x M.2 connector with 1x SATA/ PCIe x2 SMBus, compatible with ACCES BUS and I2C BUS, (via Feature connector) SPI bus routed to SPI connector (BIOS Recovery module interface) DDC/AUX Bus routed to DP connector (Auto detect to DDC when using passive DP to HDMI adapters) 18x GPIOs (General Purpose I/Os), (via Feature connector) DAC, ADC, PWM and TIMER (Multiplexed), (via Feature connector) WAKE UP / Interrupt Inputs (Multiplexed), (via Feature connector) 3 Wire Bus for GPIO Expansion (up to 152 GPIOs), (via Feature connector) 8 bit Timer output, (via Feature connector)
Hardware Monitor Subsystem	Smart Fan control system, support Thermal® and Speed® cruise for two on-board Fan connectors: CPU Fan (on-board) and System Fan (on-board) Thermal inputs: CPU Die temperature (precision +/- 3° C), System temperature (precision +/- 3° C) Intrusion (Case Open) detect input, (via Feature connector) Sleep S5# Indication, (via Feature connector) System Powergood Signal, (via Feature connector)
Power Supply Unit	ATX+12 V PSU 4-pin on internal 2x 2 pin connector. Or: 19V notebook-style Power adapter through Rear I/O power jack.
Battery	Exchangeable 3.0V Lithium battery for on-board Real Time Clock and CMOS RAM. Manufacturer Panasonic / Part-number CR-2032L/BN, CR2032N/BN or CR-2032L/BE. Approximate 6.2 years retention. Current draw is less than 4.2µA when PSU is disconnected and 0 µA in S0 – S5. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>⚠ CAUTION Danger of explosion if the battery is not replaced correctly. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.</p> </div>
BIOS	Phoenix BIOS (EFI core version) Support for ACPI 4.0 (Advanced Configuration and Power Interface), Plug & Play Suspend (S1 mode) Suspend To Ram (S3 mode) Suspend To Disk (S4 mode) "Always On" BIOS power setting RAID Support (RAID modes 0 and 1)
Operating Systems Support	Windows 7 (32 b* + 64 b) Windows 8 (32 b* + 64 b) Linux *= Out Of The Box installation test only.
Environmental Conditions	Operating: 0° C – 60° C operating temperature (forced cooling). It is the customer's responsibility to provide sufficient airflow around each of the components to keep them within allowed temperature range. Please refer to the thermal simulation report for information about airflow. 10 % - 90 % relative humidity (non-condensing) Storage: -20° C – 70° C; lower limit of storage temperature is defined by specification restriction of on-board CR2032 battery. Board with battery has been verified for storage temperature down to -40° C by Kontron. 5 % - 95 % relative humidity (non-condensing)

Electro Static Discharge (ESD) / Radiated Emissions (EMI):

All Peripheral interfaces intended for connection to external equipment are ESD/ EMI protected.

EN 61000-4-2:2000 ESD Immunity

EN55022:2006+A1:2007 class B Generic Emission Standard.

Electrical Fast Transients (EFT) (Burst):

EN 61000-4-4 Burst Immunity.

Safety:

IEC 60950-1: 2005, 2nd Edition

UL 60950-1

CSA C22.2 No. 60950-1

Product Category: Information Technology Equipment Including Electrical Business Equipment.

Product Category CCN: NWGQ2, NWGQ8. File number: E194252

Shock:

IAW IEC 60068-2-27, Test Ea, shock, 18 shocks 3 per axis, 6 directions.

Shock pulse 50g, 11ms halfsine.

Bump:

IAW IEC 60068-2-29, Test Eb, Bump, 3000 bumps, 500 per axis, 6 directions.

Half Sine Waveform Acceleration 2g; Pulse Duration 11ms.

Vibration:

IAW IEC 60068-2-64, Test Fh, Random Vibration. 90 min per axis, 3 axes, at 1.9 grms, with PSD: 10-

20 Hz: 0.05 g²/Hz and 20-500 Hz: -3dB/octave.

Theoretical MTBF:

365475 hours @ 30° C for the mITX-BDW-U

Restriction of Hazardous Substances (RoHS):


All boards in the mITX-BDW-U family are RoHS compliant.

Capacitor utilization:

No Tantalum capacitors on board

Only Japanese brand Solid capacitors rated for 100 °C used on board

3.2. miTX-BDW-U Block Diagram

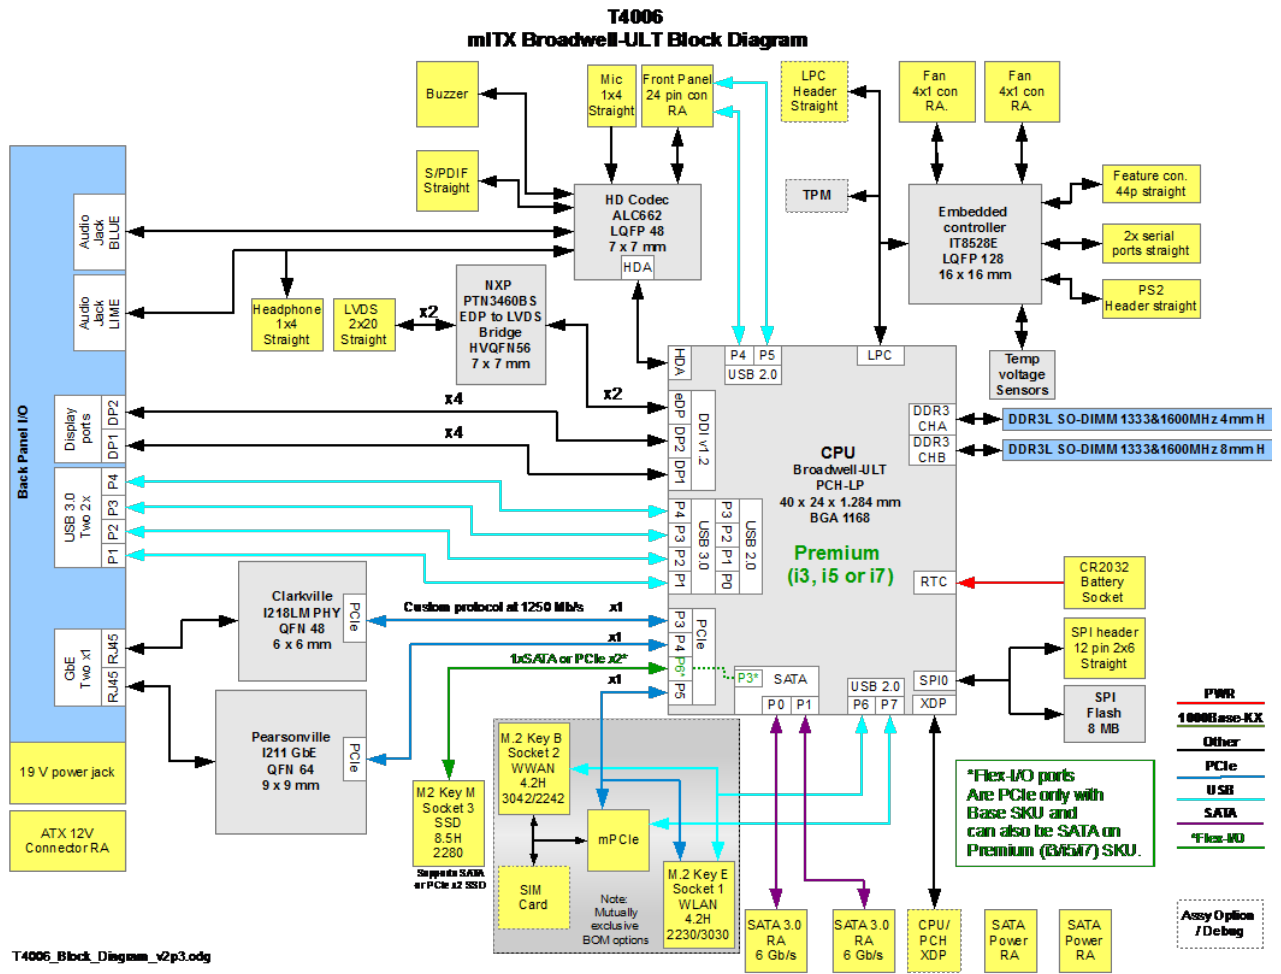

3.3. Processor Support Table

mITX-BDW-U is designed to support the following BGA1168 Mobile processors:


- ▶ 5th generation Intel® Core™ i7 processor
- ▶ 5th generation Intel® Core™ i5 processor
- ▶ 5th generation Intel® Core™ i3 processor

The BGA CPU is premounted at the factory. Kontron has defined the board versions as listed in the following table. Currently, all board versions are based on Embedded CPUs. Other versions are expected later.

mITX-BDW-U variants		CPU		
Name	Sales PN	Speed	Embed.	cache
mITX-BDW-U i7-5650U	810610-4500	3.2 GHz	Yes	4 MByte
mITX-BDW-U i5-5350U	810611-4500	2.9 GHz	Yes	3 MByte
mITX-BDW-U i3-5010U	810612-4500	2.1 GHz	Yes	3 MByte

For sufficient cooling of the CPU conditions such as the worst-case maximum ambient operating temperature and the actual worst-case load of processor must be considered.

The mITX-BDW-U is delivered with premounted heatsink:

Component	Technology	Overall Dimentions (mm)	Fin Arrangement	Fin Detail (mm)	Fin Pitch (mm)	TM	Detail
CPU	Extruded Aluminium	70 x 70 x 16.8	Plate Fn	11.8 x 1.0 (x13)	5.7	Lard T-PCM 585	

3.4. System Memory Support

The mITX-BDW-U has two DDR3L SO-DIMM sockets. The sockets support the following memory features:

- ▶ 2x DDR3L 1.35 V SO-DIMM 204-pin
- ▶ Dual-channel with 1 SO-DIMM per channel
- ▶ From 1 GByte and up to 2x 8 GByte.



If using 32bit OS, less than 4GB are displayed in the system (Shared Video Memory/PCI resources is subtracted).

- ▶ Single/dual rank unbuffered 1333/1600MT/s (PC3-10600/PC3-12800)
- ▶ SPD timings supported
- ▶ ECC not supported

The installed DDR3L SO-DIMM should support the Serial Presence Detect (SPD) data structure. This allows the BIOS to read and configure the memory controller for optimal performance. If non-SPD memory is used, the BIOS will attempt to configure the memory settings, but performance and reliability may be impacted.

Memory Operating Frequencies

Regardless of the SO-DIMM type used, the memory frequency will either be equal to or less than the processor system bus frequency. For example, if DDR3L 1600 memory is used with a 1333 MHz system bus frequency processor, the memory clock will operate at 167 MHz. The table below lists the resulting operating memory frequencies based on the combination of SO-DIMMs and processor.

SO-DIMM Type	Module name	Memory Data transfers [MT/s]	Processor system bus frequency [MHz]	Resulting memory clock frequency [MHz]	Peak transfer rate [MB/s]
DDR3L 1600	PC3-12800	1600	1333	167	10666
DDR3L 1600	PC3-12800	1600	1600	200	12800

Kontron offers the following memory modules:

Part Number (PN)	Memory Module Description	Replaced Legacy PN
1060-2520	2 GByte DDR3L-1600, PC3-12800	1055-9939
1060-2522	4 GByte DDR3L-1600, PC3-12800	1055-9941
1060-2524	8 GByte DDR3L-1600, PC3-12800	1055-9942

Memory modules have, in general, a much lower longevity than embedded motherboards, and therefore EOL of memory modules can be expected several times during the lifetime of the motherboard. Kontron guarantees that the above PNs will be maintained by replacing EOL memory modules with other similar modules.

As a minimum, it is recommend to use Kontron memory modules for prototype system(s) in order to prove the stability of the system and for reference.

For volume production you might want to test and qualify other types of RAM. In order to qualify RAM it is recommend to configure 3 systems running a RAM Stress Test program in a heat chamber at 60° C for a minimum of 24 hours.

3.5. mITX-BDW-U Graphics Subsystem

The mITX-BDW-U equipped with Intel® i3, i5 or i7 processor, supports Intel® Gen 8 HD Graphics core. All mITX-BDW-U versions support three displays pipes. The DP interface supports the DisplayPort 1.2a specification. The PCH supports High-bandwidth Digital Content Protection for high definition content playback over digital interfaces. The PCH also integrates audio codecs for audio support over DP interfaces.

Up to three displays (DP1, DP2 & LVDS) can be used simultaneously and be used to implement independent or cloned display configuration. PCIe cards can be used to replace on-board graphics or in combination with on-board graphics.

Intel® HD Graphics

Features of the Intel Gen 8 Graphics core built into the i3, i5 and i7 processors, includes:

- ▶ High quality graphics engine supporting
 - ▶ 3 Symmetric Pipe Support
 - ▶ DirectX11.1 and OpenGL 4.x compliant and lower
 - ▶ Full AVC/VC1/MPEG2 HW Decode
 - ▶ Extension of H.264 format
 - ▶ VP8* Decode HW Acceleration
 - ▶ Advanced Scheduler 2.0, 1.0, XPDM support
 - ▶ OpenGL* 4.0, OpenGL* 4.2 support
- ▶ DP1 & DP2

- ▶ 6/32bit colours in WQXGA 3840x2160 @ 60 Hz
- ▶ Max HDMI resolution 4096x2304 @ 24 Hz
- ▶ DisplayPort standard 1.2a
- ▶ LVDS
 - ▶ One or two pixels per clock, up to 1920x1200 - 24b bit colors
 - ▶ 12V for backlight, up to 2.5A
 - ▶ 3.3V or 5V for panel power, up to 1.0A
 - ▶ PWM Brightness/Dimming
 - ▶ VESA and JEIDA color coding

3-displays Configurations:

Display1	Display2	Display3	Max Resolution @60 Hz		
			Display1	Display2	Display3
LVDS	DP	DP	1920x1200	3840x2160	3840x2160
LVDS	HDMI	DP	1920x1200	2560x1600	3840x2160
LVDS	HDMI	HDMI	1920x1200	2560x1600	2560x1600

HDMI means using "DP to HDMI passive adapter".

If using "Active adapter", the HDMI resolution will be increased to match "DP" in above table.

DP Adapters

Use of DP Adapter Converters (3rd party accessories) can provide HDMI panel support.

The DP to HDMI supports the HDMI 1.4a specification including audio codec.



DP to HDMI
PN 1045-5781



Cable DP Extender cable 200mm
PN1051-7619

For all the above adapters the maximum resolution is: 1920 x 1200. Extension cable available.

3.6. Power Consumption

In order to ensure safe operation of the board, the input power supply must monitor the supply voltage and shut down if the supply is out of range – refer to the actual power supply specification. Please note, in order to keep the power consumption to a minimal level, boards do not implement a guaranteed minimum load. In some cases, this can lead to compatibility problems with ATX power supplies, that require a minimum load to stay in regulation. The mITX-BDW-U board must be powered through either the ATX+12V-4p (4-pole) connector using standard ATX power supply or by an external 19V power adapter through the Rear I/O power jack.

ATX12V supply: ATX+12V-4p connector must be used in according to the ATX12V PSU standard.

NOTICE Hot Plugging power supply is not supported. Hot plugging might damage the board.

The requirements to the supply voltages are as follows:

Supply	Min.	Max.	Note
+12 V	11.4 V	12.6 V	Should be $\pm 5\%$ for compliance with the ATX specification
+19 V	- 13.2 V	- 10.8 V	Should be $\pm 10\%$ for mITX-BDW-U compatibility

Total System power example


More detailed Static Power Consumption

On the following pages the power consumption of the T4006 Board is measured under:

1. Windows 7 Idle
2. Windows 7 3Dmark 2006
3. Windows 7 Intel® TAT, 100 % on all CPU cores and GFX
4. Windows 7 S3 (Sleep)
5. Windows 7 S5 (Shutdown)

The principal test system and test equipment used:

1. Tektronix DP07254
2. Tektronix TCP202
3. HP 34401A
4. ATX rail switch

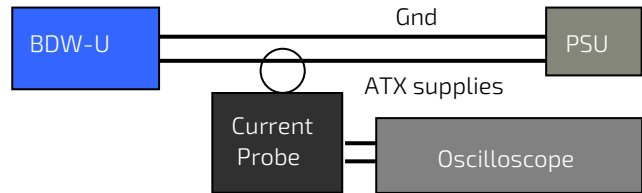

Power consumption of PSU (power loss), Monitor and HDD are not included.

mITX-BDW-U Low Power Setup:

Standard system configuration equipped with Internal graphics, 1x SATA disks, Intel® Core™ i3 CPU, 1x SO-DIMM (2 GByte Module), DP Monitor, Keyboard & Mouse (USB), 1x 8 GByte USB2 Stick, 12 V active cooler, >90 W 12 V ATX PSU.

mITX-BDW-U Low Power Setup results:

Windows 7 - Idle		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	636	7.808
+19 V	x	x
TOTAL		7.808

Windows 7 – 3DMark2006		
SUPPLY	Current draw / [mA]	Power consumption / [W]
+12 V	1688	20.72
+19 V	x	x
Total		20.72

Windows 7 – Intel® TAT 100% all CPU cores and GFX		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	1733	21.26
+19 V	x	x
TOTAL		21.26

Windows 7 – S3 (Sleep)		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	74	0.9102
+19 V	x	x
TOTAL*		0.9102

Windows 7 – S5 (Shutdown)		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	67	0.824
+19 V	x	x
TOTAL*		0.824

mITX-BDW-U High Power Setup:

Standard system configuration equipped with PCIe M.2 SSD, 2x SATA disks, mPCI Wifi, Intel® Core™ i3 CPU, 2x SO-DIMM (8 GByte Modules), DP Monitor, Keyboard & Mouse (USB), 4x 1-8 GByte USB2 Sticks, 12 V active cooler, 1x Ethernet connected, >120 W 12 V ATX PSU.

mITX-BDW-U High Power Setup results:

Windows 7 - Idle		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	1260	15.48
+19 V	x	x
TOTAL		15.48

Windows 7 – 3DMark2006		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	2367	29.01
+19 V	x	x
TOTAL		29.01


Windows 7 – Intel TAT 100% all CPU cores and GFX		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	2175	26.66
+19 V	x	x
TOTAL		26.66

Windows 7 – S3 (Sleep)		
Supply	Current draw / [mA]	Power consumption / [W]
+12 V	120	1.475
+19 V	x	x
TOTAL*		

Windows 7 – S5 (Shutdown)		
SUPPLY	Current draw / [mA]	Power consumption / [W]
+12 V	78.87	0.969
+19 V	x	x
TOTAL*		0.969

4/ Connector Locations

4.1. miTX-BDW-U - frontside

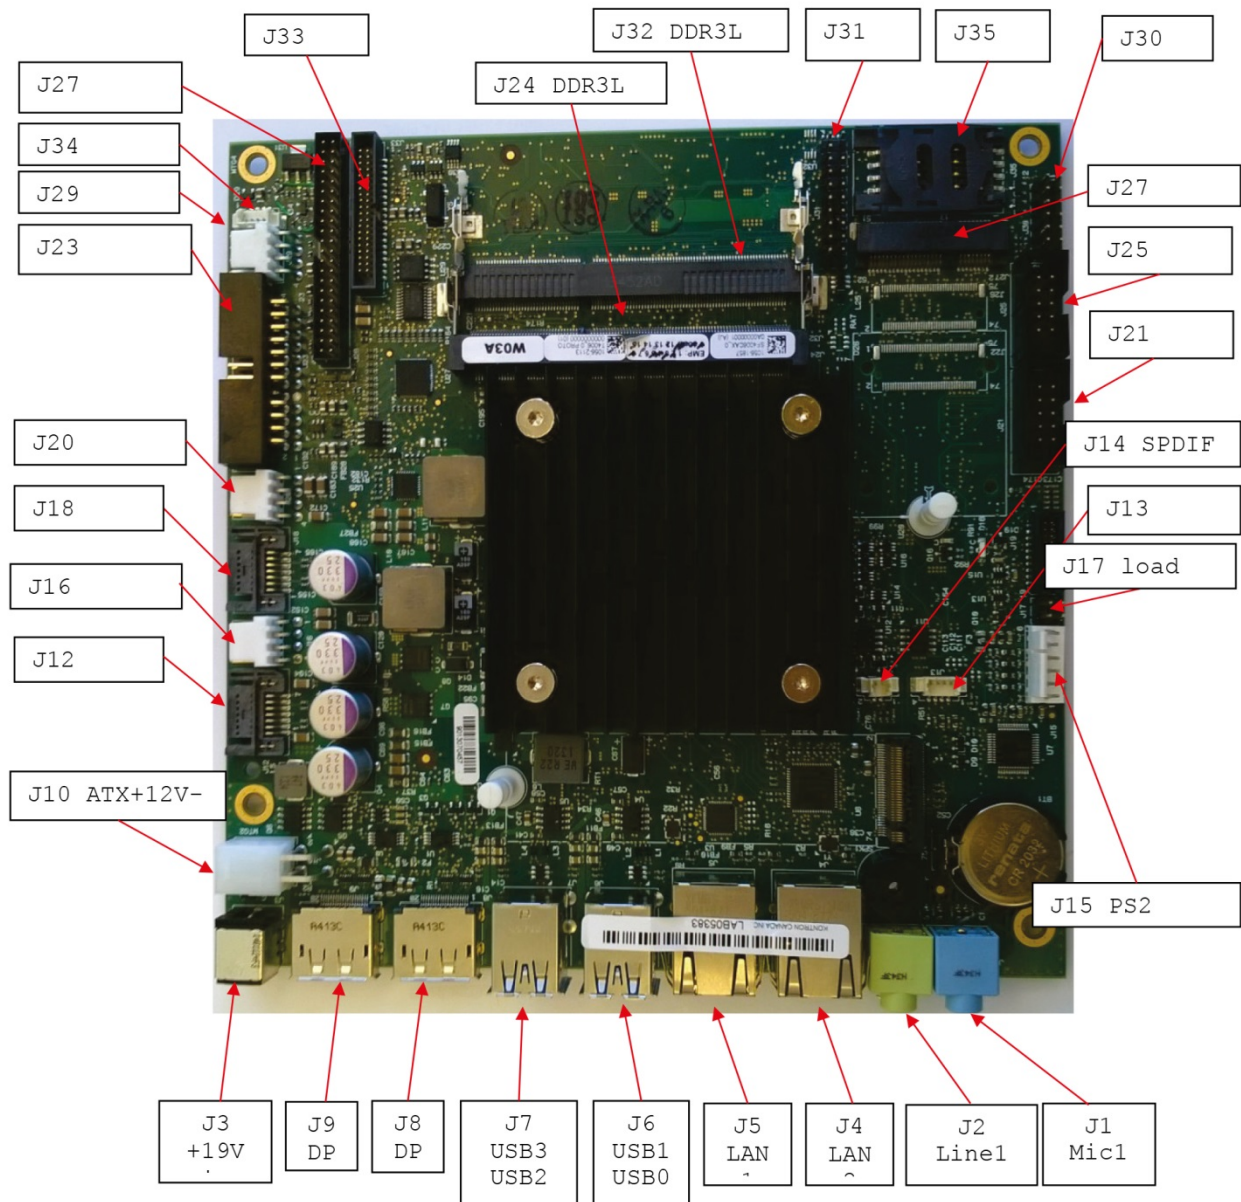

5/ Connector Definition

The following sections provide pin definitions and detailed descriptions of all on-board connectors.

The connector definitions are given below:


Column name	Description
Pin	Shows the pin-numbers in the connector. The graphical layout of the connector definition tables is made similar to the physical connectors.
Signal	The mnemonic name of the signal at the current pin. The notation "XX#" states that the signal "XX" is active low.
Type	AI: Analogue Input. AO: Analogue Output. I: Input, TTL compatible if nothing else stated. IO: Input / Output. TTL compatible if nothing else stated. IOT: Bi-directional tristate IO pin. IS: Schmitt-trigger input, TTL compatible. IOC: Input / open-collector Output, TTL compatible. IOD: Input / Output, CMOS level Schmitt-triggered. (Open drain output) NC: Pin not connected. O: Output, TTL compatible. OC: Output, open-collector or open-drain, TTL compatible. OT: Output with tri-state capability, TTL compatible. LVDS: Low Voltage Differential Signal. PWR: Power supply or ground reference pins.
	Ioh: Typical current in mA flowing out of an output pin through a grounded load, while the output voltage is > 2.4 V DC (if nothing else stated). Iol: Typical current in mA flowing into an output pin from a VCC connected load, while the output voltage is < 0.4 V DC (if nothing else stated).
Pull U/D	On-board pull-up or pull-down resistors on input pins or open-collector output pins.
Note	Special remarks concerning the signal.

The abbreviation *TBD* is used for specifications that are not available yet or that are not sufficiently specified by the component vendors.

6/ IO-Area Connectors

6.1. DP Connectors DP1 & DP2 (J8 & J9)

The DP (DisplayPort) connectors are based on standard DP type Foxconn 3VDS1203-H7JJ-7H or similar.

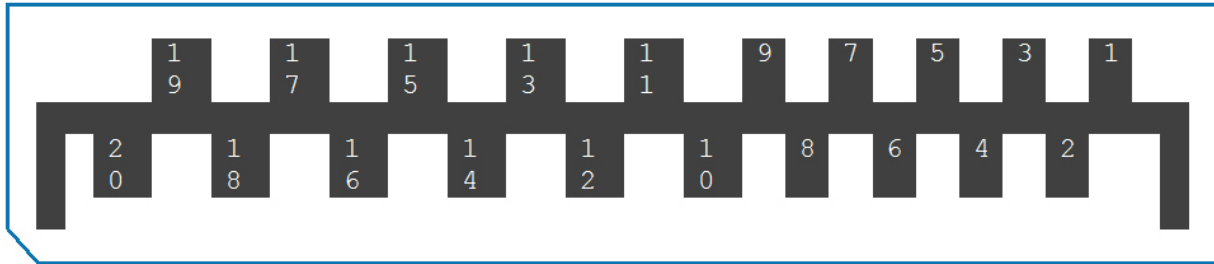

Pin	Signal	Description	Type	Note
1	Lane 0 (p)		LVDS	
2	GND		PWR	
3	Lane 0 (n)		LVDS	
4	Lane 1 (p)		LVDS	
5	GND		PWR	
6	Lane 1 (n)		LVDS	
7	Lane 2 (p)		LVDS	
8	GND		PWR	
9	Lane 2 (n)		LVDS	
10	Lane 3 (p)		LVDS	
11	GND		PWR	
12	Lane 3 (n)		LVDS	
13	Config1	Aux or DDC selection	I	Internally pull down (1Mohm). Aux channel on pin 15/17 selected as default (when NC) DDC channel on pin 15/17, If HDMI adapter used (3.3 V)
14	Config2	(Not used)	0	Internally connected to GND
15	Aux Ch (p)	Aux Channel (+) or DDC Clk		AUX (+) channel used by DP DDC Clk used by HDMI
16	GND		PWR	
17	Aux Ch (n)	Aux Channel (-) or DDC Data		AUX (-) channel used by DP DDC Data used by HDMI
18	Hot Plug		I	Internally pull down (100 Kohm).
19	Return		PWR	Same as GND
20	3.3 V		PWR	Fused by 1.5 A resettable PTC fuse.

6.2. Ethernet Connectors (J4 & J5)

The mITX-BDW-U supports two channels of 10/100/1000 Mbit Ethernet, one (LAN1) is based on Intel® Clarkville i218LM Gigabit PHY and one other controller (LAN2) are based on Intel® Pearsonville i211AT PCI Express controller.

In order to achieve the specified performance of the Ethernet port, Category 5 twisted pair cables must be used with 10/100 MByte and Category 5E, 6 or 6E with 1 Gbit LAN networks.



The signals for the Ethernet ports are as follows:

Signal	Description
MDI[0]+ / MDI[0]-	In MDI mode, this is the first pair in 1000Base-T, i.e. the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX.
MDI[1]+ / MDI[1]-	In MDI mode, this is the second pair in 1000Base-T, i.e. the BI_DB+/- pair, and is the receive pair in 10Base-T and 100Base-TX. In MDI crossover mode, this pair acts as the BI_DA+/- pair, and is the transmit pair in 10Base-T and 100Base-TX.
MDI[2]+ / MDI[2]-	In MDI mode, this is the third pair in 1000Base-T, i.e. the BI_DC+/- pair. In MDI crossover mode, this pair acts as the BI_DD+/- pair.
MDI[3]+ / MDI[3]-	In MDI mode, this is the fourth pair in 1000Base-T, i.e. the BI_DD+/- pair. In MDI crossover mode, this pair acts as the BI_DC+/- pair.



MDI = Media Dependent Interface

The pinout of the RJ45 connectors is as follows:

Signal	PIN	Type	Ioh/Iol	Note
MDI0+	1			
MDI0-	2			
MDI1+	3			
MDI2+	4			
MDI2-	5			
MDI1-	6			
MDI3+	7			
MDI3-	8			
Flashing => communication	 	On => 1GB link		
	8 7 6 5 4 3 2 1			

6.3. USB Connectors (IO Area)

The mITX-BDW-U board contains a EHCI (Enhanced Host Controller Interface) and a XHCI (Extensible Host Controller Interface). The EHCI controller supports six USB 2.0 ports allowing data transfers up to 480 Mb/s. The XHCI controller supports up to four USB 3.0 ports allowing data transfers up to 5Gb/s. Four of the USB 3.0 ports are shared with four of the USB 2.0 ports (USB0 – USB3).




Not all USB 2.0 and USB 3.0 ports are physically connected to the board.


Legacy Keyboard/Mouse and wakeup from sleep states are supported. Over-current detection on all USB ports is supported. The following USB connectors are available in the IO Area.

- ▶ USB 2.0/3.0 Port 0, 1, 2 & 3 are supplied on the dual USB connectors in the IO Area (J6 & J7).
- ▶ USB 2.0 Port 4, 5 are supplied on the combined Front Panel connector (J23).
- ▶ USB 2.0 Port 7 is available in the mPCIe connector (J27).

For USB2.0 cabling it is required to use only HiSpeed USB cable, specified in USB2.0 standard:

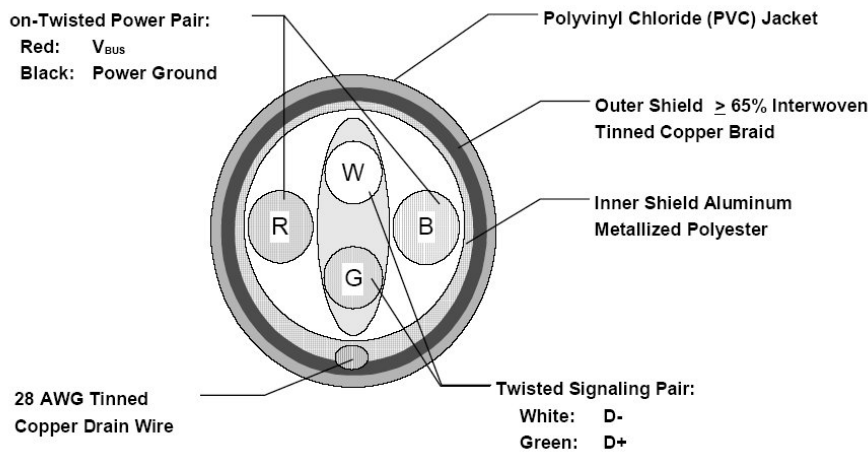

For USB3.0 cabling it is required to use only HiSpeed USB cable, specified in USB3.0 standard:

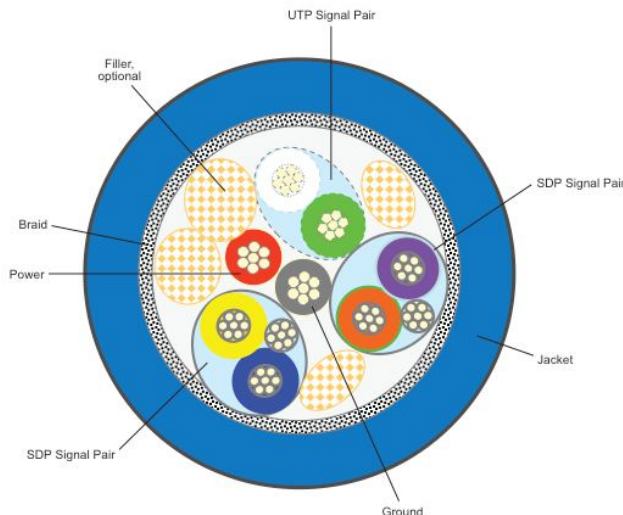

USB Connector J6 & J7 (USB0, 1, 2 & 3)

The dual USB connectors J6 & J7, Ports 0, 1, 2 and 3 supports USB3.0/USB2.0.

Note	Type	Signal	PIN				Signal	Type	Note
	IO		USB3-		USB3+			IO	
1	PWR	5V/SB5V	1	2	3	4	GND	PWR	
	IO	RX2-	5	6	7	8	9	TX2+	IO
	IO		RX1+			TX1-		IO	
	PWR		GND						
	IO		USB2-		USB2+			IO	
1	PWR	5V/SB5V	1	2	3	4	GND	PWR	
	IO	RX2-	5	6	7	8	9	TX2+	IO
	IO		RX2+			TX2-		IO	
	PWR		GND						

Signal	Description
USBn+ USBn- RXn+ RXn- TXn+ TXn- (n= 0,1,2,3)	Differential pair works as serial differential receive/transmit data lines.
5 V/SB5 V	5 V supply for external devices. SB5 V is supplied during power-down to allow wakeup on USB device activity. Protected by resettable 2A fuse covering both USB ports.

6.4. Audio Jack Connectors (J1 & J2)

The on-board audio circuit implements up to 6 Channel High Definition Audio via SPDIF-Out connector, see SPDIF-Out (J14) description.

Interface is based on UAA (Universal Audio Architecture), featuring five 24-bit stereo DACs and three 20-bit stereo ADCs. The following Audio connector is available in the IO Area.

Audio Speakers, Line-in and Microphone are available in a stacked audio jack connector:

	Signal	Type	Note
TIP	LINE1-IN-L	IA	1.0 V _{RMS} , 30 kΩ
RING	LINE1-IN-R	IA	1.0 V _{RMS} , 30 kΩ
SLEEVE	GND	PWR	

	Signal	Type	Note
TIP	OUT-L	OA	For headphone, max 1.6 V _{RMS}
RING	OUT-R	OA	For headphone, max 1.6 V _{RMS}
SLEEVE	GND	PWR	

Signal	Description	Note
LINE1-IN-L	Line In signal Left	
LINE1-IN-R	Line In signal Right	
OUT-L	Speaker Out Left	Shared with J34 pin header connector
OUT-R	Speaker Out Right	Shared with J34 pin header connector

7/ Internal Connectors

7.1. DC Power - ATX Connector (Int12V - J10)

The mITX-BDW-U boards are designed to be supplied from either a 12 V ATX-style power supply or an external 19 V power adapter.

ATX+12 V-4p Power Connector (J10):

Note	Type	Signal	PIN		Signal	Type	Note
	PWR	GND	2	4	+12 V	PWR	1
	PWR	GND	1	3	+12 V	PWR	1

NOTICE

Do not hot plug any of the two power connectors (J10 and J3). This might damage the board. Turn off the mains supply etc. to make sure all the power lines (+12 V or +19 V) are turned off when connecting to the motherboard.

7.2. DC Power - Jack Connector (Ext19 V – J3)

Either the DC Power Jack Connector (Ext19 V) or the "Int12 V." connector must be used to supply the board with +12 V +/-5 % or +19 V +/-10 %.

The Ext19 V power connector has Vin to the center pin and mates with Ø 5.5 mm DC Power jack with Ø 2.5 mm pin hole. Maximum allowed current is 5A.

NOTICE

Hot Plugging power supply is not supported. Hot Plugging might damage the board.


7.3. Fan Connectors (J34 and J29)

The FAN1SYS (J29) can be used to power, control and monitor a fan for chassis ventilation etc.


The FANCPU (J34) is used for the connection of the FAN for the CPU.

The 4pin header is recommended to be used for driving 4-wire type Fan in order to implement FAN speed control. 3-wire Fan support is also possible, but no fan speed control is integrated.

4-pin Mode:

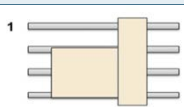Header	Pin	Signal	Description	Type
	1	PWM	PWM output	0-3.3
	2	TACHO	Tacho signal	I
	3	12 V	Power +12 V	PWR
	4	GND	Ground	PWR

3-pin Mode:

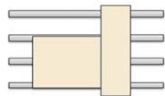Header	Pin	Signal	Description	Type
	1		Not used	
	2	TACHO	Tacho signal	I
	3	12 V	Power +12 V	PWR
	4	GND	Ground	PWR

Signal	Description
PWM	PWM output signal for FAN speed control.
TACHO	Tacho input signal from the fan, for rotation speed supervision RPM (Rotation Per Minute). The signal shall be generated by an open collector transistor or similar. Onboard is a pull-up resistor 4K7 to +12 V. The signal has to be pulsed and onboard circuit is prepared for two pulses per rotation.
12 V	+12 V supply for fan. This pin supplies a maximum of 2000 mA.
GND	Power Supply GND signal

7.4. PS/2 Keyboard and Mouse connector (KBDMSE) (J15)

A PS/2 keyboard/mouse can be attached via the pinrow connector KBDMSE (J15).

Both interfaces utilize open-drain signalling with on-board pull-up.

In standby mode the PS/2 mouse and keyboard are supplied from SB5 V, to enable keyboard or mouse activity to bring the system out of power saving states. The supply is provided through a 1.1 A resettable fuse.




The PS/2 connector does not support wake functions.

PIN	Signal	Type	Ioh/Iol	Pull U/D	Note
1	KBDCLK	IOD	/14 mA	2K7	
2	KBDDAT	IOD	/14 mA	2K7	
3	MSCLK	IOD	/14 mA	2K7	
4	MSDAT	IOD	/14 mA	2K7	
5	5 V/SB5 V	PWR	-	-	
6	GND	PWR	-	-	

Signal Description – Keyboard & mouse Connector (KBDMSE):

Signal	Description
MSCLK	Bi-directional clock signal used to strobe data/commands from/to the PS/2 mouse.
MSDAT	Bi-directional serial data line used to transfer data from or commands to the PS/2 mouse.
KDBCLK	Bi-directional clock signal used to strobe data/commands from/to the PC-AT keyboard.
KBDDAT	Bi-directional serial data line used to transfer data from or commands to the PC-AT keyboard.

Available cable kit:

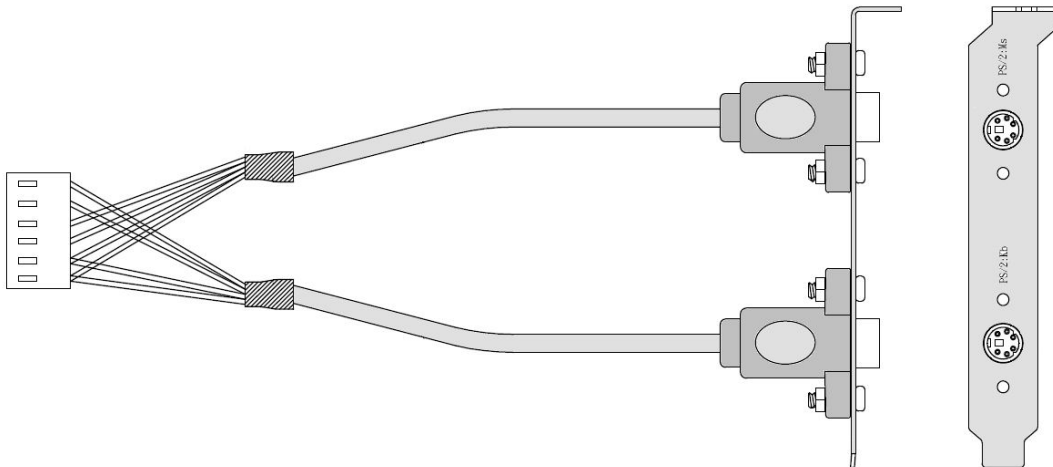

PN 1053-2384 Bracket Cable 6-Pin to PS2-Kbd-Mse

7.5. SATA (Serial ATA) Disk interface

The mITX-BDW-U has an integrated SATA Host controller (PCH in the BDW-U chipset) that supports independent DMA operation on two ports. One device can be installed on each port for a maximum of two SATA devices via two SATA connectors and one M.2 connector. A point-to-point interface (SATA cable) is used for host to device connections. All SATA ports support data transfer rates of up to 6.0/3.0/1.5Gb/s.



Before installing OS on a SATA drive make sure the drive is not a former member of a RAID system. If this is the case, some hidden data on the disk has to be erased. To do this, connect two SATA drives and select RAID in BIOS. Save settings and select <Ctrl> <I> while booting to enter the RAID setup menu. Now the hidden RAID data will be erased from the selected SATA drive.

Supported SATA features:

- ▶ 2 to 4-drive RAID 0 (data striping)
- ▶ 2-drive RAID 1 (data mirroring)
- ▶ AHCI (Advanced Host Controller Interface)
- ▶ NCQ (Native Command Queuing). NCQ is for faster data access.
- ▶ Swap bay support (not supported on M.2)
- ▶ Intel® Rapid Recover Technology
- ▶ 2 – 256 TByte volume (Data volumes only)
- ▶ Capacity expansion
- ▶ TRIM in Windows 7 (in AHCI and RAID mode for drives not part of a RAID volume). (TRIM is for SSD data garbage handling).

SATA0 & SATA1 connector pinning:

PIN	Signal	Type	Ioh/Iol	Note
1	GND	PWR	-	
2	SATA* TX+			
3	SATA* TX-			
4	GND	PWR	-	
5	SATA* RX-			
6	SATA* RX+			
7	GND	PWR	-	

Signal	Description
SATA* RX+ / RX-	Host transmitter differential signal pair
SATA* TX+ / TX-	Host receiver differential signal pair

“*” specifies 0 or 1 depending on SATA port.

Available cable kit:



PN 821035 Cable SATA 500 mm

7.6. USB Connectors (internal)

The following USB2.0 ports are available on Internal Pinrows:


USB2.0 Port 4 and 5 - the internal FRONTPNL connector (J23) supplies USB2.0 Port 4 and 5. See "Front Panel Header" description.

USB2.0 Port 7 - the internal mPCIe connectors (J27) supplies USB2.0 Port 7. See "PCIe Connectors" description.

7.7. Speaker connector (J13)

The headphone interface is available through the connector J13 (4 pins). These outputs are shared with the Speaker Audio Jack connector (green).

Up to 100 dB Signal-to-Noise Ratio (SNR).

Header	Pin	Signal	Type
	4	HPOUT-R	AO
	3	GND	PWR
	2	HPOUT-L	AO
	1	GND	PWR


7.8. SPDIF-Out (J14)

The digital audio interface (electrical SPDIF-Out) is available through the 2 pin connector J14 and can be used to implement 6 (5.1) Channel High Definition Audio.

Circuit is based on high fidelity 6-channel HD audio codec that is compatible with Intel HD Audio specification and supports stereo 24-bit resolution and up to 192 kHz sample rate for DACs/ADCs.

Up to 90 dB Signal-to-Noise Ratio (SNR).

16/20/24-bit S/PDIF TX Outputs supporting 48 K/96 K/44.1 K/88.2 KHz sample rate.

Header	Pin	Signal	Type
	2	GND	PWR
	1	SPDIF_OUT	0-3.3

7.9. Front Panel Connector (FRONTPNL) (J23)

Note	Pull U/D	Ioh/Iol	Type	Signal	PIN		Signal	Type	Ioh/Iol	Pull U/D	Note
	-	-	PWR	USB8_5 V	1	2	USB9_5 V	PWR	-	-	
	-	-		USB8-	3	4	USB9-		-	-	
	-	-		USB8+	5	6	USB9+		-	-	
	-	-	PWR	GND	7	8	GND	PWR	-	-	
	-	-	NC	NC	9	10	LINE2-L		-	-	
	-	-	PWR	+5 V	11	12	+5 V	PWR	-	-	
	-	25/25mA	O	SATA_LED#	13	14	SUS_LED	O	7mA	-	
	-	-	PWR	GND	15	16	PWRBTN_I#	I		1K1	
	4K7	-	I	RSTIN#	17	18	GND	PWR	-	-	
	-	-	PWR	SB3V3	19	20	LINE2-R		-	-	
	-	-	PWR	AGND	21	22	AGND	PWR	-	-	
	-	-	AI	MIC2-L	23	24	MIC2-R	AI	-	-	

Signal	Description
USB4_5 V & USB5_5 V	5 V supply for external devices. SB5V is supplied during powerdown to allow wakeup on USB device activity. Protected by active power switch 1A fuse for each USB ports.
USB4+/USB4-	Universal Serial Bus Port 8 Differentials: Bus Data/Address/Command Bus.
USB5+/USB5-	Universal Serial Bus Port 11 Differentials: Bus Data/Address/Command Bus.
+5 V	Maximum load per pin is 1 A (using IDC connector) or 2 A (using crimp terminals).
SATA_LED#	SATA Activity LED (active low signal). 3V3 output when passive.
SUS_LED	Suspend Mode LED (active high signal). Output 3.3 V via 470Ω.
PWRBTN_IN#	Power Button In. Toggle this signal low to start the ATX / BTX PSU and boot the board.
RSTIN#	Reset Input. When pulled low for a minimum 16ms, the reset process will be initiated. The reset process continues even though the Reset Input is kept low.
LINE2	Line2 is second stereo Line signals
MIC2	MIC2 is second stereo microphone input.
SB3V3	Standby 3.3 V voltage
AGND	Analogue Ground for Audio

Available cable kit:



PN 821042 Cable Front Panel Open-End, 300 mm

7.10. Serial COM1 – COM2 Ports (J21, J25)

The mITX-BDW-U provides two RS232 serial ports.

The typical definition of the signals in the COM ports are as follows:

Signal	Description
TxD	Transmitted Data, sends data to the communications link. The signal is set to the marking state (-12 V) on hardware reset when the transmitter is empty or when loop mode operation is initiated.
RxD	Received Data, receives data from the communications link.
DTR	Data Terminal Ready, indicates to the modem etc. that the on-board UART is ready to establish a communication link.
DSR	Data Set Ready, indicates that the modem etc. is ready to establish a communications link.
RTS	Request To Send, indicates to the modem etc. that the on-board UART is ready to exchange data.
CTS	Clear To Send, indicates that the modem or data set is ready to exchange data.
DCD	Data Carrier Detect, indicates that the modem or data set has detected the data carrier.
RI	Ring Indicator, indicates that the modem has received a ringing signal from the telephone line.

The pinout of serial ports COM1 (J21), COM2 (J25):


Note	Ioh/Iol	Type	Signal	PIN		Signal	Type	Ioh/Iol	Note
	-	I	DCD	1	2	DSR	I	-	
	-	I	RxD	3	4	RTS	O		
		O	TxD	5	6	CTS	I	-	
		O	DTR	7	8	RI	I	-	
	-	PWR	GND	9	10	5V	PWR	-	1



The COM1, COM2 5V supply is fused with common 1.5A resettable fuse.

DB9 adapter cables (PN 821016 200 mm long and 821017 100 mm long) are available for implementing standard COM ports on the chassis.

Available cable kit (DB9 adapter cables):

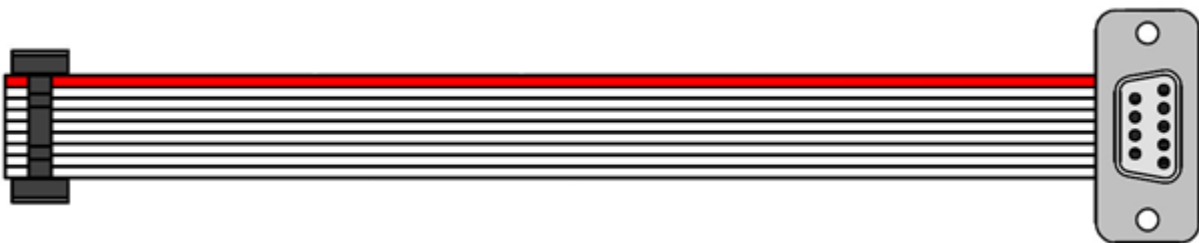

PN 821017 - 100 mm or PN 821016 - 200 mm

7.11. LVDS Flat Panel Connector (J33)

The LVDS connector is based on 40 pole connector type Don Connex C44-40BSB1-G.

Note	Type	Signal	PIN		Signal	Type	Note
Max. 0.5 A	PWR	+12 V	1	2	+12 V	PWR	Max. 0.5 A
Max. 0.5 A	PWR	+12 V	3	4	+12 V	PWR	Max. 0.5 A
Max. 0.5 A	PWR	+12 V	5	6	GND	PWR	Max. 0.5 A
Max. 0.5 A	PWR	+5 V	7	8	GND	PWR	Max. 0.5 A
Max. 0.5 A	PWR	LCDVCC	9	10	LCDVCC	PWR	Max. 0.5 A
2K2Ω, 3.3 V	OT	DDC CLK	11	12	DDC DATA	OT	2K2Ω, 3.3 V
3.3 V level	OT	BKLTCTL	13	14	VDD ENABLE	OT	3.3 V level
3.3 V level	OT	BKLTEN#	15	16	GND	PWR	Max. 0.5 A
	LVDS	LVDS A0-	17	18	LVDS A0+	LVDS	
	LVDS	LVDS A1-	19	20	LVDS A1+	LVDS	
	LVDS	LVDS A2-	21	22	LVDS A2+	LVDS	
	LVDS	LVDS ACLK-	23	24	LVDS ACLK+	LVDS	
	LVDS	LVDS A3-	25	26	LVDS A3+	LVDS	
Max. 0.5 A	PWR	GND	27	28	GND	PWR	Max. 0.5 A
	LVDS	LVDS B0-	29	30	LVDS B0+	LVDS	
	LVDS	LVDS B1-	31	32	LVDS B1+	LVDS	
	LVDS	LVDS B2-	33	34	LVDS B2+	LVDS	
	LVDS	LVDS BCLK-	35	36	LVDS BCLK+	LVDS	
	LVDS	LVDS B3-	37	38	LVDS B3+	LVDS	
Max. 0.5 A	PWR	GND	39	40	GND	PWR	Max. 0.5 A



The mITX-BDW-U on-board LVDS connector supports single and dual channel, 18/24 bit SPWG panels, up to a resolution of 1600x1200 or 1920x1080, and with limited frame rate up to 1920x1200.

Signal Description – LVDS Flat Panel Connector:

Signal	Description
LVDS A0..A3	LVDS A Channel data
LVDS ACLK	LVDS A Channel clock
LVDS B0..B3	LVDS B Channel data
LVDS BCLK	LVDS B Channel clock
BKLTCTL	Backlight control (1), PWM signal to implement voltage in the range 0-3.3 V
BKLTEN#	Backlight Enable signal (active low) (2)
VDD ENABLE	Output Display Enable.
LCDVCC	VCC supply to the display. 5 V or 3.3 V (1 A Max.) selected in BIOS setup menu. Power sequencing depends on LVDS panel selection. (Shared with eDP connector)
DDC CLK	DDC Channel Clock



Windows API will be available to operate the BKLTCTL signal. Some Inverters have a limited voltage range 0- 2.5V for this signal: If voltage is > 2.5V the Inverter might latch up. Some Inverters generate noise on the BKLTCTL signal, causing the LVDS transmission to fail (corrupted picture on the display). By adding a 1Kohm resistor in series with this signal, mounted at the Inverter end of the cable kit, the noise is limited and the picture is stable.

If the Backlight Enable is required to be active high, check the following BIOS Chipset setting: Backlight Signal Inversion = Enabled.

7.12. Feature Connector (J28)

Note	Pull U/D	Ioh/Iol	Type	Signal	PIN		Signal	Type	Ioh/Iol	Pull U/D	Note
2	2M/	-	I	CASE_OPEN#	1	2	SMBC		/4mA	10K/	1
	-	25/25mA	O	S5#	3	4	SMBD		/4mA	10K/	1
	-	25/25mA	O	PWR_OK	5	6	EXT_BAT	PWR	-	-	
	-		I	TOUCH_RST#	7	8	TOUCH_INTR#	O	-	-	
	-	-	PWR	SB3V3	9	10	SB5V	PWR	-	-	
	-		IOT	GPIO0	11	12	GPIO1	IOT		-	
	-		IOT	GPIO2	13	14	GPIO3	IOT		-	
	-		IOT	GPIO4	15	16	GPIO5	IOT		-	
	-		IOT	GPIO6	17	18	GPIO7	IOT		-	
	-	-	PWR	GND	19	20	GND	PWR	-	-	
	-		I	GPIO8	21	22	GPIO9	I		-	
	-		I	GPIO10	23	24	GPIO11	I		-	
	-		I	GPIO12	25	26	GPIO13	IOT		-	
	-		IOT	GPIO14	27	28	GPIO15	IOT		-	
	-		IOT	GPIO16	29	30	GPIO17	IOT		-	
	-	-	PWR	GND	31	32	GND	PWR	-	-	
	-	8/8 mA	O	EGCLK	33	34	EGCS#	O	8/8mA	-	
	-	8/8 mA		EGAD	35	36	TMA0	O			
	-		PWR	+12 V	37	38	GND	PWR	-	-	
4	-1K/	-	I	TOUCH_I2C_C LK	39	40	TOUCH_I2C_D AT	I/O	-	1K/	4
	-	-	PWR	GND	41	42	GND	PWR	-	-	
	-	-	PWR	GND	43	44	S3#	O	25/25mA	-	



1. Pull-up to +3V3Dual (+3V3 or SB3V3).
2. Pull-up to on-board Battery.
3. Pull-up to +3V3.
4. Pull-up to SB3V3.

Signal	Description
CASE_OPEN#	CASE OPEN, used to detect if the system case has been opened. This signal's status is readable, so it may be used like a GPI when the Intruder switch is not required.
SMBC	SMBus Clock signal
SMBD	SMBus Data signal
S3#	S3 sleep mode, active low output, optionally used to deactivate external system.
S5#	S5 sleep mode, active low output, optionally used to deactivate external system.
PWR_OK	PoWeR OK, signal is high if no power failures are detected. (This is not the same as the P_OK signal generated by ATX PSU).
EXT_BAT	(EXTernal BATtery) option for connecting + terminal of an external primary cell battery (2.5 - 3.47 V) (- terminal connected to GND). The external battery is protected against charging and can be used with/without the on-board battery installed.
SB3V3	Max. load is 0.75 A (1.5 A < 1 sec.)
SB5 V	StandBy +5 V supply.
TOUCH_I2C_DAT	Serial I/O – I2 C interface data Line
TOUCH_I2C_CLK	Serial I/O – I2 C interface clock Line
TOUCH_RST#	Serial I/O –interface reset
TOUCH_INTR#	Serial I/O –interrupt line

Signal	Description
GPIO0..17	General Purpose Inputs / Output. These Signals may be controlled or monitored through the use of the KT-API-V2 (Application Programming Interface).
EGCLK	Extend GPIO Clock signal
EGAD	Extend GPIO Address Data signal
EGCS#	Extend GPIO Chip Select signal, active low
TMA0	Timer Output
+12 V	Max. load is 0.75 A (1.5 A < 1 sec.)


The GPIO's are controlled via the ITE IT8528E Embedded Controller. Each GPIO has 100pF to ground, clamping Diode to 3V3 and has multiplexed functionality. Some pins can be DAC (Digital to Analogue Converter output), PWM (Pulse Width Modulated signal output), ADC (Analogue to Digital Converter input), TMRI (Timer Counter Input), WUI (Wake Up Input), RI (Ring Indicator Input) or some special function.

Signal	IT8516F pin name	Type	Description
GPIO0	DAC0/GPJ0	AO/IOS	
GPIO1	DAC1/GPJ1	AO/IOS	
GPIO2	DAC2/GPJ2	AO/IOS	
GPIO3	DAC3/GPJ3	AO/IOS	
GPIO4	PWM2/GPA2	O8/IOS	
GPIO5	PWM3/GPA3	O8/IOS	
GPIO6	PWM4/GPA4	O8/IOS	
GPIO7	PWM5/GPA5	O8/IOS	
GPIO8	ADC0/GPI0	AI/IS	
GPIO9	ADC1/GPI1	AI/IS	
GPIO10	ADC2/GPI2	AI/IS	
GPIO11	ADC3/GPI3	AI/IS	
GPIO12	ADC4/WUI28/GPI4	AI/IS/IS	
GPIO13	RI1#/WUI0/GPD0	IS/IS/IOS	
GPIO14	RI2#/WUI1/GPD1	IS/IS/IOS	
GPIO15	TMRI0/WUI2/GPC4	IS/IS/IOS	
GPIO16	TMRI1/WUI3/GPC6	IS/IS/IOS	
GPIO17	L80HLAT/BA0/WUI24/GPE0	O4/O4/IS/IOS	

Available cable kit and Break-Out-Board:



PN 1052-5885 Cable, Feature 44pol 1 to1, 300 mm

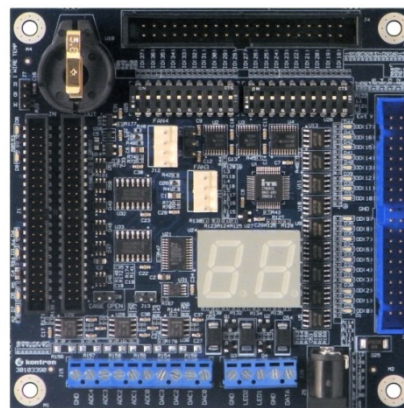

PN 820978 Feature BOB (Break-Out-Board)

7.13. “Load Default BIOS Settings” Jumper (JP1)

The “Load Default BIOS Settings” Jumper (JP1) can be used to recover from incorrect BIOS settings. As an example, an incorrect BIOS setting that causes the attached display not to turn on can be erased by this Jumper.

The Jumper has 6 positions: Pin 5-6 are used for this function.

7.14. Always On jumper setting (JP1)

When the jumper is installed in the (JP1) Pin 1-2 “Always On” position, then the board will automatically power up, when the external power supply is switched ON.

When jumper is in not mounted, then the Always On feature is disabled and it might be necessary to activate the power on button (PWRBTN_IN#) at the Front Panel connector (FRONTPNL) in order to switch on the board.

7.15. SPI Connector (J30)

The SPI Connector is normally not used. If however a SPI BIOS is connected via the SPI Connector then the board will attempt to boot from it.

Note	Pull U/D	Ioh/Iol	Type	Signal	PIN		Signal	Type	Ioh/Iol	Pull U/D	Note
1	-			CLK	1	2	SB3V3	PWR	-	-	
	-		I	CS0#	3	4	ADDIN	IO		/10K	
	10K/		-	NC	5	6	NC	-	-	-	
	10K/		IO	MOSI	7	8	ISOLATE#	IO		100K	
	-		IO	MISO	9	10	GND	PWR	-	-	
	1K		IO	SPI_I02_#WP	11	12	SPI_I03_#HOLD	IO		1K	

Signal	Description
CLK	Serial Clock
SB3V3	3.3 V Standby Voltage power line. Normally output power, but when Motherboard is turned off then the on-board SPI Flash can be 3.3 V power sourced via this pin.
CS0#	CS0# Chip Select 0, active low.
ADDIN	ADDIN input signal must be NC.
MOSI	Master Output, Slave Input.
ISOLATE#	The ISOLATE# input, active low, is normally NC, but must be connected to GND when programming the SPI flash. Power Supply to the Motherboard must be turned off when loading SPI flash. The pull up resistor is connected via diode to 5VSB.
MISO	Master Input, Slave Output
SPI_I02_#WP	SPI Data I/O: A bidirectional signal used to support Dual IO Fast Read, Quad IO Fast Read and Quad Output Fast Read modes. The signal is not used in Dual Output Fast Read mode.
SPI_I03_#HOLD	SPI Data I/O: A bidirectional signal used to support Dual IO Fast Read, Quad IO Fast Read and Quad Output Fast Read modes. The signal is not used in Dual Output Fast Read mode.

7.16. LPC Connector (J31)

The LPC connector is in general unsupported. Only under special circumstances may the LPC interface be of interest.

Note	Pull U/D	Ioh/Iol	Type	Signal	PIN		Signal	Type	Ioh/Iol	Pull U/D	Note
	-	-	PWR	LPC CLK	1	2	GND				
	-	-	PWR	LPC FRAME#	3	4	KEY				
				LPC RST#	5	6	+5 V				
				LPC AD3	7	8	LPC AD2				
				+3V3	9	10	LPC AD1				
				LPC AD0	11	12	GND				
				SMB_CLK	13	14	SMB_DATA				
				SB3V3	15	16	LPC SERIRQ				
				GND	17	18	CLKRUN#				
				SUS_STAT#	19	20	TPM_DRQ #0				

8/ Slot Connectors (miniPCIe)

MiniPCIe with USB2.0 & SIM-card support (J27).

Slot J27 supports mPCIe, USB2.0 and SIM-card socket (J35).

The SIM-card socket makes it possible to use a 2G/3G-wireless modem in this mPCIe slot.

The USB supports WAKE function.

Note	Type	Signal	PIN		Signal	Type	Note
		WAKE#	1	2	+3V3	PWR	
	NC	NC	3	4	GND	PWR	
	NC	NC	5	6	+1.5V	PWR	
1		CLKREQ#	7	8	UIM_PWR	PWR	
	PWR	GND	9	10	UIM_DATA	NC	
		PCIE_mini CLK#	11	12	UIM_CLK	NC	
		PCIE_mini CLK	13	14	UIM_RESET	NC	
	PWR	GND	15	16	UIM_VPP	NC	
	NC	UIM_IC_DM	17	18	GND	PWR	
	NC	UIM_IC_DP	19	20	W_Disable#		2
	PWR	GND	21	22	RST#		
		SATA5_RXP	23	24	+3V3	PWR	
		SATA5_RXN	25	26	GND	PWR	
	PWR	GND	27	28	+1.5 V	PWR	
	PWR	GND	29	30	SMB_CLK		
		SATA5_TXN	31	32	SMB_DATA		
		SATA5_TXP	33	34	GND	PWR	
	PWR	GND	35	36	USB12N	IO	
	PWR	GND	37	38	USB12P	IO	
	PWR	+3V3	39	40	GND	PWR	
	PWR	+3V3	41	42	NC	NC	
		SATA_DET5#	43	44	NC	NC	
	NC	NC	45	46	NC	NC	
	NC	NC	47	48	+1.5 V	PWR	
	NC	NC	49	50	GND	PWR	
	NC	NC	51	52	+3V3	PWR	



10K ohm pull-up to 3V3.

2K2 ohm pull-up to 3V3 Dual.

9/ On-board and Mating Connector types

The Mating Connectors / Cables are connectors or cable kits that fit on the On-board connector. The Kontron cable kits marked with "*" are included in the "miTX-BDW-U Cable & Driver Kit" PN 826603.

Connector	On-board Connectors		Mating Connectors / Cables	
	Manufacturer	Type no.	Manufacturer	Type no.
FANCPU (J29)	Foxconn	HF2704E-M1	AMP	1375820-4 (4-pole)
FANSYS (J28)	Foxconn	HF2704F-M2	AMP	1375820-3 (3-pole)
ccTALK (J25)	AMP	1470947-1		
KBDMSE (J26)	Molex	22-23-2061	Molex	22-01-2065
	Tyco AMP	3-647050-6	Kontron	1046-3381 (kit) *
	Jaws	254K-WS-06T-S	Kontron	1053-2384 (kit)
LPC (J30)	Wieson	G2100C888-034H		
	Foxconn	HC11101-P0		
SATA0,1 (J3,J2)	Lotes	ABA-SAT-010-K08	Molex	67489-8005
			Kontron	821035 (kit)
SATA,2,3 (J1,J4)	Lotes	ABA-SAT-010-K07	Molex	67489-8005
	Molex	47155-4001	Kontron	821035 (kit) *
ATX+12V-24p (J20)	Molex	44206-0002	Molex	5557-24R
ATX+12V-4p (J21)	Lotes	ABA-POW-003-K02	Molex	39-01-2045
Speaker (J34)	Molex	53047-0410		
LVDS (J31)	Don Connex	C44-40BSB1-G	Don Connex	A32-40-C-G-B-1
	Samtec	SHF-120-01-FDSMKTR	Kontron	910000005
	Hon Kon	HB12-220-VFS-20R	Kontron	821515 (kit) *
	Wieson	G2124-03200101-00	Kontron	821155 (kit)
COM1,2 (J19,J18)	Pinrex	510-90-10GB00	Molex	90635-1103
	Cen Link	ZP91-014B1-10Y1	Kontron	821016 (kit)
	Foxconn	HL2205F	Kontron	821017 (kit) *
USB8/9 (*)	(FRONTPNL)	-	Kontron	821401 (kit)
SPI (J32)	Pinrex	210-92-06GB01		
SPDIF-out (J33)	Molex	53047-0210		
FRONTPNL (J12)	Pinrex	510-80-24GB05	Molex	90635-1243
	Foxconn	HL2112V-P9	Kontron	821042 (kit) *
FEATURE (J27)	Pinrex	52A-90-44GB00	Don Connex	A05c-44-B-G-A-1-G
	Molex	87831-4420	Kontron	1052-5885 (kit) *

* USB4/USB5 are located in FRONTPNL connector.



More than one connector can be listed for each type of on-board connectors. Therefore, several types with the same fit, form and function are approved and could be used as an alternative. Please note that standard connectors like DP, miniPCIe, Audio Jack, Ethernet and USB are not included in the list.


10/ BIOS

The BIOS Setup is used to view and configure BIOS settings for the board. Access the BIOS Setup by pressing the <F2>-key after the Power-On Self-Test (POST) memory test begins and before the operating system boot begins.

The BIOS settings will be loaded automatically when loading "Load Setup Defaults" see "Exit" menu. In this User Guide, the default settings are indicated in **bold**. Please note that "Load Optimized Defaults" might have a different set of default values.

The F9 and F10 keys only work if pressed from a keyboard (F9 and F10 do not work from a console terminal, use "Exit" menu instead).

10.1. Main

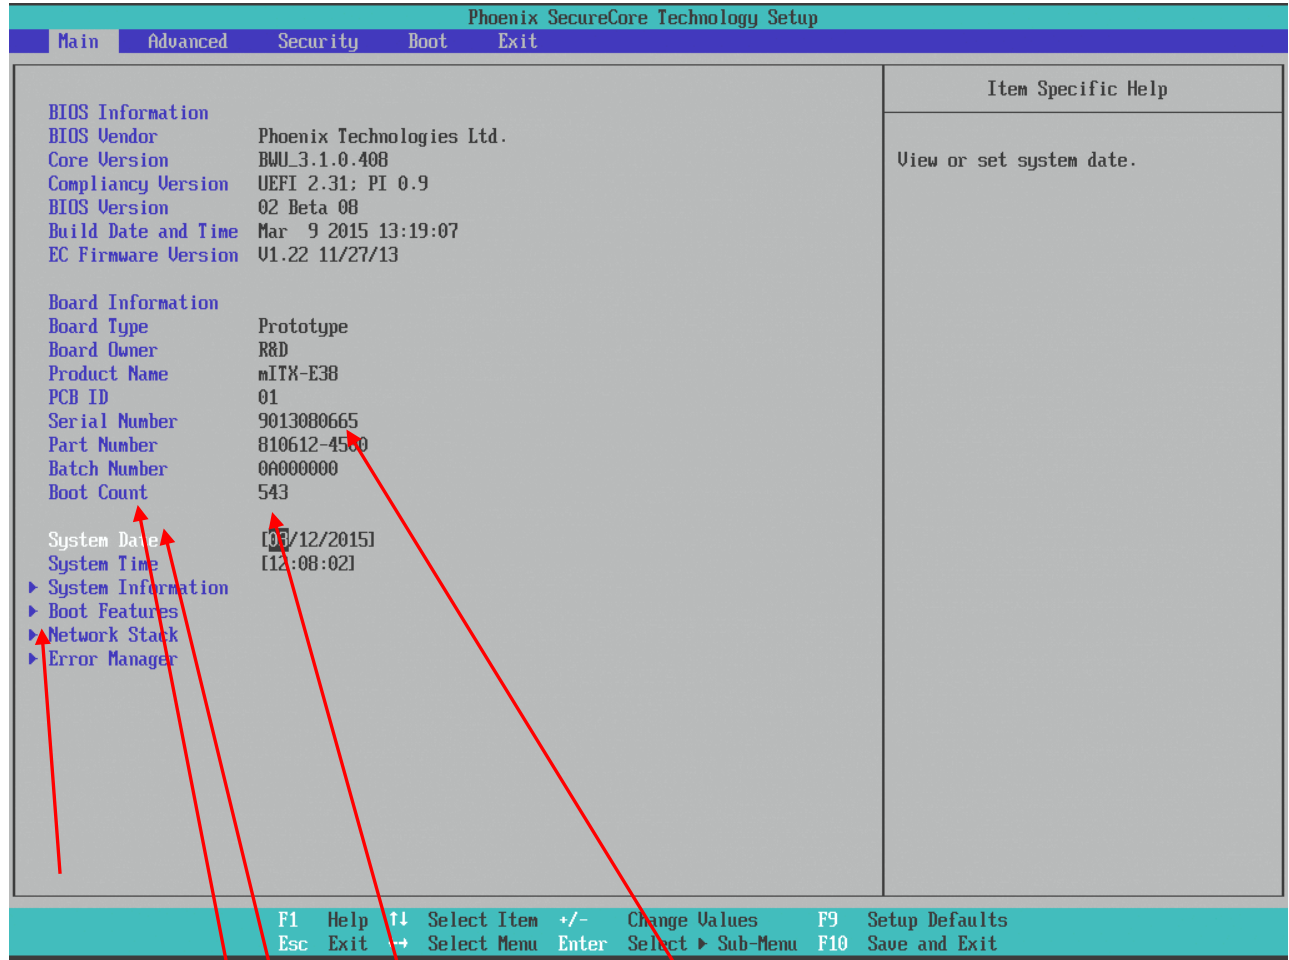

Sub Menu available.

White text for actual selected function that can be modified.

Blue text for functions (not all can be modified).

Black background for actual selection. Black text actual settings.

Feature	Options	Description
System Date	MM/DD/YYYY	Set the system date
System Time	HH:MM:SS	Set the system time

The following table describes the changeable settings:

System Information

The screenshot shows the Phoenix SecureCore Technology Setup BIOS interface. At the top, there is a teal header with the text 'Phoenix SecureCore Technology Setup'. Below this is a dark blue bar with the word 'Main' in white. The main content area is a light gray box titled 'System Information' at the top center. It contains the following system details:

BIOS Version	T4006_02.b08
Build Time	03/09/2015
Processor Type	Intel(R) Core(TM) i3-5010U CPU @ 2.10GHz
Processor Speed	2.100 GHz
System Memory Speed	1600 MHz
L2 Cache RAM	256 KB
Total Memory	1024 MB
[1]	0 MB
[2]	1024 MB (DDR3- 1600) @ ChannelB-DIMM0

At the bottom of the screen, there is a teal footer bar containing navigation instructions:

F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults	
Esc	Exit	←→	Select Menu	Enter	Select ▶	Sub-Menu	F10	Save and Exit

Boot Features

Phoenix SecureCore Technology Setup		
Main		
Boot Features		Item Specific Help
NumLock:	[On]	Selects Power-on state for NumLock.
Timeout	[2]	
CSM Support	[Yes]	
Quick Boot	[Disabled]	
Dark Boot	[Disabled]	
Diagnostic Splash Screen	[Enabled]	
Diagnostic Summary Screen	[Disabled]	
BIOS Level USB	[Enabled]	
USB Legacy	[Enabled]	
Console Redirection	[Disabled]	
Allow Hotkey in S4 resume	[Enabled]	
UEFI Boot	[Disabled]	
Legacy Boot	[Enabled]	
Boot in Legacy Video Mode	[Disabled]	
Load OPROM	[On Demand]	
Boot Priority	[UEFI First]	

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
NumLock:	On Off	Select Power-on state for NumLock.
Timeout	2 Note 1	Number of seconds that P.O.S.T will wait for the user input before booting.
CSM Support	No Yes	Compatibility Support Module that provides backward compatibility services for legacy BIOS services, like int10/int13, dependent OS.
Quick Boot	Disabled Enabled	Enable/Disable quick boot
Dark Boot	Disabled Enabled	Enable/Disable dark boot
Diagnostic Splash Screen	Disabled Enabled	If you select 'Enabled' the diagnostic splash screen always displays during boot. If you select 'Disabled' the diagnostic splash screen does not display unless you press HOTKEY during boot.
Diagnostic Summary Screen	Disabled Enabled	Display the diagnostic summary screen during boot.
BIOS Level USB	Disabled Enabled	Enable/Disable all BIOS support for USB in order to reduce boot time. Note that this will prevent using a USB keyboard in setup or a USB biometric scanner such as a finger print reader to control access to setup, but does not prevent the operating system for supporting such hardware.

USB Legacy	Disabled Enabled	Enable/Disable USB BIOS SMM support for mouse, keyboard, mass storage, etc. in legacy operating systems such as DOS.
Console Redirection	Disabled Enabled	Enable/Disable Universal Console Redirection.
Allow Hotkey in S4 resume	Disabled Enabled	Enable hotkey detection when system resuming from Hibernate state.
UEFI Boot	Disabled Enabled	Enable the UEFI boot.
Legacy Boot	Disabled Enabled	Enable the Legacy boot.
Boot in Legacy Video Mode	Disabled Enabled	Enable to force the display adapter to switch the video mode to Text Mode 3 at the end of BIOS POST for non-UEFI boot mode (Legacy Boot). Some legacy software, such as DUET, requires that the BIOS explicitly enter text video mode prior to boot.
Load OPROM	All On Demand	Load all OPROMs or on demand according to the boot device.
Boot Priority	UEFI First Legacy First	Select priority of boot option between UEFI and Legacy.



Use either digit keys to enter value (0 – 99) or +/- keys to increase/decrease values.

Network Stack

Function	Selection	Description
Network Stack (Note 1)	Disabled Enabled	Enable/Disable UEFI Network Stack
IPv4 (Note 2)	Disabled Enabled	Enable/Disable IPv4
IPv6 (Note 2)	Disabled Enabled	Enable/Disable IPv6
UEFI PXE Boot Priority (Note 2)	IPv6 First IPv4 First	Set the priority of UEFI PXE Boot



To use legacy PXE boot support, disable this option.




Only visible if Network Stack is enabled.

Error Manager

Phoenix SecureCore Technology Setup	
Main	
Error Manager	Item Specific Help
View Error Manager Log [Enter] Clear Error Manager Log [Enter]	Display Error Manager Log information.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
View Error Manager Log	Enter	Display Error Manager Log information
Clear Error Manager Log	Enter	Clear Error Manager Log

10.2. Advanced

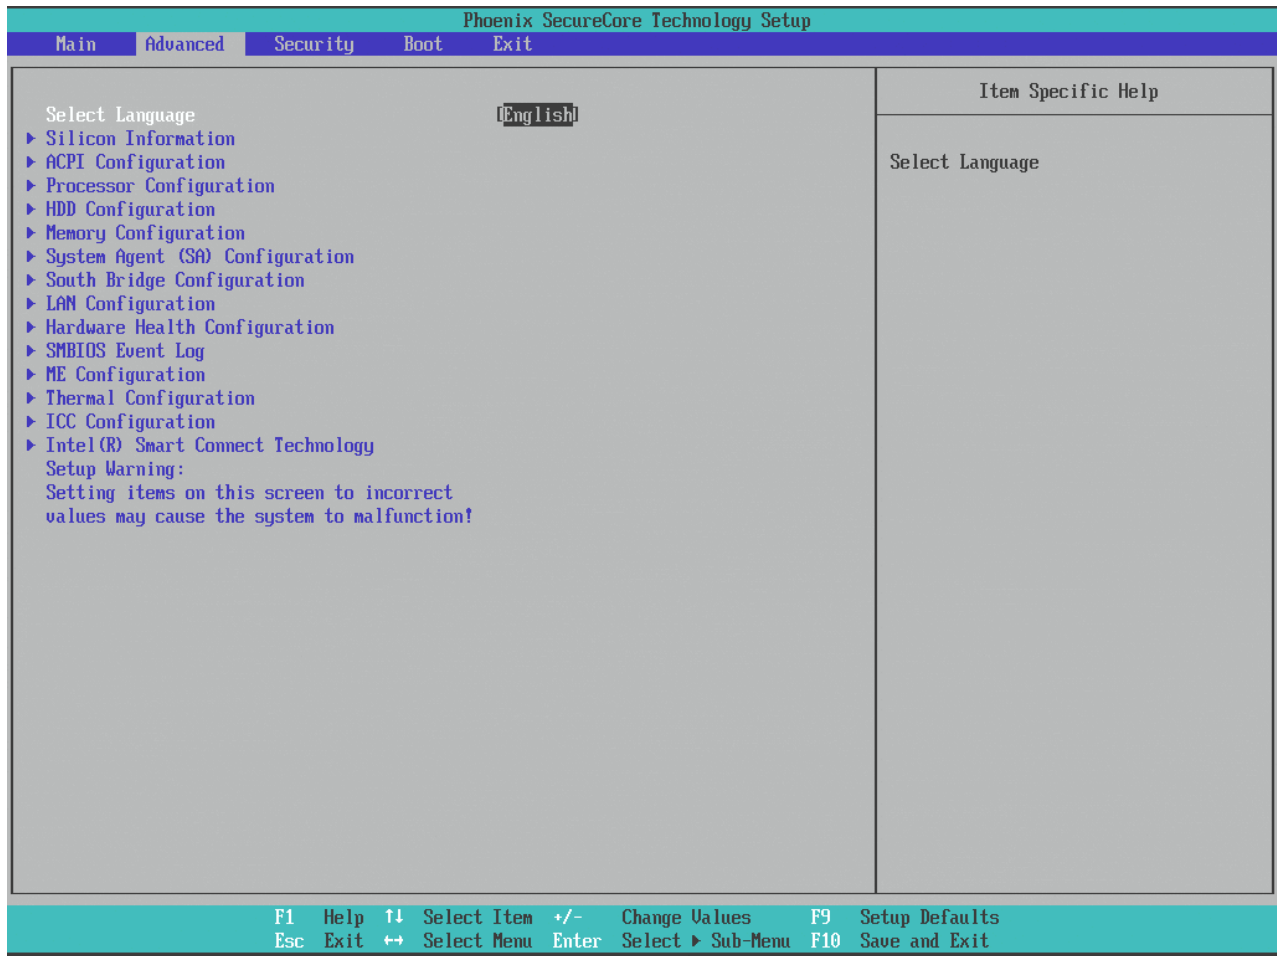

The Advanced (top) menu contains only submenu selections that are described in more detail on the following pages. To selection a submenu activate the ↑↓ keys until the requested submenu turns white, then activate the <Enter>.

Function	Selection	Description
Select Language	English Francais Etc.	Select Language

Silicon Information


Phoenix SecureCore Technology Setup	
Advanced	
Silicon Information	
CPU Information	
Family	4th Generation Intel(R) Core Processors
Model	Broadwell ULT Mobile
CpuId	306D4
Stepping	F0 Stepping
mCode PatchId	11
Core Frequency	2.10GHz
L1 Cache	32 KB 8-Way
L2 Cache	256 KB 8-Way
L3 Cache	3072 KB 12-Way
GT Info	GT2 (DeviceId = 0x1616)
PCH Information	
Name	WildcatPoint-LP
Stepping	B2 Stepping
SPI Read Frequency	50 MHz
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

ACPI Configuration

Phoenix SecureCore Technology Setup		
Advanced		
ACPI Configuration		Item Specific Help
FACP - RTC S4 Flag Value	[Enabled]	Valid Only for ACPI. Controls the value for the RTC S4 flag in the FACP table.
APIC - IO APIC Mode	[Enabled]	
ALS Support	[Legacy]	
EMA Support	[Disabled]	
MEF Support	[Disabled]	
Enabled PTID	[Disabled]	
FACP - PM Timer Flag Value	[Disabled]	
FACP - Low Power S0 Idle Capable Flag Value	[Disabled]	
CPPC	[Enabled]	
CPPC Platform Sci enable	[Enabled]	
Native PCI Express	[Enabled]	
Runtime D3 Support	[Disabled]	

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
FACP – KTC S4 Flag Value	Disabled Enabled	Valid Only for ACPI. Controls the value for the RTC S4 flag in the FACP table.
APIC – IO APIC Mode	Disabled Enabled	This is valid only for WIN2000, Windows XP. A fresh install of OS must occur when APIC mode is enabled. The APIC table will be pointed to by the RSDT, the Local APIC will be initialized, and the proper enable bits are set in the PCH.
ALS Support	Legacy ACPI	Valid only for ACPI. Legacy = ALS support through the IGD INT10 function. ACPI = ALS support through an ACPI ALS driver.
EMA Support	Disabled Enabled	Valid only for ACPI. Controls the EMA device in an ACPI environment.
MEF Support	Disabled Enabled	Valid only for ACPI. Controls the Mobile East Fork feature support in an ACPI environment.
Enabled PTID	Disabled Enabled	Enable/Disable Power and Temperature Instrumentation Details.
FACP – PM Timer Flag Value	Disabled Enabled	Valid only for ACPI. Controls the PM Timer Flag Value in the FACP table.
FACP – Low Power S0 Idle Capable Flag Value	Disabled Enabled	Valid only for ACPI. Controls the Low Power S0 Idle Capable Flag (Bit 21) in the FACP table.
CPPC	Disabled Enabled	ACPI 5.0 Collaborative Processor Performance Control. When CPPC is enabled, the newer ACPI 5.0 method for processor performance control will be used. When disabled, the older methods (P-State and T-State) will be used.

CPPC Platform Sci enable	Disabled Enabled	When enabled, the platform will generate a GPE/SCI upon CPPC command completion. If disabled, the OS must poll for command completion.
Native PCI Express	Disabled Enabled	Native PCI Express Enable/Disable.
Runtime D3 Support	Disabled Enabled	Enable/Disable ACPI runtime D3 support. <div style="display: flex; align-items: center;">  <div style="border: 1px solid black; padding: 5px;"> <p>To support RTD3, there must be hardware related design to control devices powered by software. A custom BIOS configuration may be needed</p> </div> </div>

Processor Configuration

Phoenix SecureCore Technology Setup

Advanced

Processor Configuration	Item Specific Help
Active Processor Cores [All]	Number of cores to enable in each processor package.
Intel(R) HT Technology [Enabled]	
CPU Flex Ratio Override [Disabled]	
Enabled XD [Enabled]	
Limit Cpuid Maximum value [Disabled]	
Enable for BIST [Disabled]	
Machine Check [Enabled]	
Intel(R) Virtualization Technology [Enabled]	
Intel(R) Streamer Prefetcher [Enabled]	
Intel(R) Spatial Prefetcher [Enabled]	
MP MWAIT/Cx State Support [Enabled]	
BIOS Guard [Disabled]	
▶ Processor Power Management	

F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults
Esc	Exit	↔	Select Menu	Enter	Select ▶ Sub-Menu	F10	Save and Exit

Function	Selection	Description
Active Processor Cores	All 1 2 3	Number of cores to enable in each processor package. <i>Note: number of cores vary according to the CPU SKU present.</i>

Intel® HT Technology	Disabled Enabled	When Disabled only one thread per enabled core is enabled.
CPU Flex Ratio Override	Disabled Enabled	Enable/Disable CPU Flex Ratio Programming
Enable XD	Disabled Enabled	Enabled Execute Disabled functionality. Also known as Data Execution Prevention (DEP).
Limit Cpuid Maximum value	Disabled Enabled	When set to enable, this causes the cupid to return maximum value of 3.
Enable for BIST	Disabled Enabled	Enable/Disable BIST (Built-In Self Test) on reset.
Machine Check	Disabled Enabled	Enable processor Machine Check feature (disable only for test).
Intel® Virtualization Technology	Disabled Enabled	When enabled. A VMM can utilize the additional hardware capabilities.
Intel® Streamer Prefetcher	Disabled Enabled	Enable or disable MLC Streamer Prefetcher.
Intel® Spatial Prefetcher	Disabled Enabled	Enable or disable MLC Spatial Prefetcher
MP MWAIT/Cx State Support	Disabled Enabled	
BIOS Guard	Disabled Enabled	Enable/Disable BIOS Guard feature.

Processor Power Management

Phoenix SecureCore Technology Setup	
Advanced	
Processor Power Management	Item Specific Help
Intel(R) SpeedStep(tm) [Enabled]	Enable processor performance states (P-States).
Boot Performance Mode [Max Performance]	
Turbo Mode [Enabled]	
Turbo Mode Power Limit Lock [Disabled]	
Long Power Limit [0]	
Long Power Limit Time [28]	
Short Power Limit [0]	
Short Duration Turbo Mode [Enabled]	
Power Limit 3 [0]	
Power Limit 3 Time [0]	
Power Limit 3 Duty Cycle [0]	
Energy Efficient Enable [Enabled]	
Configure TDP Boot Mode [Nominal]	
Lock TDP setting [Disabled]	
CTDP BIOS control [Disabled]	
TDP Custom Setting [Disabled]	
C-States [Enabled]	
Extend C-States [Enabled]	
C3-State [Enabled]	
C6-State [Enabled]	
C6 Latency [Short]	
C7-State [C7s]	
C7 Latency [Long]	
C8-State [Enabled]	
C9-State [Enabled]	
C10-State [Enabled]	
C-State Auto Demotion [C1 and C3]	
C-State UnDemotion [C1 and C3]	
Package C State Demotion [Disabled]	
Package C State UnDemotion [Disabled]	

F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults
Esc	Exit	↔	Select Menu	Enter	Select ▶ Sub-Menu	F10	Save and Exit

Phoenix SecureCore Technology Setup

Advanced

Processor Power Management	Item Specific Help
<p>Short Power Limit [0]</p> <p>Short Duration Turbo Mode [Enabled]</p> <p>Power Limit 3 [0]</p> <p>Power Limit 3 Time [0]</p> <p>Power Limit 3 Duty Cycle [0]</p> <p>Energy Efficient Enable [Enabled]</p> <p>Configure TDP Boot Mode [Nominal]</p> <p>Lock TDP setting [Disabled]</p> <p>CTDP BIOS control [Disabled]</p> <p>TDP Custom Setting [Disabled]</p> <p>C-States [Enabled]</p> <p>Extend C-States [Enabled]</p> <p>C3-State [Enabled]</p> <p>C6-State [Enabled]</p> <p>C6 Latency [Short]</p> <p>C7-State [C7s]</p> <p>C7 Latency [Long]</p> <p>C8-State [Enabled]</p> <p>C9-State [Enabled]</p> <p>C10-State [Enabled]</p> <p>C-State Auto Demotion [C1 and C3]</p> <p>C-State UnDemotion [C1 and C3]</p> <p>Package C State Demotion [Disabled]</p> <p>Package C State UnDemotion [Disabled]</p> <p>C State Pre-Wake [Enabled]</p> <p style="text-align: right;">[Range [255:0] = [31.875:0] in Watt.]</p> <p style="text-align: right;">[Range [255:0] = [31.875:0] in Watt.]</p> <p style="text-align: right;">[Range [255:0] = [31.875:0] in Watt.]</p> <p style="text-align: right;">[Range [255:0] = [31.875:0] in Watt.]</p> <p>Lake Tiny [Disabled]</p>	<p>Turbo Mode Short Duration Power Limit (aka Power Limit 2) in Watts. The value may vary from 0 to Fused Value. If the value is 0, the fused value will be programmed. A value greater than fused TDP value will not be programmed.</p>


F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
Intel® SpeedStep™	Disabled Enabled	Enable processor performance states (P-States).
Boot Performance Mode	Max Performance Max Battery Auto	Select the performance state that the BIOS sets before OS handoff.
Turbo Mode	Disabled Enabled	Enable processor Turbo Mode. EMTTM must also be enabled.
Turbo Mode Power Limit Lock	Disabled Enabled	Enable/Disable Locking of turbo settings. When Enabled, TURBO_POWER_LIMIT MSR will be locked and a reset will be required to unlock the register.
Long Power Limit	0, 1, 2, ... 200	Turbo Mode Long Duration Power Limit (aka Power Limit 1) in Watts. The value may vary from 0 to Fused Value. If the value is 0, the fused value will be programmed. A value greater than fused TDP value will not be programmed.
Long Power Limit Time	0, 1, ... 28, ... 55, 56	Long Duration Time Window (aka Power Limit 1 Time) value in seconds. The value may vary from 0 to 56. Indicates the time window over which TDP value should be maintained. If the value is 0, the fused value will be programmed.

Short Power Limit	0, 1, ... 32767	Turbo Mode Long Duration Power Limit (aka Power Limit 2) in Watts. The value may vary from 0 to Fused Value. If the value is 0, the fused value will be programmed. A value greater than fused TDP value will not be programmed.
Short Duration Turbo mode	Disabled Enabled	Enable Short Duration Turbo mode for processor.
Power Limit 3	0,1,... , 199,200	Power Limit 3 in Watts. The value may vary from 0 to Fused Value. If the value is 0, the fused value will be programmed. A value greater than fused TPD value will not be programmed.
Power Limit 3 Time	0,1,...55,56	Power Limit 3 value in seconds. The value may vary from 3 to 64. Indicates the time window over which Power Limit 3 value should be maintained. If the value is 0, the fused value will be programmed.
Power Limit 3 Duty Cycle	0,1,... , 99,100	Duty Cycle in percentage that the CPU is required to maintain the Power Limit 3 time.
Energy Efficient Enable	Disabled Enabled	Enable Energy Efficient for processor.
Configure TDP Boot Mode	Nominal Down Up Disabled	Configure TDP Mode as [Nominal] [Up] [Down] [Disabled] TDP selection. Disabled options will skip all cTDP boot configurations but dynamic cTDP can still work.
Lock TDP Setting	Disabled Enabled	Lock TDP in MSR_CONFIG_TDP_CONTROL
CTPD BIOS control	Disabled Enabled	Enables CTPD control via runtime ACPI BIOS methods. This "Bios only" feature does not require EC or driver support.
TDP Custom Setting	Disabled Enabled	Use TDP Custom Setting.
C-States	Disabled Enabled	Enable processor idle power saving states (C-States).
Extend C-States	Disabled Enabled	Enable C-State transitions to occur in combination with P-States.
C3-State	Disabled Enabled	Enable processor idle power saving C3 state.
C6-State	Disabled Enabled	Enable processor idle power saving C6 state.
C6 Latency	Short Long	Configure Short/Long Latency.
C7-State	Disabled C7 C7s	Enable processor idle power saving C7 state.
C7 Latency	Short Long	Configure Short/Long Latency.
C8-State	Disabled Enabled	Enable processor idle power saving C8 state.
C9-State	Disabled Enabled	Enable processor idle power saving C9 state.
C10-State	Disabled Enabled	Enable processor idle power saving C10 state.

C-State Auto Demotion	Disabled C1 C3 C1 and C3	Configure C-State Auto Demotion.
C-State UnDemotion	Disabled C1 C3 C1 and C3	Configure C-State Auto UnDemotion.
Package C State Demotion	Disabled Enabled	Enable/Disable Package C State Demotion.
Package C State UnDemotion	Disabled Enabled	Enable/Disable Package C State UnDemotion.
C State Pre-Wake	Disabled Enabled	Enable/Disable C State Pre-Wake.
Lake Tiny	Disabled Enabled	Lake Tiny Settings.

HDD Configuration

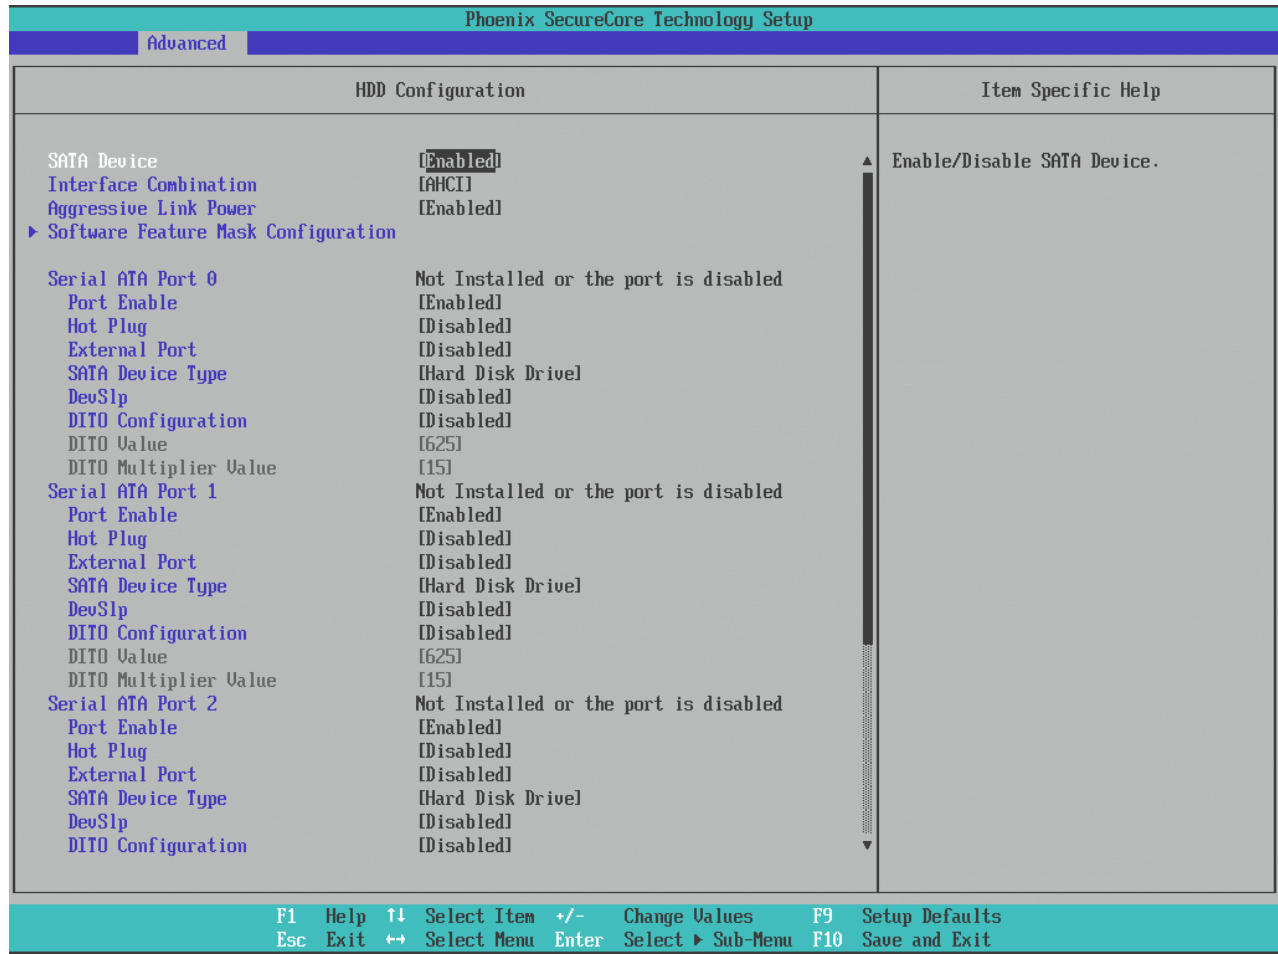

"Software Feature Mask Configuration" see next page.

Function	Selection	Description
SATA Device	Disabled Enabled	Enable/Disable SATA Device.
Interface Combination	IDE AHCI RAID	Select the SATA controllers operation mode.
Serial ATA Port x (x = 0 - 3)	(Device if installed)	
Port Enable	Disabled Enabled	Enable/Disable this port.
Hot Plug	Disabled Enabled	Designates the port as Hot Pluggable. Note: Requires hardware support.
External Port	Disabled Enabled	Configure system to treat the port as internal or external.
SATA Device Type	Hard Disk Drive Solid State Drive	Select 'Solid State Drive' only if a Solid State Drive is connected to this SATA port.
DevSlp	Disabled Enabled	RTD3 Device Sleep Support
DITO Configuration	Disabled Enabled	Enable/Disable Device Sleep Idle Timeout Configuration.
DITO Value	625	
DITO Multiplier Value	15	

Software Feature Mask Configuration

Phoenix SecureCore Technology Setup	
Advanced	
HDD Configuration	Item Specific Help
HDD Unlock [Enabled] LED Locate [Enabled]	If enabled, indicates that the HDD password unlock in the OS is enabled.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
HDD Unlock	Disabled Enabled	If enabled, indicates that the HDD password unlock in the OS is enabled.
LED Locate	Disabled Enabled	If enabled, indicates that the LED/SGPIO hardware is attached and ping to locate feature is enabled on the OS.

Memory Configuration

Phoenix SecureCore Technology Setup		
Advanced		
Memory Configuration		Item Specific Help
Memory Frequency Limiter	[Auto]	Maximum Memory Frequency Selections in Mhz.
Max TOLUD	[Dynamic]	
NMode Support	[Auto]	
Channel A DIMM Control	[Enabled]	
Channel B DIMM Control	[Enabled]	
Memory Remap	[Enabled]	
MRC FastBoot	[Enabled]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
Memory Frequency Limiter	Auto 1067 1333 1600 1867 2133 2400 2667	Maximum Memory Frequency Selections in Mhz.
Max TOLUD	Dynamic 1 GByte 1.25 GByte 1.5 GByte 1.75GByte 2 GByte 2.25 GByte 2.5 GByte 2.75 GByte 3 GByte 3.25 GByte	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller.
NMode Support	Auto 1N Mode 2N Mode	Enable/Disable system to support N Mode.

Channel A DIMM Control	Disabled Enabled	Channel A DIMM control support. Enable or disable DIMMs on Channel A.
Channel B DIMM Control	Disabled Enabled	Channel B DIMM control support. Enable or disable DIMMs on Channel B.
Memory Remap	Disabled Enabled	Enable/Disable Memory Remap above 4GB.
MRC FastBoot	Disabled Enabled	Enable/Disable MRC FastBoot. Generally, this option only takes effect when doing cold boots/resets.

System Agent (SA) Configuration

Phoenix SecureCore Technology Setup

Advanced

System Agent (SA) Configuration	Item Specific Help
<ul style="list-style-type: none"> ▶ DMI Settings ▶ Intel(R) VT for Directed I/O (VT-d) ▶ Graphics Configuration ▶ PEG Port Configuration <p>Cpu Audio Device (D0:D3:F0) [Enabled]</p> <p>CHAP Device (D0:D7:F0) [Disabled]</p> <p>Thermal Device (D0:D4:F0) [Disabled]</p> <p>CRID support [Disabled]</p>	<p>Displays and provides option to change the DMI Settings.</p>

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
Cpu Audio Device (D0:D3:F0)	Disabled Enabled	Enable/Disable Cpu Audio Device.
CHAP Device (D0:D7:F0)	Disabled Enabled	Enable/Disable SA CHAP Device.
Thermal Device (D0:D4:F0)	Disabled Enabled	Enable/Disable SA Thermal Device.
CRID support	Disabled Enabled	Enable Compatible Revision ID.

DMI Settings

Phoenix SecureCore Technology Setup		
Advanced		
DMI Configuration		Item Specific Help
DMI Vc1 Control	[Disabled]	Enable/Disable DMI Virtual channel 1 control.
DMI Vcp Control	[Enabled]	
DMI Vcm Control	[Enabled]	
DMI Link ASPM Control	[LOS And L1]	
DMI Extended Sync	[Disabled]	
DMI Gen2 Support Control	[Enabled]	
DMI De-emphasis Control	[-6 dB]	
DMI IOT Control	[Disabled]	

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
DMI Vc1 Control	Disabled Enabled	Enable/Disable DMI Virtual channel 1 control.
DMI Vcp Control	Disabled Enabled	Enable/Disable DMI Virtual channel P control.
DMI Vcm Control	Disabled Enabled	Enable/Disable DMI Virtual channel M control.
DMI Link ASPM Control	Disabled LOS L1 LOS and L1 Auto	Enable/Disable the control of Active State Power Management on SA side of the DMI Link.
DMI Extended Sync	Disabled Enabled	Enable/Disable DMI Extend Sync control.
DMI Gen2 Support Control	Disabled Enabled Auto	Enable/Disable DMI Gen2 Support Control.
DMI De-emphasis Control	-6 dB -3.5 dB	DeEmphasis Control for DMI.
DMI IOT Control	Disabled Enabled	IOT Control for DMI.

Intel® VT for Directed I/O (VT-d)

Phoenix SecureCore Technology Setup	
Advanced	
Intel(R) VT for Directed I/O (VT-d)	Item Specific Help
Intel(R) VT for Directed I/O(VT-d) [Enabled] X2APIC Opt Out [Enabled]	Enable/Disable Intel(R) Virtualization Technology for Directed I/O (VT-d) by reporting the I/O device assignment to UMM through DMAR ACPI Tables.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
Intel® VT for Directed I/O (VT-d)	Disabled Enabled	Enable/Disable Intel® VT for Directed I/O (VT-d) by reporting the I/O device assignment to VMM through DMAR ACPI Tables.
X2APIC Opt Out	Disabled Enabled	Enable/Disable X2APIC_OPT_OUT bit.

Graphics Configuration

Phoenix SecureCore Technology Setup	
Advanced	
Graphics Configuration	Item Specific Help
<p>Graphics Turbo IMON Current [31]</p> <p>Primary Display Selection [Auto] Internal Graphics [Auto] GTT Size [2MB] Aperture Size [128MB] DVMT Pre-Allocated [32MB] DVMT Total Gfx Mem [256MB] Gfx Low Power Mode [Enabled]</p> <p>▶ IGD Configuration ▶ Intel(R) Ultrabook Event Support</p>	<p>Graphics Turbo IMON Current value supported (14-31)</p>
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit</p>	

Function	Selection	Description
Graphics Turbo IMON Current	14, 15,... 30, 31	Graphics Turbo IMON Current value supported (14 – 31).
Primary Display Selection	IGD PEG PCI Auto	Select the primary display device.
Internal Graphics	Disabled Enabled Auto	Enable/Disable the Internal Graphics Device. This has no effect if external graphics are present.
GTT Size	1 MByte 2 MByte	Gtt Memory Size of IGD.
Aperture Size	128 MByte 256 MByte 512 MByte	Graphics Aperture Size.
DVMT Pre-Allocated	32 MByte 64 MByte 128 MByte	Select Pre-Allocated Graphics Memory size used by the Internal Graphics Device. This has no effect if external graphics are present.
DVMT Total Gfx Mem	128 MByte 256 MByte MAX	DVMT5.0 DVMT Graphic Memory Size. This has no effect if external graphics are present.
Gfx Low Power Mode	Disabled Enabled	Enable/Disable Gfx Low Power Mode.

IGD Configuration

Phoenix SecureCore Technology Setup		
Advanced		Item Specific Help
IGD Configuration		
IGD - Boot Type	[VBIOS Default]	Select the Video Device activated during POST. This has no effect if external graphics are present.
IGD - LCD Panel Type	[VBIOS Default]	
IGD- Panel Scaling	[Auto]	
Backlight Control	[PWM-Normal]	
BIA	[Auto]	
Spread Spectrum clock Chip	[Off]	
IGD - Active LFP	[eDP Port-A]	
Panel Color Depth	[18 Bit]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
IGD – Boot Type	VBIOS Default CRT EFP LFP EFP3 EFP2 LFP2	Select the Video Device activated during POST. This has no effect if external graphics are present.
IGD – LCD Panel Type	VBIOS Default 640 x 480 LVDS Color Panel 800 x 600 LVDS Color Panel 1024 x 768 LVDS Color Panel 1280 x 1024 LVDS Color Panel 1400 x 1050 LVDS Color Panel Reduced Blanking 1400 x 1050 LVDS Color Panel, non-Reduced Blanking 1600 x 1200 LVDS Color Panel 1200 x 768 LVDS Color Panel 1600 x 1050 LVDS Color Panel 1920 x 1200 LVDS Color Panel	Select the video Device that will be activated during POST. This has no effect if external graphics present.

	Reserved 11# Reserved 12# Reserved 13# Reserved 14# - 1280x800 LVDS Color Panel Reserved 15# - 1280x600 LVDS Color Panel Reserved 16#	
IGD – Panel Scaling	Auto Force Scaling Off	Select the LCD Panel Scaling option used by the Internal Graphics Device.
Backlight Control	PWM-Inverted PWM-Normal	Back Light Control Setting
BIA	Auto Disabled Level 1 Level 2 Level 3 Level 4 Level 5	Auto: GMCH Use VBT Default; Level n: Enabled with Selected Aggressiveness Level.
Spread Spectrum clock Chip	Off Hardware Software	Hardware: Spread is controlled by chip. Software: Spread is controlled by BIOS.
IGD – Active LFP	No LVDS eDP Port-A eDP Port-D	Select the Active LFP Configuration.
Panel Color Depth	18 Bit 24 Bit	Select the LFP Panel Color Depth.

PEG Port Configuration

Phoenix SecureCore Technology Setup		
Advanced		
PEG Port Configuration		Item Specific Help
PEG0 – Gen X	[Auto]	Configure PEG0 B0:D1:F0 Speed.
PEG1 – Gen X	[Auto]	
PEG2 – Gen X	[Auto]	
Run-time C7 Allowed	[Disabled]	
Always Enable PEG	[Disabled]	
PEG ASPM	[Auto]	
Program PCIe ASPM later than OpROM	[Disabled]	
De-emphasis Control	[-3.5 dB]	
Swing Control	[Full]	
PEG Sample Calibrate	[Disabled]	
Gen3 Equalization	[Enabled]	
PEG Gen3 Equalization Phase2	[Disabled]	
Gen3 Root Port Preset	[8]	
Gen3 Endpoint Preset	[7]	
Gen3 Endpoint Hint	[2]	
Gen3 Eq Preset Search	[Enabled]	
Always re-search Gen3 Eq Preset	[Disabled]	
Allow PREST# GPIO Usage	[Disabled]	
Preset Search Dwell Time	[1000]	
Timing Start Margin	[15]	
Voltage Start Margin	[20]	
Error Target	[1]	
PEG RxCEM Loopback Mode	[Disabled]	
PEG Gen3 RxCTLE Control	[8]	
Generate BDAT PEG Margin Data	[Disabled]	

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
PEG0 – Gen X	Auto Gen1 Gen2 Gen3	Configure PEG0 B0:D1:F0 Speed.
PEG1 – Gen X	Auto Gen1 Gen2 Gen3	Configure PEG1 B0:D1:F1 Speed.
PEG2 – Gen X	Auto Gen1 Gen2 Gen3	Configure PEG2 B0:D1:F2 Speed.
Run-time C7 Allowed	Enabled Disabled	Enable/Disable the entry to C7 state [Run-time control] . Don't enable this feature until you have all the appropriate Save/Restore Controller/Endpoint state.
Always Enable PEG	Disabled Enabled	Enable PEG.
PEG ASPM	Disabled	PEG ASPM Settings.

	LOS L1 LOS And L1 Auto	
Program PCIe ASPM later than OpROM	Disabled Enabled	Enabled: PCIe ASPM will be programmed after OpROM. Disabled: PCIe ASPM will be programmed before OpROM
De-emphasis Control	-6 dB -3.5 dB	DeEmphasis control for PEG.
Swing Control	Reduced Half Full	Perform PEG Swing Control.
PEG Sample Calibrate	Disabled Enabled Auto	Enable/Disable PEG Sample Calibrate.
Gen3 Equalization	Disabled Enabled	Perform PEG Gen3 Equalization steps.
PEG Gen3 Equalization Phase2	Disabled Enabled	Enable/Disable PEG Gen3 Equalization Phase2.
Gen3 Root Port Preset	1, 2, ..., 8 , ..., 11	Root Port Preset value for Gen3 Equalization.
Gen3 Endpoint Preset	0, 1, ..., 7 , ..., 10	Endpoint Preset value for Gen3 Equalization.
Gen3 Endpoint Hint	0, 1, 2 , ..., 10	Endpoint Hint value for Gen3 Equalization.
Gen3 Eq Preset Search	Disabled Enabled	Perform PEG Gen3 SW Preset Search algorithm.
Always re-search Gen3 Eq Preset	Disabled Enabled	Always re-search PEG Gen3 Preset even it has been done once.
Allow PREST# GPIO Usage	Disabled Enabled	Enable/Disable GPIO-based resets to PEG endpoint(s) during margin search, if needed.
Preset Search Dwell Time	0, ..., 1000 , ..., 65535	PEG Gen3 Preset Search dwell time in [ms].
Timing Start Margin	4, ..., 15 , ..., 255	The starting value [4...255] for the backward margin search.
Voltage Start Margin	4, ..., 20 , ..., 255	The starting value [4...255] for the backward margin search.
Error Target	0, 1, ..., 65535	The margin search error target value [1 ... 65535].
PEG RxCEM Loopback Mode	Disabled Enabled	Enable/Disable PEG RxCEM Loopback Mode.
PEG Gen3 RxCTLE Control	0, ..., 8 , ..., 255	PEG Gen3 RxCTLE for Bundle0(Lane0, Lane1).
Generate BDAT PEG Margin Data	Disabled Enabled	Enable to generate BDAT PCIe margin tables

South Bridge Configuration

Phoenix SecureCore Technology Setup		
Advanced		
South Bridge Configuration		Item Specific Help
SMBUS Device	[Enabled]	Enable/Disable SMBUS Device.
Port 80h Cycles	[LPC Bus]	
PCI Clock Run Logic	[Enabled]	
HPET Support	[Enabled]	
HPET Memory Map BAR	[FED00000]	
Enable CRID	[Disabled]	
DeepSx Mode	[Disabled]	
GP27 Wake From DeepSx	[Enabled]	
State After G3	[State S0]	
▶ SB PCI Express Config		
▶ SB USB Config		
▶ SB Azalia Config		
▶ SB Serial IRQ Config		
▶ SB Security Config		
▶ SB SerialIo Config		
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
SMBUS Device	Disabled Enabled	Enable/Disable SMBUS Device.
Port 80h Cycles	LPC Bus PCI Bus	Control where the Port 80h cycles are sent.
PCI Clock Run Logic	Disabled Enabled	Controls PCIe clock gate power saving feature.
HPET Support	Disabled Enabled	Control the High Precision Event Timer through this setup option. When enabled, the RSDT points to the HPET table and the proper enable bits are set.
HPET Memory Map BAR	FED00000 FED01000 FED02000 FED03000	Select the HPET Memory Map Base Address.
Enable CRID	Disabled Enabled	Enable Compatible Revision ID.
DeepSx Mode	Disabled Enabled only in S5/Battery Enabled only in S4-S5/Battery Enabled in S3-S5/Battery	Configure the DeepSx Mode configuration.
GP27 Wake From DeepSx	Disabled Enabled	Wake From DeepSx by the assertion of GP27 pin.
State After G3	State S5 State S0	Specify what state to switch to when power is re-applied after a power failure (G3 state).

SB PCI Express Config

Phoenix SecureCore Technology Setup	
Advanced	
SB PCI Express Config	Item Specific Help
PCI Express Root Port Clock Gating [Enabled] DMI Link ASPM Control [L0S] DMI Link Extended Synch Control [Disabled] PCI Express port assigned to LAN 3 ▶ PCI Express Port 4 Config ▶ PCI Express Port 5 Config ▶ PCI Express Port 6 Config	Enabled or Disabled PCI Express Root Port Clock Gating.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
PCI Express Root Port Clock Gating	Disabled Enabled	Enabled or Disabled PCI Express Root Port Clock Gating.
DMI Link ASPM Control	Disabled L0S L1 L0S And L1 Auto	The control of Active State Power Management of the DMI Link.
DMI Link Extended Synch Control	Disabled Enabled	The control of Extended Sync on SB side of the DMI Link.
PCI Express port assigned to LAN	3	

PCI Express Root Port x Config (x= 4, 5, 6)

Phoenix SecureCore Technology Setup		
Advanced		Item Specific Help
PCI Express Root Port 4		Control the PCI Express Root Port.
PCI Express Root Port 4	[Enabled]	
PCIe Speed	[Auto]	
ASPM	[Auto]	
L1 Substates	[L1.1 & L1.2]	
HOT PLUG	[Disabled]	
URR	[Disabled]	
FER	[Disabled]	
NFER	[Disabled]	
CER	[Disabled]	
SEFE	[Disabled]	
SENF	[Disabled]	
SECE	[Disabled]	
PME Interrupt	[Disabled]	
PME SCI	[Enabled]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
PCI Express Root Port x Config (x= 4, 5, 6)	Disabled Enabled	Control the PCI Express Root Port.
PCIe Speed	Auto Gen1 Gen2	Select PCIe Speed to Gen1 or Gen2.
ASPM	Disabled L0S L1 L0S And L1 Auto	Control PCIe Active State Power Management settings.
L1 Substates	Disabled L1.1 L1.2 L1.1 & L1.2	PCI Express L1 Substates setting.
HOT PLUG	Disabled Enabled	PCI Express Hot Plug Enabled/Disabled.
URR	Disabled Enabled	PCI Express Unsupported Request Reporting Enabled/Disabled.
FER	Disabled Enabled	PCI Express Device Fatal Error Reporting Enabled/Disabled.
NFER	Disabled	PCI Express Device Non-Fatal Error Reporting

	Enabled	Enabled/Disabled.
CER	Disabled Enabled	PCI Express Device Correctable Error Reporting Enabled/Disabled.
SEFE	Disabled Enabled	Root PCI Express System Error on Fatal Error Enabled/Disabled.
SENFE	Disabled Enabled	Root PCI Express System Error on Non-Fatal Error Enabled/Disabled.
SECE	Disabled Enabled	Root PCI Express System Error on Correctable Error Enabled/Disabled.
PME Interrupt	Disabled Enabled	Root PCI Express PME Interrupt Enabled/Disabled.
PME SCI	Disabled Enabled	PCI Express PME SCI Enabled/Disabled.

SB USB Configuration

Phoenix SecureCore Technology Setup		
Advanced		
SB USB Configuration		Item Specific Help
USB Precondition	Enabled	Precondition work on USB host controller and root ports for faster enumeration.
xHCI Mode	[Smart Auto]	
USB Per-Port Disable Control	[Disabled]	
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit</p>		

Function	Selection	Description
USB Precondition	Disabled Enabled	Precondition work on USB host controller and root ports for faster enumeration.
xHCI Mode	Disabled Enabled Auto (note 1) Smart Auto (note 2)	Mode of operation of xHCI controller.
USB Per-Port Disable Control	Disabled Enabled	Control each of the USB ports (0~13) enable/disable.



“Auto”. This mode uses ACPI protocol to provide an option that enables the xHCI controller to reroute USB ports via the _OSC ACPI method call. Note, this mode switch requires special OS driver support for USB 3.0.



“Smart Auto”. This mode is similar to “Auto”, but it adds the capability to route the ports to xHCI or EHCI according to setting used in previous boots (for non-G3 boot) in the pre-boot environment. This allows the use of USB 3.0 devices prior to OS boot. Note, this mode switch requires special OS driver support for USB 3.0 and USB 3.0 software available in the pre-boot environment.

SB Azalia Configuration

Phoenix SecureCore Technology Setup	
Advanced	
SB Azalia Configuration	Item Specific Help
Azalia Auto Azalia Docking Support Enable [Enabled] Azalia PME Enabled [Disabled]	Control Detection of the Azalia device.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
Azalia	Disabled Auto	Control Detection of the Azalia device.
Azalia Docking Support Enable	Disabled Enabled	Enable/Disable Docking Support for Azalia.
Azalia PME Enabled	Disabled Enabled	Enable/Disable PME for Azalia.

SB Serial IRQ Configuration

Phoenix SecureCore Technology Setup	
Advanced	
SB Serial IRQ Config	Item Specific Help
Enable Serial IRQ [Enabled] Serial IRQ Mode [Continuous] Start frames [4 Frames]	Enable diable the Serial IRQ function in the PCH
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
Enable Serial IRQ	Disabled Enabled	Enable/Disable the serial IRQ function in the PCH.
Serial IRQ Mode	Quiet Continuous	The "Quiet" mode Serial IRQ is active only when needed, In "Continuous" it is active all the time.
Start frames	4 Frames 6 Frames 8 Frames	The number of start frames at the beginning of the serial IRQ.

SB Security Config

Phoenix SecureCore Technology Setup

Advanced

SB Security Config	Item Specific Help
<p>GPIO Lockdown [Disabled]</p> <p>RTC Lock [Enabled]</p> <p>BIOS Lock [Disabled]</p> <p>SMM LOCK [Enabled]</p>	<p>Enable/Disable the PCH GPIO Lockdown feature.</p>

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
GPIO Lockdown	Disabled Enabled	Enable/Disable the PCH GPIO Lockdown feature.
RTC Lock	Disabled Enabled	Enable will lock bytes 38h-3Fh in the lower/upper 128-byte bank of RTC RAM.
BIOS Lock	Disabled Enabled	Enable/Disable the PCH BIOS Lock Enable feature. The whole BIOS region is not writable.
SMM LOCK	Disabled Enabled	Enable/Disable SMM LOCK feature. It will lock the SMRAM and unable load SMM driver any more.

SB Serial IO Config

Phoenix SecureCore Technology Setup		
Advanced		
SB SerialIo Configuration		Item Specific Help
SerialIo MODE	[ACPI Mode]	Use ACPI mode in Win8 environment . PCI mode is only for debugging.
SerialIo DMA	[Enabled]	
SerialIo I2C0	[Enabled]	
SerialIo I2C0 Voltage	[1.80V]	
SerialIo I2C0 Sensor Hub	[Disabled]	
SerialIo I2C0 ST Test Wake Device	[Disabled]	
SerialIo I2C0 Synaptics Precision Touchpad	[Disabled]	
SerialIo I2C0 Synaptics Wake Touchpad	[Disabled]	
SerialIo I2C0 Elantech Wake Touchpad	[Disabled]	
SerialIo I2C0 WITT Devices	[Disabled]	
I2C0 Parameters Override	[Disabled]	
SerialIo I2C1	[Enabled]	
SerialIo I2C1 Voltage	[3.30V]	
SerialIo I2C1 Atmel TouchPanel	[Disabled]	
SerialIo I2C1 Elan TouchPanel	[Disabled]	
SerialIo I2C1 Elan TouchPad	[Disabled]	
SerialIo I2C1 Synaptics TouchPad	[Disabled]	
SerialIo I2C1 NTRIG TouchPanel	[Disabled]	
SerialIo I2C1 EETL TouchPanel	[Disabled]	
SerialIo I2C1 ALPS TouchPaD	[Disabled]	
SerialIo I2C1 Cypress TouchPaD	[Disabled]	
I2C1 Parameters Override	[Disabled]	
SerialIo SPI0	[Enabled]	
SerialIo SPI1	[Enabled]	
SerialIo SDIO	[Enabled]	

F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults
Esc	Exit	↔	Select Menu	Enter	Select ▶ Sub-Menu	F10	Save and Exit

Phoenix SecureCore Technology Setup

Advanced

SB SerialIo Configuration	Item Specific Help
SerialIo DMA [Enabled]	▲ If ACPI mode for SerialIO is chosen , DMA controller must be enabled for proper functionality. ▼
SerialIo I2C0 [Enabled]	
SerialIo I2C0 Voltage [1.8V]	
SerialIo I2C0 Sensor Hub [Disabled]	
SerialIo I2C0 ST Test Wake Device [Disabled]	
SerialIo I2C0 Synaptics Precision Touchpad [Disabled]	
SerialIo I2C0 Synaptics Wake Touchpad [Disabled]	
SerialIo I2C0 Elantech Wake Touchpad [Disabled]	
SerialIo I2C0 WITT Devices [Disabled]	
I2C0 Parameters Override [Disabled]	
SerialIo I2C1 [Enabled]	
SerialIo I2C1 Voltage [3.3V]	
SerialIo I2C1 Atmel TouchPanel [Disabled]	
SerialIo I2C1 Elan TouchPanel [Disabled]	
SerialIo I2C1 Elan TouchPad [Disabled]	
SerialIo I2C1 Synaptics TouchPad [Disabled]	
SerialIo I2C1 NTRIG TouchPanel [Disabled]	
SerialIo I2C1 EETL TouchPanel [Disabled]	
SerialIo I2C1 ALPS TouchPaD [Disabled]	
SerialIo I2C1 Cypress TouchPaD [Disabled]	
I2C1 Parameters Override [Disabled]	
SerialIo SPI0 [Enabled]	
SerialIo SPI1 [Enabled]	
SerialIo SDIO [Enabled]	
SerialIo SDIO Wifi [Disabled]	

F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
SerialIo MODE	ACPI Mode PCI Mode	Use ACPI mode in Win8 environment. PCI mode is only for debugging.
SerialIo DMA	Disabled Enabled	If ACPI mode for SerialIO is chosen, DMA controller must be enable for proper functionality.
SerialIo I2C0	Disabled Enabled	I2C0 host controller.
SerialIo I2C0 Voltage	3.3 V 1.8 V	Use 1.8v for I2C0 devices listed below.
SerialIo I2C0 Sensor Hub	Disabled USB Sensor Hub Intel Kalapana Beach Sensor Hub Intel STM Sensor Hub	Please Select Sensor Hub
SerialIo I2C0 ST test Wake Device	Disabled Enabled	Enables/Disables the Vendor Sensor
SerialIo I2C0 Synaptics Precision Touchpad	Disabled Enabled	Enables/Disables the Synaptics Precision Touchpad
SerialIo I2C0 Synaptics Wake Touchpad	Disabled Enabled	Enables/Disables the Synaptics Wake Touchpad
SerialIo I2C0 Elantech Wake Touchpad	Disabled Enabled	Enables/Disables the Elantech Wake Touchpad

Seriallo I2C0 WITT Devices	Disabled Enabled	Enables/Disables the Vendor Sensor
I2C0 Parameters Override	Disabled Enabled	Override the I2C0 Controller Parameters
Seriallo I2C1	Disabled Enabled	I2C1 host controller.
Seriallo I2C1 Voltage	3.3 V 1.8 V	Use 3.3 V for I2C1 devices listed below
Seriallo I2C1 Atmel TouchPanel	Disabled Enabled	Enables/Disables the Vendor Sensor
Seriallo I2C1 Elan TouchPanel	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 Elan TouchPad	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 Synaptics Precision Touchpad	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 NTRIG TouchPanel	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 EETL TouchPanel	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 ALPS TouchPad	Disabled Enabled	Enables/Disables the Vendor Sensor.
Seriallo I2C1 Cypress TouchPad	Disabled Enabled	Enables/Disables the Vendor Sensor.
I2C1 Parameters Override	Disabled Enabled	Overrides the I2C1 Controller Parameters
Seriallo SPI0	Disabled Enabled	SPIO host controller.
Seriallo SPI1	Disabled Enabled	SPI1 host controller
Seriallo SDIO	Disabled Enabled	SDHC host controller
Seriallo SDIO Wifi	Disabled Enabled	Enables/Disables the Vendor Sensor.

Hardware Health Configuration

Phoenix SecureCore Technology Setup	
Advanced	
Hardware Health Configuration	Item Specific Help
<p>Hardware Health Configuration</p> <p>System Temperature [27°C/ 80°F] CPU Temperature [33.07°C/ 91°F]</p> <p>System Fan Speed [0 RPM] System Temperature Ext Type [Disabled] Fan Cruise Control [Disabled]</p> <p>CPU Fan Speed [0 RPM] Fan Cruise Control [Disabled]</p> <p>Watchdog Function [0]</p>	
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit</p>	



System Temperature readout is the temperature measured by the selected sensor via System Temperature Ext Type. If disabled then the onboard sensor is used.

Function	Selection	Description
System Temperature Ext Type	Disabled (Note 1) LM75 @ 0x90 OneWire @ GPIO16	Use external connected sensor instead of onboard.
Fan Cruise Control (Note 2)	Disabled Thermal Speed	Disabled = Full speed. Thermal: does regulate fan speed according to specified temperature. Speed: does regulate according to specified RPM.
Fan Settings	10 – 90 (note3) 1000 – 10000 (note4)	
Fan Min limit (Note 5)	0 (note6)	Minimum PWM %, can be used to make sure fan is always active. Make sure Min limit < Max limit.
Fan Max limit (Note 5)	100 (note6)	Maximum PWM %, can be used to limit the fan noise. Make sure Min limit < Max limit.

Watchdog Function	0 - 255	(note7)	0 = Disabled. Enter the service interval in seconds before system will reset.
-------------------	---------	---------	--



When not Disabled then the System Temperature readout will only be valid if the sensor is physically connected to the Feature connector.



Two sets of settings (Fan Cruise Control, Fan Settings, Fan Min limit, Fan Max limit), one set for System Fan and one set for CPU Fan. The Fan Cruise Control is by default Disabled for System Fan and by default Thermal for CPU Fan.



°C (if Fan Cruise Control is Thermal) use either digit keys to enter value or +/- keys to increase/decrease value. Don't use mix of digit keys and +/- keys.



RPM (if Fan Cruise Control is Speed) use either digit keys to enter value or +/- keys to increase/decrease value by 100. Don't use mix of digit keys and +/- keys.



Only visible if Fan Cruise Control is Thermal.



Use number keys to enter value.



Seconds, use digit keys to enter value. Value 0 means Watchdog is disabled. Refer to "KT-API-V2 User Manual" to control the Watchdog via API or refer to "KT-API-V2 User Manual DLL" how to control Watchdog via Windows DLL.

SMBIOS Event Log

Phoenix SecureCore Technology Setup		
Advanced		Item Specific Help
SMBIOS Event Log		
Event Log Validity	Valid	Enable/Disable Event Log.
Event Log Capacity	Space Available	
Event Log	[Enabled]	
▶ View SMBIOS event log		
Mark SMBIOS events as read	[Enter]	
Clears SMBIOS events	[Enter]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		



Entering View SMBIOS event log will show log only.

Function	Selection	Description
Event Log	Disabled Enabled	Enable/Disable Event Log.
Mark SMBIOS as read	Enter	Mark SMBIOS events as read. Marked SMBIOS events won't be displayed.
Clears SMBIOS events	Enter	Clears SMBIOS events.

ME Configuration

Phoenix SecureCore Technology Setup		
Advanced		
ME Configuration		Item Specific Help
ME FW Version	10.0.30.1072	Enable/Disable Intel(R) Management Engine.
ME Firmware	Intel(R) ME 1.5MB firmware	
Intel(R) ME	[Enabled]	
ME FW Downgrade	[Disabled]	
ME Debug Event Service	[Disabled]	
MDES for BIOS	[Disabled]	
ME IFR Feature	[Enabled]	
Firmware TPM Feature	[Disabled]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
Intel® ME	Disabled Enabled	Enable/Disable Intel® Management Engine.
ME FW Downgrade	Disabled Enabled	Enable/Disable ME FW Downgrade function.
ME Debug Event Service	Disabled Enabled	Enable/Disable ME Debug Event Service.
MDES for BIOS	Disabled Enabled	Enable/Disable ME Debug Event Service for BIOS events.
ME IFR Feature	Disabled Enabled	Enable/Disable Intel® ME Independent Firmware Recovery.
Firmware TPM Feature	Disabled Enabled	Enables or disables the Firmware TPM present in the ME.

Thermal Configuration

Phoenix SecureCore Technology Setup	
Advanced	
Thermal Configuration	Item Specific Help
<ul style="list-style-type: none"> ▶ CPU Thermal Configuration ▶ Platform Thermal Configuration 	CPU Thermal Configuration Submenu.
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

CPU Thermal Configuration

Phoenix SecureCore Technology Setup		
Advanced		
CPU Thermal Configuration		Item Specific Help
Thermal Monitor	[Enabled]	Enable processor Thermal Monitor thermal control. Requires GV3.
Bi-directional PROCHOT#	[Enabled]	
PROCHOT# OUT	[Disabled]	
PROCHOT Response	[Disabled]	
Disable VR Thermal Alert	[Disabled]	
ACPI 3.0 T-States	[Disabled]	
DTS	[Disabled]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
Thermal Monitor	Disabled Enabled	Enable processor Thermal Monitor thermal control. Requires GV3.
Bi-directional PROCHOT#	Disabled Enabled	When a processor thermal sensor trips (either core), the PROCHOT# is driven. If bi-direction is enabled, external agents can drive PROCHOT# to throttle the processor.
PROCHOT# OUT	Disabled Enabled	If bi-directional PROCHOT# is enabled, PROCHOT# OUT can be disabled selectively.
PROCHOT# Response	Disabled Enabled	Enable/Disable PROCHOT Response.
Disable VR Thermal Alert	Disabled Enabled	Enable/Disable VR Thermal Alert.
ACPI 3.0 T-States	Disabled Enabled	Enable/Disable ACPI 3.0 T-States.
DTS	Disabled Enabled Out of Spec Only	Enable CPU Digital Thermal Sensor function.

Platform Thermal Configuration

Phoenix SecureCore Technology Setup	
Advanced	
Platform Thermal Configuration	Item Specific Help
Automatic Thermal Reporting [Enabled]	Configure _CRT, _PSU, and _ACO automatically based on values recommended in BWG's Thermal Reporting for Thermal Management settings. Set to Disabled for manual configuration.
Critical Trip Point [PDR]	
Active Trip Point Hi Fan [71 C]	
Active Trip Point Lo Fan [55 C]	
Passive Trip Point [95 C]	
Passive TC1 Value [1]	
Passive TC2 Value [5]	
Passive TSP Value [10]	
Pch Thermal Device	
Thermal Sensor Device Enable [Enabled]	
ME SMBus Thermal Reporting [Disabled]	

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Selection	Description
Automatic Thermal Reporting	Disabled Enabled	Configure _CRT, _PSV, and _ACO automatically based on values recommended in BWG's Thermal Reporting for Thermal Management settings. Set to Disabled for manual configuration.
Active Trip Point Lo Fan	Disabled 15, 23, ..., 55 , ...119	This value controls the temperature of the ACPI Active Trip Point – the point where the OS turns the processor fan on low.
Passive TC1 Value	1, 2, ..., 16	This value sets the TC1 value for the ACPI Passive Cooling Formula. Use "+" and "-" keys to change value.
Passive TC2 Value	1, 2, ..., 5 , ...16	This value sets the TC2 value for the ACPI Passive Cooling Formula. Use "+" and "-" keys to change value.
Passive TSP Value	2, 4, ..., 10 , ...32	This value sets the TSP value for the ACPI Passive Cooling Formula. It represents in tenths of a second how often the OS reads the temperature when passive cooling is enabled. Use "+" and "-" keys to change value.
Thermal Sensor Device Enable	Disabled Enabled	Enable Thermal Sensor Device.
ME SMBus Thermal Reporting	Disabled Enabled	Enable/Disable ME SMBus Thermal Reporting Configuration.

ICC Configuration

Phoenix SecureCore Technology Setup	
Advanced	
ICC Configuration	Item Specific Help
ICC Profile [0] Use Watchdog Timer for ICC [Disabled] Clock Manipulation [ICC Failure] ICC Overclocking Library [9.0.0.1209] ▶ Clock 2	ICC Profile Selection
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
ICC Profile	0	ICC profile Selection
Use Watchdog Timer for ICC	Disabled Enabled	Enable Watchdog Timer operation for ICC. If enabled, Watchdog Timer will be started after ICC related changes. This timer detects platform instability caused by wrong clock settings.
Clock Manipulation	ICC Success ICC Failure	Status of the clock configuration.
Apply ICC settings after reboot	None Permanently after reboot	None: Change will not apply. Permanently: Changes will be applied permanently, starting after the next reboot. Use it to provide changes that are verified and safe.

Clock 2

Phoenix SecureCore Technology Setup	
Advanced	
Clock 2	Item Specific Help
<p>BCLK, DMI, PEG, PCIe PCI33, SATA, USB3</p> <p>Current frequency [100.0 MHz] Current SSC mode [down] Maximum supported SSC % [0.50] Current SSC % [0.50] New SSC spread percent [0.01%] 50</p>	<p>Clock spectrum spread in 0.01% increments. Determines spectrum deviation away from base frequency. Allowed range is limited by Max supported SSC%. Changes will not be applied unless 'Apply settings' is pressed.</p>
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit</p>	

Function	Selection	Description
New SSC spread percent [0.01 %]	0, 1, ..., 50	Clock spectrum spread in 0.01 % increments. Determines spectrum deviation away from base frequency. Allowed range is limited by Max supported SSC %. Changes will not be applied unless 'Apply settings' is pressed.

Intel® Smart Connect Technology

Phoenix SecureCore Technology Setup	
Advanced	
Intel(R) Smart Connect Technology	Item Specific Help
ISCT Configured Disabled	Enable ISCT
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Selection	Description
ISCT Configured	Disabled Enabled	Enable ISCT

10.3. Security

Phoenix SecureCore Technology Setup		
Main	Advanced	Security
Secure Boot Activation		[Disabled]
▶ Secure Boot Configuration		
Supervisor Password is:	Set	
User Password is:	Cleared	
Set Supervisor Password	[Enter]	
Supervisor Hint String	[]	
Set User Password	[Enter]	
User Hint String	[]	
Min. password length	[1]	
Authenticate User on Boot	[Disabled]	
HDD Password Select	[User Only]	
HDD Security Status		
HDD01 Password State	Frozen	
Trusted Platform Module (TPM)		
TPM Support	[Enabled]	
▶ TPM Configuration		

Item Specific Help

Set or clear the Supervisor account's password.

F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults
Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit



“Secure Boot Configuration” and “TPM Configuration” see next pages.

Function	Selection	Description
Secure Boot Activation (Note1)	Disabled Enabled	Enable this option and the secure boot feature is activated. When the menu item is enabled, it cannot be set to disabled.
Set Supervisor Password	(up to 20 characters)	Set or clear the Supervisor account's password.
Supervisor Hint String	(up to 20 characters)	Press Enter to type Supervisor Hint String.
Set User Password (Note1)	(up to 20 characters)	Set or clear the User account's password.
User Hint String (Note1)	(up to 20 characters)	Press Enter to type User Hint String.
Min. password length	1, 2, ..., 20	Set the minimum number of characters for password (1-20).
Authenticate User on Boot (Note1)	Disabled Enabled	Enable/Disable User Authenticate Prompt on Boot.

HDD Password Select	User+Master User Only	Supports user only or both user and master password.
Set HDD01 User Password	Enter	Set HDD01 User Password.
TPM Support	Disabled Enabled	This is used to decide whether TPM support should be enabled or disabled.



Only selectable if "Supervisor Password" is set.

Secure Boot Configuration

Phoenix SecureCore Technology Setup		
Security		
Secure Boot Configuration		Item Specific Help
UEFI Secure Boot	Disabled	Enable or disable secure boot function.
Protected Signatures	Disabled (Setup Mode)	
Customized Signatures	Disabled (Standard Mode)	
CertNames	Win8 Certificates	
Secure Boot Option	Enabled	
Reset to Default	[Enter]	
Change to Customization	[Enter]	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
Secure Boot Option	Disabled Enabled	Enable or disable secure boot function.
Reset to Defaults	Enter	Reset secure boot variables to manufacturing defaults.
Change to Customization	Enter	PK will be deleted, the platform will be changed to setup mode, and secure boot is disabled automatically.

TPM Configuration

Phoenix SecureCore Technology Setup		
Security		
TPM Configuration	Item Specific Help	
Current TPM State [Enabled and Activated] TPM Action No Change Omit Boot Measurements [Disabled]	Enact TPM Action. Note: Most TPM actions require TPM to be Enabled to take effect.	
F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit		

Function	Selection	Description
TPM Action	No Change Enable Disable Activate Deactivate Clear Enable and Activate Disable and Deactivate Set Owner Install, with State=True Set Owner Install, with State=False Enable, Activate, and Set Owner Install, with State=True Disable, Deactivate, and Set Owner Install, with State=False Clear, Enable, and Activate Require PP for provisioning Do not require PP for provisioning Require PP for clear Do not require PP for clear Enable, Activate, and Clear Enable, Activate, Clear, Enable, and Activate	Enact TPM Action. Note: Most TPM actions require TPM to be Enabled to take effect.
TPM Support	Disabled Enabled	Enabling this option causes the system to omit recording boot device attempts in PCR[4].

10.4. Boot

Phoenix SecureCore Technology Setup					
Main	Advanced	Security	Boot	Exit	
<p>Boot Priority Order</p> <ol style="list-style-type: none"> 1. USB HDD: 2. USB CD: 3. USB FDD: 4. ATAPI CD: 5. ATA HDD0: 6. ATA HDD1: UGB94BPH64H0S1-KCI 7. ATA HDD2: 8. ATA HDD3: 9. ATA HDD4: 10. ATA HDD5: 11. Other HDD: 12. Nume: 13. PCI LAN: 14. Internal Shell 					<p>Item Specific Help</p> <p>Keys used to view or configure devices: ↑ and ↓ arrows Select a device. '+' and '-' move the device up or down. 'Shift + 1' enables or disables a device. 'Del' deletes an unprotected device.</p> <p>DEL SHIFT + 1</p>
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit</p>					


10.5. Misc

Phoenix SecureCore Technology Setup							
Main	Advanced	Security	Boot	Misc	Exit		
<ul style="list-style-type: none"> ▶ Intel® Ethernet Connection I218-LM – 00:E0:F4:2D:34:02 Intel® I211 Gigabit Network Connection - 00:E0:F4:2D:34:03 						Item Specific Help	
						Go to external device page.	
F1	Help	↑↓	Select Item	+/-	Change Values	F9	Setup Defaults
Esc	Exit	←→	Select Menu	Enter	Select ▶ Sub-Menu	F10	Save and Exit



This menu contains dynamic driver settings and possibly other settings.
Don't change these settings.
 This menu might be removed in future BIOS versions.

10.6. Exit

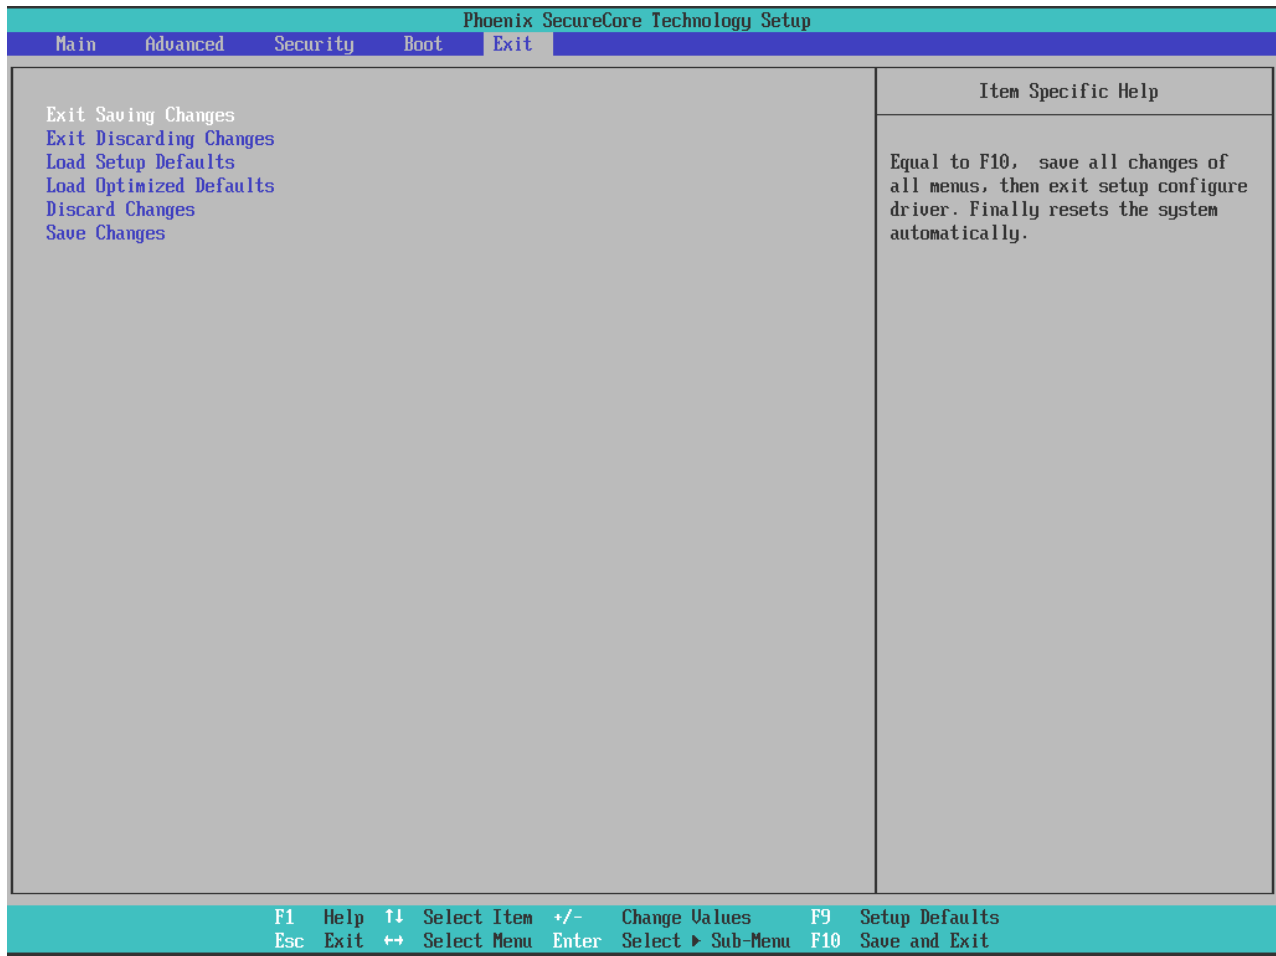

Function	Description	Function
Exit Saving Changes	Equal to F10, save all changes of all menus, then exit setup configure driver. Finally resets the system automatically.	Exit Saving Changes
Exit Discarding Changes	Equal to ESC, never save changes, then exit setup configure driver.	Exit Discarding Changes
Load Setup Defaults	Equal to F9. Load standard defaults values.	Load Setup Defaults
Load Optimized Defaults	Load settings for optimized boot time and system performance.	Load Optimized Defaults
Discard Changes	Load the original value of this boot time. Not the default Setup value.	Discard Changes
Save Changes	Save all changes of all menus, but do not reset system.	Save Changes

About Kontron

Kontron, a global leader in embedded computing technology and trusted advisor in IoT, works closely with its customers, allowing them to focus on their core competencies by offering a complete and integrated portfolio of hardware, software and services designed to help them make the most of their applications.

With a significant percentage of employees in research and development, Kontron creates many of the standards that drive the world's embedded computing platforms; bringing to life numerous technologies and applications that touch millions of lives. The result is an accelerated time-to-market, reduced total-cost-of-ownership, product longevity and the best possible overall application with leading-edge, highest reliability embedded technology

Kontron is a listed company. Its shares are traded in the Prime Standard segment of the Frankfurt Stock Exchange and on other exchanges under the symbol "KBC". For more information, please visit: <http://www.kontron.com/>



CORPORATE OFFICES

EUROPE, MIDDLE EAST & AFRICA

Lise-Meitner-Str. 3-5
86156 Augsburg
Germany
Tel.: + 49 821 4086-0
Fax: + 49 821 4086-111
info@kontron.com

NORTH AMERICA

14118 Stowe Drive
Poway, CA 92064-7147
USA
Tel.: + 1 888 294 4558
Fax: + 1 858 677 0898
info@us.kontron.com

ASIA PACIFIC

1~2F, 10 Building, No. 8 Liangshuihe 2nd Street,
Economical & Technological Development Zone,
Beijing, 100176, P.R. China
Tel.: + 86 10 63751188
Fax: + 86 10 83682438
info@kontron.cn

